Starter boxes and level control equipment

General

When a start and stop level is required, a starter box for level control can prolong the life of the pump. Sulzer provides standard DOL and Star-Delta starter boxes with a built in float switch for J/JC/JS series.

00830423 - JP10-WKS

Starter box 1-phase 10 A with float switch Contactor 230 V. 50 Hz. Transformer 24 V Cable: 2 x 1 m, 4 x 1.5 mm² CEE Euro plug female, CEE Euro plug male Start switch ON/OFF/AUTO Enclosure IP55 Casing in polymer (125 x 175 x 150) Option: Overload relay (specify nominal current).

00830257 - JP16-DKS

Starter box 16 A with float switch Contactor 400 V, 50 Hz, Transformer 24 V Cable: 2 x 1 m, 5 x 2.5 mm² CEE 416-6 plug female CEE 416-6 plug male Start switch ON/OFF/AUTO Enclosure IP55 Casing in polymer (125 x 175 x 150) Option: Overload relay (specify nominal current).

00830258 - JP25-DKS

Starter box 25 A with float switch Contactor 400 V, 50 Hz, Transformer 24 V Cable: 2 x 1 m, 5 x 4 mm² CEE 432-6 plug female CEE 432-6 plug male Start switch ON/OFF/AUTO Enclosure IP55 Casing in polymer (175 x 250 x 150) Option: Overload relay (specify nominal current).

00830887 - JP40-DKS

Starter box 40 A with float switch Contactor 400 V. 50 Hz. Transformer 24 V Cable: 2 x 1 m, 4 x 10 mm² CEE 463-6 plug female CEE 463-6 plug male Start switch ON/OFF/AUTO Enclosure IP55 Casing in polymer (300 x 300 x 180) Option: Overload relay (specify nominal current).

00832046 - JP63-DKS

Starter box 63 A with float switch Contactor 400 V, 50 Hz, Transformer 24 V Cable: 2 x 1 m, 4 x 16 mm² CEE 463-6 plug female CEE 463-6 plug male Start switch ON/OFF/AUTO Enclosure IP55 Casing in polymer (300 x 300 x 180) Option: Overload relay (specify nominal current).

Star-Delta starter 6 kW. 400 V. 50 Hz Overload relay with reset button, Transformer 24 V Terminal block for motorcable and control cable

Cable gland for pump cable 10 x 2.5 mm² CEE 432-6 plug male for connection to main power supply

Indication lamps: - for pump running

- for trigged -overload relay
- for trigged -thermal contacts

Start switch ON/OFF/AUTO

Enclosure IP55 Casing in polymer with door (300 x 300 x 180)

Handle

Option: level control with float switch 20 m (always specify quantity of float switches)

00830260 - JP84SD

Star-Delta starter 9 kW, 400 V, 50 Hz Overload relay with reset button. Transformer 24 V Terminal block for motorcable and control cable Cable gland for pump cable 10 x 2.5 mm²

CEE 432-6 plug male for connection to main power supply Indication lamps:

- for pump running

- for trigged -overload relay

- for trigged -thermal contacts

Start switch ON/OFF/AUTO Enclosure IP55

Casing in polymer with door (300 x 300 x 180)

Handle

Option: level control with float switch 20m (always specify quantity of float switches)



00830796 - CB-63

Circuit breaker 63 A

Start switch ON/OFF

Cable gland for 4 x 10 mm²













00830261 JP205D

Starter box DOL 21 kW, Contactor 400 V, 50 Hz Overload relay with reset button, Transformer 24 V Supplement relay, Seal probe relay, Terminal block for control cable Cable glands for: 1 x pump cable 4 x 10 mm² 1 x control cable 4 x 1.5 mm²

CEE plug 63 A male for connection to main power supply

- Indication lamps: for pump running
 - for trigged -overload relay
 - for trigged -thermal contacts
 - for indication seal probe

Start switch ON/OFF/AUTO

Casing with door (330 x 430 x 200), Enclosure IP55, Glass fibre reinforced, Pedestal with feet & handle

Option: Level control with float switch 20 m (always specify quantity of float switches). Plug in connection with security solution with plugs for both starter box, pump and additional equipment in box.

00830262 JP205SD

Star-Delta starter 21 kW, 400 V, 50 Hz

Overload relay with reset button, Transformer 24 V

Supplement relay, Seal probe relay, Terminal block for control cable

Cable glands for: 2 x pump cable 4 x 6 mm²

1 x control cable 4 x 1.5 mm²

CEE plug 63 A male for connection to main power supply

- Indication lamps: for pump running
 - for trigged -overload relay
 - for trigged -thermal contacts
 - for indication seal probe

Start switch ON/OFF/AUTO

Casing with door (330 \times 430 \times 200), Enclosure IP55, Glass fibre reinforced, Pedestal with feet & handle

Option: Level control with float switch 20 m (always specify quantity of float switches). Plug in connection with security solution with plugs for both starter box, pump and additional equipment in box.

00831009 JP405D

Starter box 35 kW, 400 V, 50 Hz

Overload relay with reset button, Transformer 24 V

Supplement relay, Seal probe relay, Terminal block for control cable

Cable glands for: 1 x pump cable 4 x 25 mm²

1 x control cable 4 x 1.5 mm²

CEE plug 125 A male for connection to main power supply

- Indication lamps: for pump running
 - for trigged -overload relay
 - for trigged -thermal contacts
 - for indication seal probe

Start switch ON/OFF/AUTO

Casing with door: (435 x 645 x 250), Enclosure IP55, Glass fibre reinforced, Pedestal with feet & handle

Option: Level control with float switch 20 m (always specify quantity of float switches). Plug in connection with security solution with plugs for both starter box, pump and additional equipment in box.

00830263 JP405SD

Star-Delta starter 35 kW, 400 V, 50 Hz Overload relay with reset button, Transformer 24 V Supplement relay, Seal probe relay, Terminal block for control cable Cable glands for: 2 x pump cable 4 x 10 mm² 1 x control cable 4 x 1.5 mm² CEE plug 125 A male for connection to main power supply Indication lamps: - for pump running

- for trigged -overload relay
- for trigged -thermal contacts
- for indication seal probe

Start switch ON/OFF/AUTO

Casing with door: (435 x 645 x 250), Enclosure IP55, Glass fibre reinforced, Pedestal with feet & handle

Option: Level control with float switch 20 m (always specify quantity of float switches). Plug in connection with security solution with plugs for both starter box, pump and additional equipment in box.

00831871 JP604D

Starter box 56 kW, Contactor 400 V, 50 Hz

Overload relay with reset button, Transformer 24 V

2 x Supplement relay, 2 x Seal probe relay, Terminal block for control cable

Cable glands for: 1 x pump cable 4 x 35 mm²

1 x control cable 7 x 1.5 mm²

CEE plug 125 A male for connection to main power supply

- Indication lamps: for pump running
 - for trigged -overload rela
 - for trigged -thermal contacts
 - for indication seal probe oil casing/terminal box
 - for indication bearing sensor

Start switch ON/OFF/AUTO

Casing with door: (435 x 645 x 250), Enclosure IP55, Glass fibre reinforced, Pedestal with feet & handle

Option: Level control with float switch 20 m (always specify quantity of float switches). Plug in connection with security solution with plugs for both starter box, pump and additional equipment in box.

00830264 JP604SD

Star-Delta starter 56 kW, 400 V, 50 Hz

Overload relay with reset button, Transformer 24 V

 $2 \ \mathrm{x}$ Supplement relay, 2 x Seal probe relay, Terminal block for control cable

Cable glands for:

Indication lamps:

 $2 \times pump$ cable $4 \times 16 \text{ mm}^2$ 1 x control cable $7 \times 1.5 \text{ mm}^2$

CEE plug 125 A male for connection to main power supply

- for pump running
- for trigged -overload relay
- for trigged -thermal contacts
- for indication seal probe oil casing/terminal box
- for indication bearing sensor

Start switch ON/OFF/AUTO

Casing with door: (435 x 645 x 250), Enclosure IP55, Glass fibre reinforced, Pedestal with feet & handle

Option: Level control with float switch 20 m (always specify quantity of float switches). Plug in connection with security solution with plugs for both starter box, pump and additional equipment in box.

www.sulzer.com

Starter boxes and level control units en (10.2016), Copyright © Sulzer Ltd 2016

This document does not provide a warranty or guarantee of any kind. Please contact us for a description of the warranties and guarantees offered with our products. Directions for use and safety will be given separately. All information herein is subject to change without notice.