

Submersible Grinder Pump Type ABS Piranha S10 - PE125

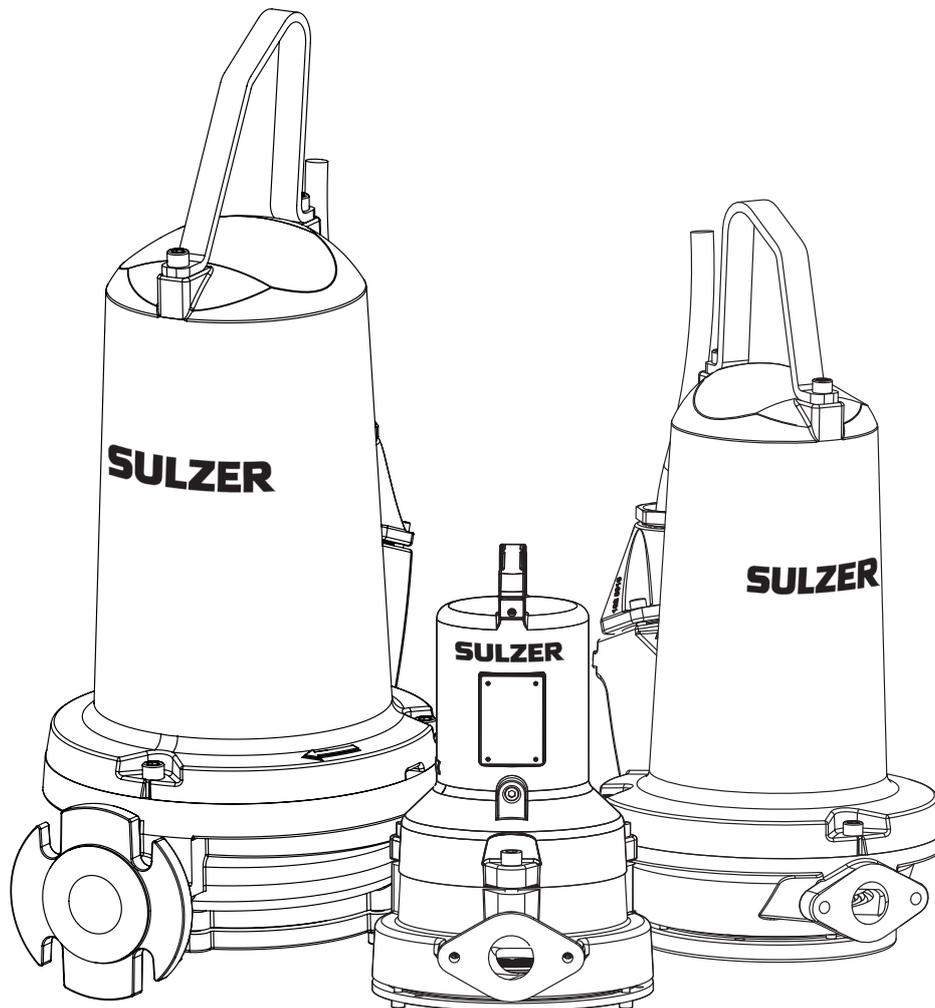

Installation, Operating and Maintenance Instructions (Original Instructions)

Submersible Grinder Pump Type ABS Piranha

50 Hz:

Ex ⁽¹⁾ & Non-Ex	Ex ⁽¹⁾	Non-Ex
S10/4W-50	PE30/2C-50	S21/2 HH-50
S12/2-50	PE 55/2E-50	
S12/2W-50	PE70/2E-50	
S13/4-50	PE90/2E-50	
S17/2-50	PE110/2E-50	
S17/2W-50		
S21/2-50		
S26/2-50		

60 Hz:

Ex ⁽²⁾ & Non-Ex ⁽³⁾	Ex ⁽²⁾ & Non-Ex ⁽³⁾	Ex ⁽²⁾ & Non-Ex ⁽³⁾	Non-Ex ⁽³⁾
S10/4-60	PE25/2W-C-60	PE80/2-E-60	S26/2W HH-60
S10/4W-60	PE28/2-C-60	PE100/2-E-60	
S20/2-60	PE35/2-C-60	PE110/2-E-60	
S20/2W-60	PE35/2W-C-60	PE125/2-E-60	
S26/2W-60	PE45/2-C-60		
S30/2-60	PE45/2W-C-60		

Approvals:

⁽¹⁾ ATEX. ⁽²⁾ FM. ⁽³⁾ CSA.

Contents

1	General	4
1.1	Intended use and application	4
1.2	Identification code	4
2	Performance range	4
3	Safety	4
3.1	Personal protective equipment.....	5
4	Use of motors in Ex zones	5
4.1	Explosion-proof approval	5
4.2	General information.....	5
4.3	Special conditions for safe use of S-type, explosion-proof motors.	5
4.4	Operation of explosion-proof submersible pumps with frequency inverter (Piranha-PE only) in hazardous areas (ATEX Zone 1 and 2).....	5
4.5	Operation of explosion-proof submersible pumps in wet-well installation	5
5	Technical data	6
5.1	Nameplate.....	6
6	General design features	7
6.1	Design features Piranha-S	8
6.2	Design features Piranha-S HH.....	9
6.3	Design features Piranha-PE.....	10
7	Weights	11
7.1	Piranha.....	11
7.2	Chain (EN 818)*	11
8	Lifting, transport and storage	12
8.1	Lifting.....	12
8.2	Transport.....	12
8.3	Storage.....	12
8.3.1	Moisture protection of motor connection cable	12
9	Set-up and installation	13
9.1	Equipotential bonding.....	13

Sulzer reserves the right to alter specifications due to technical developments !

9.2	Discharge line	13
9.3	Installation types	14
9.3.1	Wet well installation.....	14
9.3.2	Dry-installed (horizontal)	15
9.3.3	Transportable	15
9.3.4	Venting of the volute.....	15
10	Electrical connection	16
10.1	Operation with frequency inverters (Piranha-PE only)	17
10.2	Seal monitoring	18
10.3	Temperature monitoring	19
10.3.1	Temperature sensor bimetal.....	19
10.4	Wiring diagrams	19
11	Commissioning	20
11.1	Types of operation and frequency of starting	20
11.2	Checking direction of rotation.....	21
11.3	Changing direction of rotation	21
12	Maintenance and service.....	21
12.1	General maintenance hints	22
12.2	Shredding system	22
12.3	Oil filling and changing	22
12.3.1	Instructions on how to drain and fill the seal chamber	22
12.4	Oil-fill quantities (liters).....	23
12.5	Bottom plate adjustment	23
12.5.1	Re-setting the clearance gap following wear	23
12.6	Bearings and mechanical seals	24
12.7	Changing the power cable	24
12.8	Clearing pump blockage	24
12.8.1	Instructions for operator	24
12.8.2	Instructions for service personnel	24
12.9	Cleaning	25
13	Troubleshooting guide	25

Symbols and notices used in this booklet:



Presence of dangerous voltage.



Non-compliance may result in personal injury.



Hot surface - danger of burn injury.



Danger of an explosion occurring.

ATTENTION! Non-observance may result in damage to the unit or negatively affect its performance.

NOTE: Important information for particular attention.

1 General

1.1 Intended use and application

Piranha submersible grinder pumps have been designed for the pumping of sewage containing faecal matter from buildings and sites where the location is below the sewer level.

In addition, Piranha pumps are ideal for effective and economical pressurised dewatering using pipes of small cross-sectional area, in private, municipal, and industrial applications.

ATTENTION! *The maximum allowable temperature of the medium is 40 °C / 104 °F .*

NOTE: *Leakage of lubricants could result in pollution of the medium.*

Piranha pumps must not be used in certain applications e.g. pumping of flammable, combustible, chemical, corrosive, or explosive liquids.

ATTENTION! *Always consult with your local Sulzer representative for advice on approved use and application before installing the unit.*

1.2 Identification code

e.g. Piranha PE 30/2D-E Ex

PEModular motor version

DNumber of phases (D = 3~, W = 1~)

30 Motor power P_2 kW x 10


EVolute opening (dia. mm): C = 222 / 9, E = 265 / 10

2 Number of poles


Ex.....Explosive-proof

2 Performance range

50 Hz

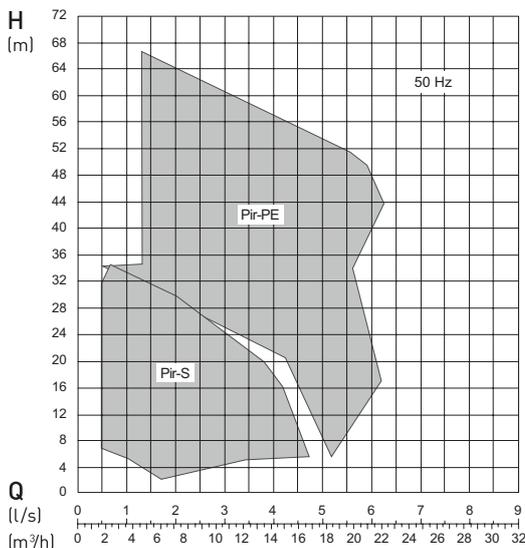

60 Hz

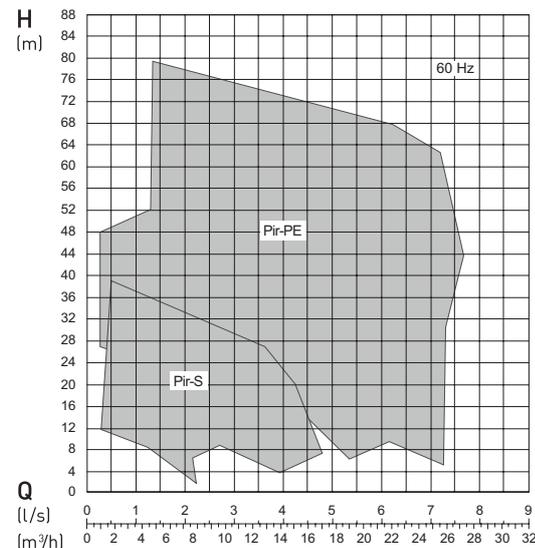

3 Safety

The general and specific health and safety requirements are described in detail in the “**Safety Instructions for Sulzer Products Type ABS**” booklet. If anything is not clear or you have any questions as to safety make certain to contact the manufacturer Sulzer.

This unit can be used by children aged 8 years and above, and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, when they have been given supervision or instruction concerning the safe use of the device and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance should not be performed by children without supervision.



Under no circumstances place a hand inside the suction or discharge openings unless the unit is completely isolated from the power supply.

3.1 Personal protective equipment

Submersible electrical units can present mechanical, electrical, and biological hazards to personnel during installation, operation, and service. It is obligatory that appropriate personal protective equipment (PPE) is used. The minimum requirement is the wearing of safety glasses, footwear, and gloves. However, an on-site risk assessment should always be carried out to determine if additional equipment is required e.g. safety harness, breathing equipment etc.

4 Use of motors in Ex zones

4.1 Explosion-proof approval

Explosion-proof motors of the Piranha series have certification in accordance with Factory Mutual (FM) Class 1 Div. 1 Groups C and D (60 Hz, US), and ATEX 2014/34/EU [Ex II 2G Ex h db IIB T4 Gb] (50 Hz).

NOTE! *Ex protection methods type “c” (constructional safety) and type “k” (liquid immersion) in accordance with EN ISO 80079-36, EN ISO 80079-37 are used.*

4.2 General information



In hazardous areas care must be taken that during switching on and operation of the units, the hydraulic section is filled with water (dry installation) or alternatively is submerged (wet installation). Other types of operation e.g. snore operation or dry running are not allowed!

1. Explosion-proof submersible pumps may only be operated with the thermal sensing system connected.
2. Temperature monitoring of explosion-proof submersible pumps has to be carried out by bi-metallic temperature limiters or thermistors according to DIN 44082 connected to a suitable release device which is certified in accordance with EC directive 2014/34/EU and FM 3610.
3. Float switches, and any external seal monitoring (DI leakage sensor), must be connected via an intrinsically safe electrical circuit, Protection Type EX (i), in accordance with IEC 60079-11 and FM 3610.
4. In the event that the pump is to be operated in explosive atmospheres using a variable speed drive, please contact your local Sulzer representative for technical advice regarding the various approvals and standards concerning thermal overload protection.

ATTENTION! *Repair work on explosion-proof motors may only be carried out in authorized workshops by qualified personnel using original parts supplied by the manufacturer. Otherwise the Ex approvals are no longer valid. All Ex-relevant components and dimensions can be found in the workshop manual and the spare parts list.*

NOTE: *All regulations and guidelines, which may vary from country to country, must be followed without exception.*

4.3 Special conditions for safe use of S-type, explosion-proof motors.

1. The integral supply cable shall be suitably protected from mechanical damage and terminated within an appropriate termination facility.
2. Pump motors rated for use with 50/60 Hz sinusoidal supplies shall have the thermal protection devices connected in such a way that the machine is isolated from the supply in the event of the stator reaching 130 °C / 266 °F.
3. These motor units are not intended for user service or repair, any operation that may affect the explosion protection characteristics should be referred to the manufacturer. Repairs on flameproof joints may only be performed in accordance with the manufacturer's design specifications. Repair on the basis of the values in tables 2 and 3 of EN 60079-1 or annexes B and D of FM 3615 is not permitted.

4.4 Operation of explosion-proof submersible pumps with frequency inverter (Piranha-PE only) in hazardous areas (ATEX Zone 1 and 2)

Machines designated as Ex machines may never, without exception, be operated using a mains frequency that is greater than the maximum of 50 Hz or 60 Hz as indicated on the nameplate.

4.5 Operation of explosion-proof submersible pumps in wet-well installation

It must be ensured that the hydraulic of the Ex submersible pump is always fully submerged during start-up and operation!

5 Technical data

Detailed technical information is available in the technical data sheet Submersible Grinder Pump Type ABS Piranha which can be downloaded from www.sulzer.com.

Maximum noise level ≤ 70 dB. In some types of installations it is possible that during pump operation the noise level of 70 dB(A) or the measured noise level may be exceeded.

5.1 Nameplate

We recommend that you record the data from the nameplate on the pump in the corresponding form below, and maintain it as a source of reference for the ordering of spare parts, repeat orders and general queries. Always state the pump type, item no. and serial no. in all communications.

ATTENTION! *ATEX- and FM-rated Piranha pumps are approved for use in hazardous locations. If an Ex-rated pump is serviced or repaired in a workshop that is not Ex-approved then it must no longer be used in hazardous locations. In that case the Ex nameplate must be removed and replaced by the standard nameplate, or where instead a standard and a secondary Ex nameplate is fitted to the pump the secondary nameplate must be removed.*

Standard nameplate

SULZER		CE	xx/xxxx	IP 68
Typ	Nr			Sn
				#####
UN	V	IN	A	Ph Hz
P1:	kW	Cos ϕ		n 1/min
P2:	kW	Insul. Cl.		Max.Liq.Temp: 40°C
Qmax	m ³ /h	Hmax	m	∇ Max m
DN		Hmin	m	\emptyset Imp mm
Sulzer Pump Solutions Ireland Ltd. Wexford, Ireland. www.sulzer.com				

Piranha-S

SULZER		CE	xx/xxxx	IP 68
Typ	Nr			Sn
UN	V	IN	A	Ph Hz
P1:	kW	Cos ϕ		n 1/min
P2:	kW			Weight kg
	IEC60034.30 IE3			Max.Liq.Temp: 40°C
Qmax	m ³ /h	Hmax	m	∇ Max m
DN		Hmin	m	\emptyset Imp mm
Sulzer Pump Solutions Ireland Ltd. Wexford, Ireland. www.sulzer.com				
Made in Ireland				

Piranha-PE

ATEX nameplate

SULZER		CE	0598	xx/xxxx	IP68
Baseefa 03ATEX07..X		Ex II 2G Ex h db IIB T4 Gb			
Typ	Nr			Sn	Insul.Cl.H
UN		IN	Cos ϕ	Ph	Hz
P1:		P2:		n	
Qmax		Hmax			
DN		Hmin		\emptyset Imp	
	Connection information for the temperature controller is in the installation instructions. Do not open while energised.		Anschlussanweisung für die Temperaturwächter in der Montage- u. Betriebsanleitung beachten. Nicht unter Spannung öffnen.		
Sulzer Pump Solutions Ireland Ltd. Wexford, Ireland. www.sulzer.com					
Made in Ireland					

Piranha-S

CE	0598	
II 2G Ex h db IIB T4 Gb PTB 10 ATEX 1062 X		
Do not open while energized Nicht unter Spannung öffnen		
		4224 5026

Piranha-PE

Legend

Typ	Pump type	
Nr	Item number	
Sn	Serial number	
xx/xxxx	Production date (week/year)	
UN	Rated voltage	V
IN	Rated current	A
Ph	Number of phases	
Hz	Frequency	Hz
P1	Rated input power	kW
P2	Rated output power	kW
#####	Order number	

Cos ϕ	Power factor	pf
n	Speed	r/min
Weight		kg
Max.Liq.Temp	Maximum liquid temperature	40 °C
Qmax	Maximum flow	m ³ /h
DN	Discharge diameter	mm
Hmax	Maximum head	m
Hmin	Minimum head	mm
∇ Max.	Maximum submergence depth	m
\emptyset Imp.	Impeller diameter	mm
Insul. Cl.	Insulation Class	

FM nameplate

SULZER			IP68
APPROVED		000000	
Explosion Proof CL.1 DIV.1 GR.C+D		XX/XXXX	
SUBMERSIBLE WASTEWATER PUMP MOTOR			
Model:			Sn
Volts:	P2:	F.L. Amps	
Hz	Ph	RPM:	Insul.Cl.F
AMB. TEMP.40 °C		OPER. TEMP. T3C	
		▽ Max	
NEMA Code: A			
Pump:			Imp. Dia:
Flow Max:			Hmax
DO NOT REMOVE COVER WHILE CIRCUIT IS ALIVE			
Sulzer Pump Solutions Ireland Ltd.			
Wexford, Ireland.			
Made in Ireland	www.sulzer.com		

CSA nameplate

SULZER			IP68
		LR51412	000000
		XX/XXXX	
Model:			
Nr.			Sn
Volts:			F.L. Amps:
Hz	Phase	RPM:	P2:
Max. Amb. Temp.40 °C		Insul.Cl.F	
		NEMA Code: A	
Imp. Dia:		▽ Max	
Flow Max:		Hmax	
Use with approved motor control that matches motor input full load amps.			
Utiliser un démarreur approuvé covenant au courant a pleine charge du moteur.			
Sulzer Pump Solutions Ireland Ltd.			
Wexford, Ireland.			
Made in Ireland	www.sulzer.com		

Piranha-S and Piranha-PE

Piranha-S and Piranha-PE

Legend


Model	Pump type/ Item number	
Sn	Serial number	
Volts	Rated voltage	V
P2	Rated output power	HP
F.L.Amps	Full load amps	A
Hz	Frequency	Hz
Ph	Three/single phase	

RPM	Speed	rpm
Imp. dia	Impeller diameter	mm
Max. ▽	Max submersible depth	ft
Insul. Cl.	Insulation class	
NEMA Code		
Flow Max.	Maximum flow	gpm
Hmax	Maximum head	ft


6 General design features

Submersible grinder pump fitted with a shredding system hydraulic.

The shredding system is located before the impeller and consists of a shredding rotor (A) in combination with a stationary cutting ring (B) fixed to a spiral bottom plate.

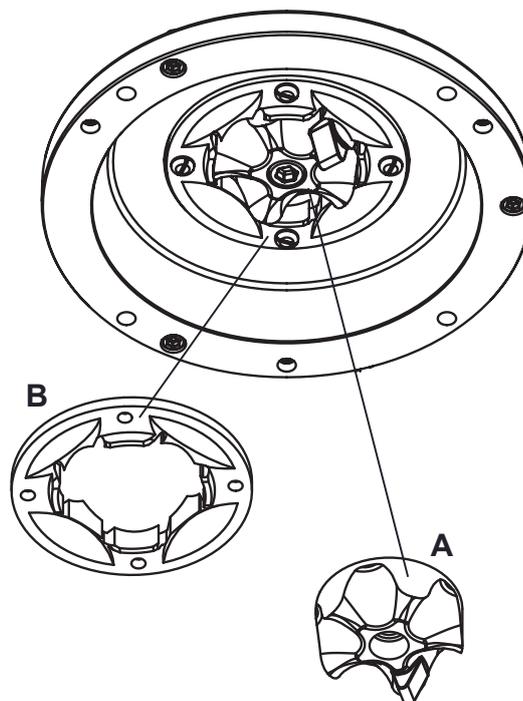


6.1 Design features Piranha-S

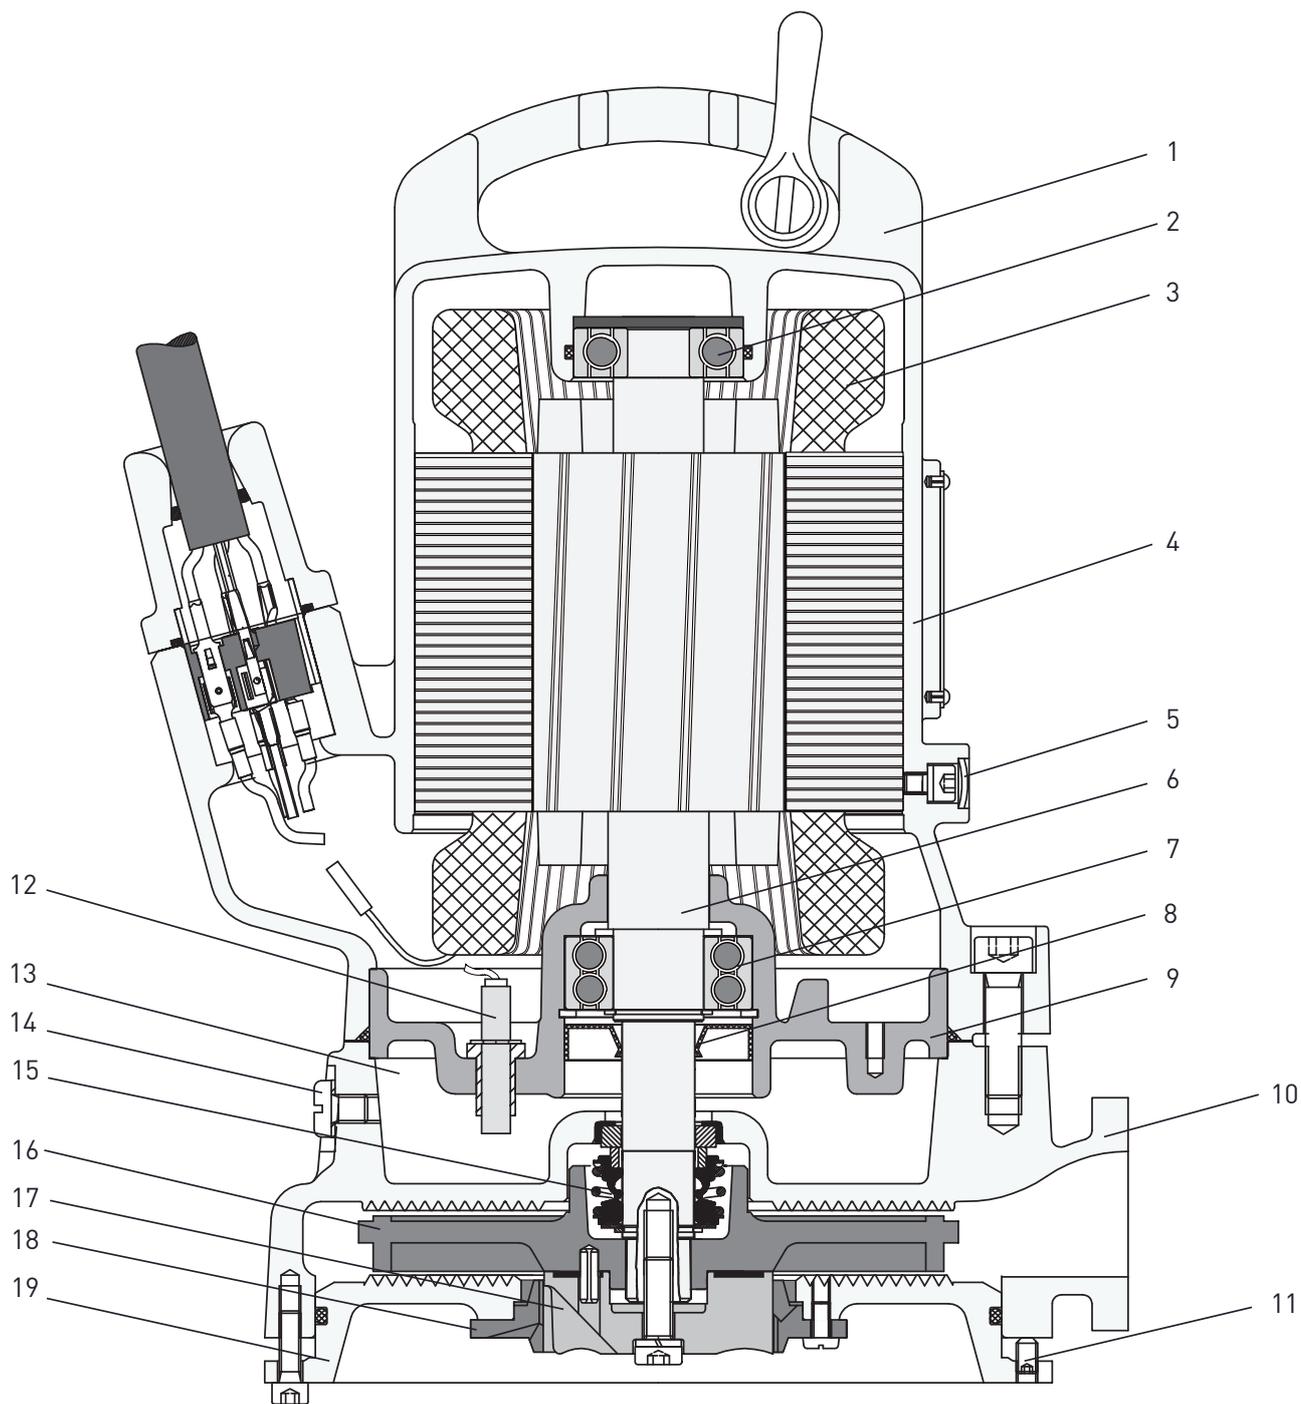

- | | | | | | |
|---|--|----|-------------------------------|----|---|
| 1 | Cast iron lifting hoop and steel shackle | 7 | Lower bearing - double row | 14 | Seal chamber drain plug / pressure test point |
| 2 | Upper bearing - single row | 8 | Oil-lubricated lip seal | 15 | Mechanical seal |
| 3 | Motor with thermal sensors | 9 | Bearing housing | 16 | Impeller |
| 4 | Motor housing | 10 | Volute | 17 | Shredding rotor |
| 5 | Motor chamber pressure test point | 11 | Bottom plate adjustment screw | 18 | Cutting ring (fixed to bottom plate) |
| 6 | Stainless steel shaft | 12 | Leakage sensor (DI) | 19 | Bottom plate |
| | | 13 | Seal chamber | | |


6.2 Design features Piranha-S HH

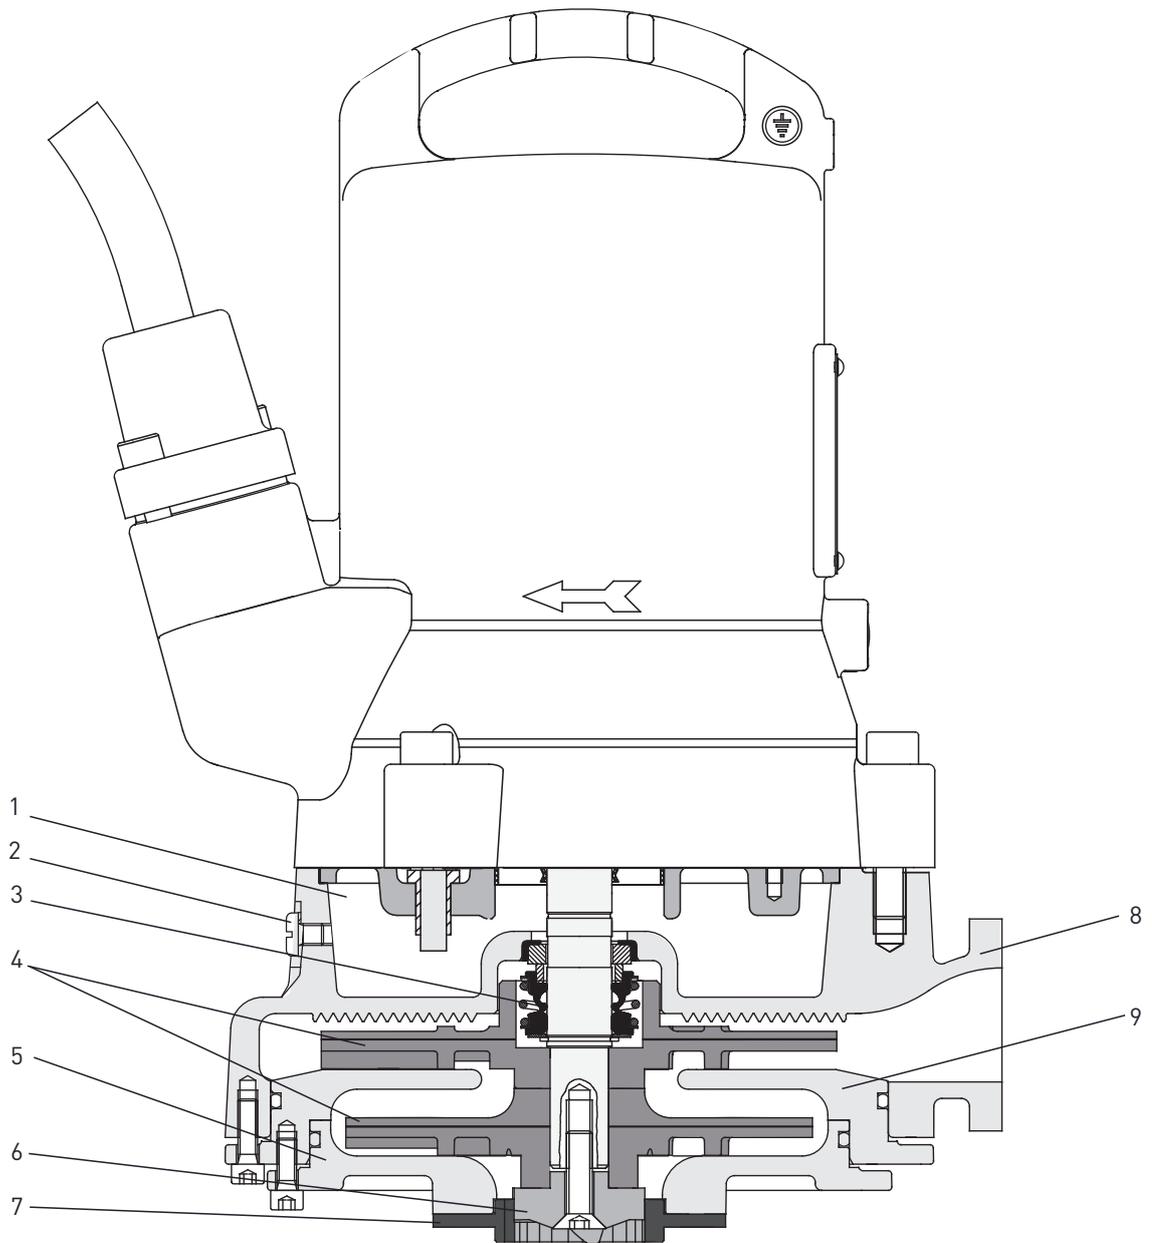

- | | | | | | |
|---|--|---|-----------------|---|--------------|
| 1 | Seal chamber | 4 | Impellers | 7 | Cutting ring |
| 2 | Seal chamber drain plug /
pressure test point | 5 | Bottom plate | 8 | Volute |
| 3 | Mechanical seal | 6 | Shredding rotor | 9 | Diffuser |

6.3 Design features Piranha-PE

Submersible grinder pump fitted with a shredding system hydraulic and a Premium Efficiency motor.

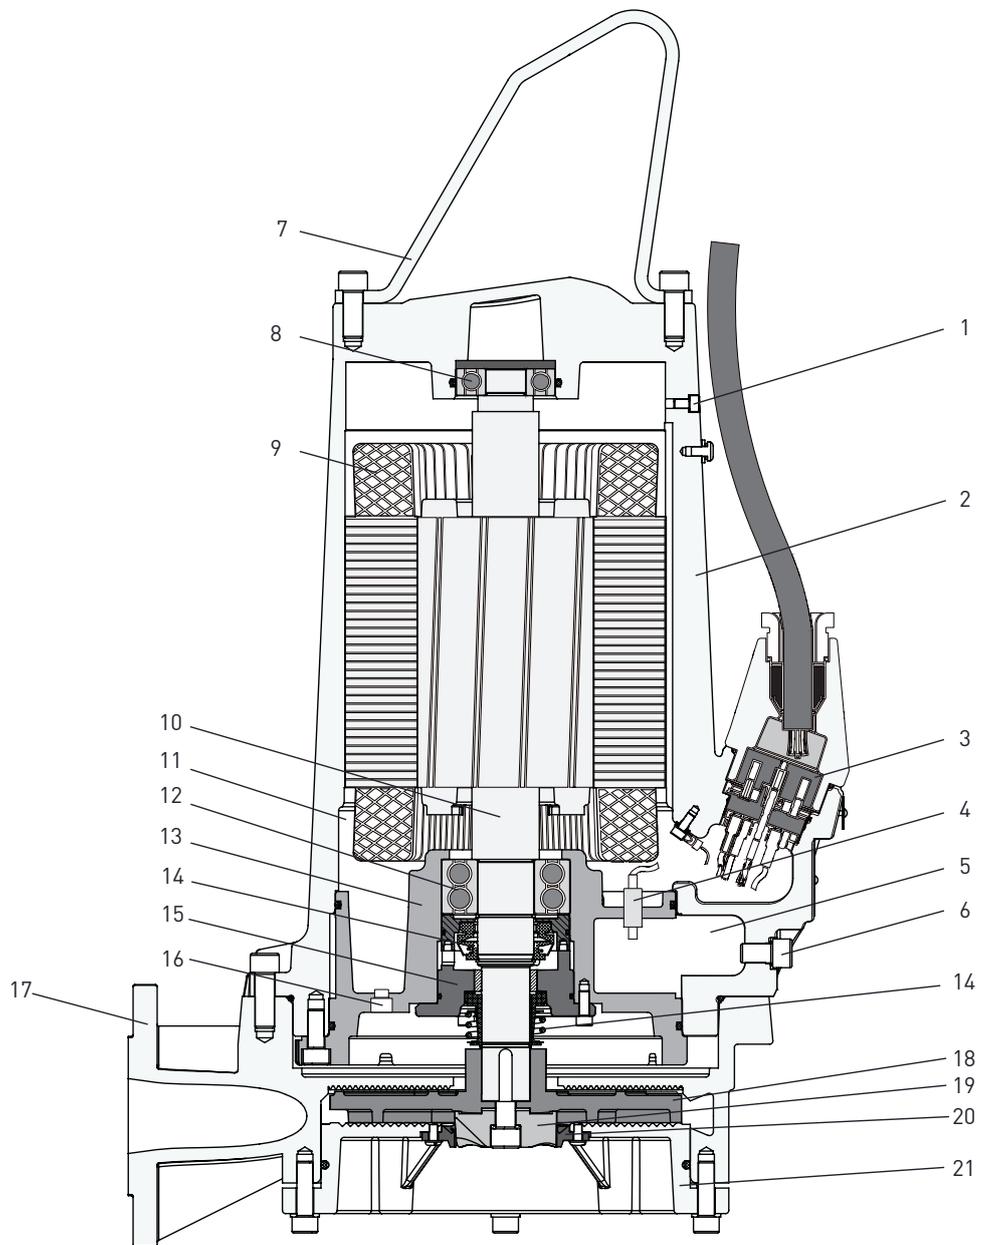

- | | | | | | |
|---|--|----|----------------------------|----|---|
| 1 | Pressure release screw | 8 | Upper bearing - single row | 16 | Motor chamber drain plug /
pressure test point |
| 2 | Motor housing | 9 | Motor with thermal sensors | 17 | Volute |
| 3 | 10-pole terminal block | 10 | Stainless steel shaft | 18 | Impeller |
| 4 | Leakage sensor (DI) | 11 | Motor chamber | 19 | Shredding rotor |
| 5 | Seal chamber | 12 | Lower bearing - double row | 20 | Cutting ring (fixed to bottom plate) |
| 6 | Seal chamber drain plug /
pressure test point | 13 | Bearing housing | 21 | Bottom plate |
| 7 | Stainless steel lifting hoop | 14 | Mechanical seals | | |
| | | 15 | Seal holding plate | | |

7 Weights

NOTE: Weight on nameplate is for pump and cable only.

7.1 Piranha

	Pedestal bracket and fasteners	Skirtbase (transportable)	Cable					Pump (without cable)
			kg (lbs)		kg (lbs)			
Piranha	kg (lbs)	kg (lbs)	400 V ¹⁾	208 V ²⁾	230 V ²⁾	460 V ²⁾	600 V ²⁾	kg (lbs)
50 Hz								
S10 - S17	4 (9)	4 (9)	0.2 (0.4)	-	-	-	-	30 (66)
S21	4 (9)	4 (9)	0.2 (0.4)	-	-	-	-	32 (71)
S21HH	4 (9)	4 (9)	0.2 (0.4)	-	0.1 (0.2)	-	-	32 (71)
S26	4 (9)	4 (9)	0.2 (0.4)	-	-	-	-	35 (77)
PE 30/2D	4 (9)	4 (9)	0.3 (0.7)	-	-	-	-	82 (181)
PE 55/2D,	7 (15)	4 (9)	0.4 (0.9)	-	-	-	-	122 (269)
PE 70/2D	7 (15)	4 (9)	0.4 (0.9)	-	-	-	-	126 (278)
PE 90/2D, PE 110/2D	7 (15)	4 (9)	0.4 (0.9)	-	-	-	-	148 (326)
S10 & S20	4 (9)	4 (9)	-	0.13 (0.29)	0.13 (0.29)	0.13 (0.29)	-	30 (66)
S26	4 (9)	4 (9)	-	0.13 (0.29)	0.13 (0.29)	-	-	35 (77)
S26HH	4 (9)	4 (9)	-	-	0.13 (0.29)	-	-	37 (82)
S30	4 (9)	4 (9)	-	0.13 (0.29)	0.13 (0.29)	0.13 (0.29)	-	51 (112)
PE 25/2W	4 (9)	4 (9)	-	0.18 (0.4)	0.18 (0.4)	-	-	77 (170)
PE 28/2D	4 (9)	4 (9)	-	0.14 (0.3)	0.14 (0.3)	0.14 (0.3)	0.14 (0.3)	77 (170)
PE 35/2W	4 (9)	4 (9)	-	0.23 (0.5)	0.23 (0.5)	-	-	77 (170)
PE 35/2D	4 (9)	4 (9)	-	0.18 (0.4)	0.14 (0.3)	0.14 (0.3)	0.14 (0.3)	77 (170)
PE 45/2W	4 (9)	4 (9)	-	0.23 (0.5)	0.23 (0.5)	-	-	80 (176)
PE 45/2D	4 (9)	4 (9)	-	0.23 (0.5)	0.18 (0.4)	0.18 (0.4)	0.14 (0.3)	80 (176)
PE 80/2D	7 (15)	4 (9)	-	0.23 (0.5)	0.23 (0.5)	0.18 (0.4)	0.14 (0.3)	124 (273)
PE 100/2D,	7 (15)	4 (9)	-	0.23 (0.5)	0.23 (0.5)	0.23 (0.5)	0.18 (0.4)	153 (337)
PE 110/2D	7 (15)	4 (9)	-	0.23 (0.5)	0.23 (0.5)	0.23 (0.5)	0.23 (0.5)	153 (337)
PE 125/2D	7 (15)	4 (9)	-	0.23 (0.5)	0.23 (0.5)	0.23 (0.5)	0.23 (0.5)	153 (337)
60 Hz								

¹⁾ Weight per metre. ²⁾ Weight per foot.

7.2 Chain (EN 818)*

Length (m / ft)	Weight (kg / lbs)		
	WLL 320	WLL 400	WLL 630
1.6 / 5.24	0.74 / 1.63	-	-
3.0 / 9.84	1.28 / 2.82	1.62 / 3.57	2.72 / 5.99
4.0 / 13.12	1.67 / 3.68	2.06 / 4.54	3.40 / 7.49
6.0 / 19.68	2.45 / 5.40	2.94 / 6.48	4.76 / 10.49
7.0 / 22.96	2.84 / 6.26	3.38 / 7.45	4.92 / 10.84

* For chains supplied by Sulzer only.



Weights of accessories, other than or in addition to those listed, must also be included when specifying the working load of any lifting equipment. Please consult with your local Sulzer representative prior to installation.

8 Lifting, transport and storage

8.1 Lifting

ATTENTION! *Observe the total weight of the Sulzer units and their attached components (see nameplate for weight of base unit).*

The duplicate nameplate provided must always be located and visible close to where the unit is installed (e.g. at the terminal boxes / control panel where the cables are connected).

NOTE! *Lifting equipment must be used if the total unit weight and attached accessories exceeds local manual lifting safety regulations.*

The total weight of the unit and accessories must be observed when specifying the safe working load of any lifting equipment! The lifting equipment, e.g. crane and chains, must have adequate lifting capacity. The hoist must be adequately dimensioned for the total weight of the Sulzer units (including lifting chains or steel ropes, and all accessories which may be attached). The end user assumes sole responsibility that lifting equipment is certified, in good condition, and inspected regularly by a competent person at intervals in accordance with local regulations. Worn or damaged lifting equipment must not be used and must be properly disposed of. Lifting equipment must also comply with the local safety rules and regulations.

NOTE! *The guidelines for the safe use of chains, ropes and shackles supplied by Sulzer are outlined in the Lifting Equipment manual provided with the items and must be fully adhered to.*

8.2 Transport

During transport, care should be taken that the pump cannot fall over or roll and cause damage to the pump or injury to the person. The pumps of the Piranha series have a lifting hoop to which a chain can be attached for lifting or suspension of the pump.



The pump must be raised only by the lifting hoop and never by the power cable.



After removal from its original packaging we recommend that during future transportation of the pump it is laid on its side and securely strapped to a pallet.

8.3 Storage

1. During long periods of storage the pump should be protected from moisture and extremes of cold or heat.
2. To prevent the mechanical seals from sticking it is recommended that occasionally the impeller is rotated by hand.
3. If the pump is being taken out of service the oil should be changed before storage.
4. After storage the pump should be inspected for damage, the oil level should be checked, and the impeller checked to ensure it rotates freely.

8.3.1 Moisture protection of motor connection cable

ATTENTION! *The ends of the cables should never be immersed in water.*

The motor connection cables are protected against the ingress of moisture along the cable by having the ends sealed at the factory with protective covers (only Piranha-PE).

ATTENTION! *The protective covers only provide protection against water spray or similar (IP44) and are not a water tight seal. The covers should only be removed immediately prior to connecting the pumps electrically.*

During storage or installation, prior to the laying and connection of the power cable, particular attention should be given to the prevention of water damage in locations which could flood.

ATTENTION! *If there is a possibility of water ingress then the cable should be secured so that the end is above the maximum possible flood level. Take care not to damage the cable or its insulation when doing this.*

9 Set-up and installation

Piranha pumps are designed for wet well vertical installation on a fixed pedestal or as transportable on a movable pump stand. The pumps are also suitable for horizontal installation.

The regulations of DIN EN 12056-4 as well as other local codes should be observed.

The following guidelines must be observed when setting the lowest switch off point for Piranha pumps:

- Care must be taken during switching on and operation that the hydraulic section is filled with water (dry installation) or alternatively is submerged or under water (wet installation). Other types of operation e.g. snore operation or dry running are not allowed!
- The minimum submergence allowed for specific pumps can be found on the dimension installation sheets available by download from www.sulzer.com.




The regulations covering the use of pumps in sewage applications together with all regulations involving the use of explosion-proof motors should be observed. The cable ducting to the control panel should be sealed off in a gas-tight manner by the use of a foaming material after the cable and control circuits have been pulled through. In particular the safety regulations covering work in enclosed areas in sewage plants should be observed together with general good technical practice.

9.1 Equipotential bonding



In pump stations/tanks, equipotential bonding must be carried out according to EN 60079-14:2014 [Ex] or IEC 60364-5-54 [non-Ex] (Regulations for the installation of pipelines, protective measures in high voltage systems).

Connection points:

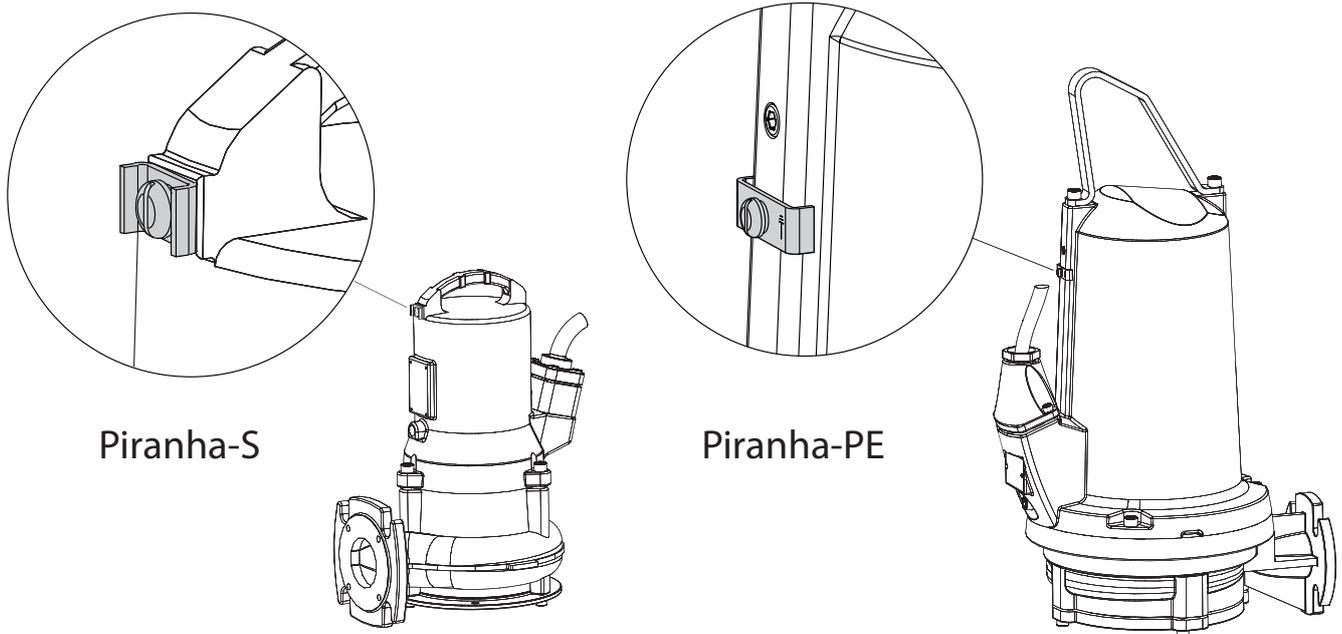

9.2 Discharge line


The discharge line must be installed in compliance with the relevant regulations. DIN 1986/100 and EN 12056 applies in particular to the following:

- The discharge line should be fitted with a backwash loop (180° bend) located above the backwash level and should then flow by gravity into the collection line or sewer.
- The discharge line should not be connected to a down pipe.
- No other inflows or discharge lines should be connected to this discharge line.

ATTENTION! *The discharge line should be installed so that it is not affected by frost.*

9.3 Installation types

9.3.1 Wet well installation

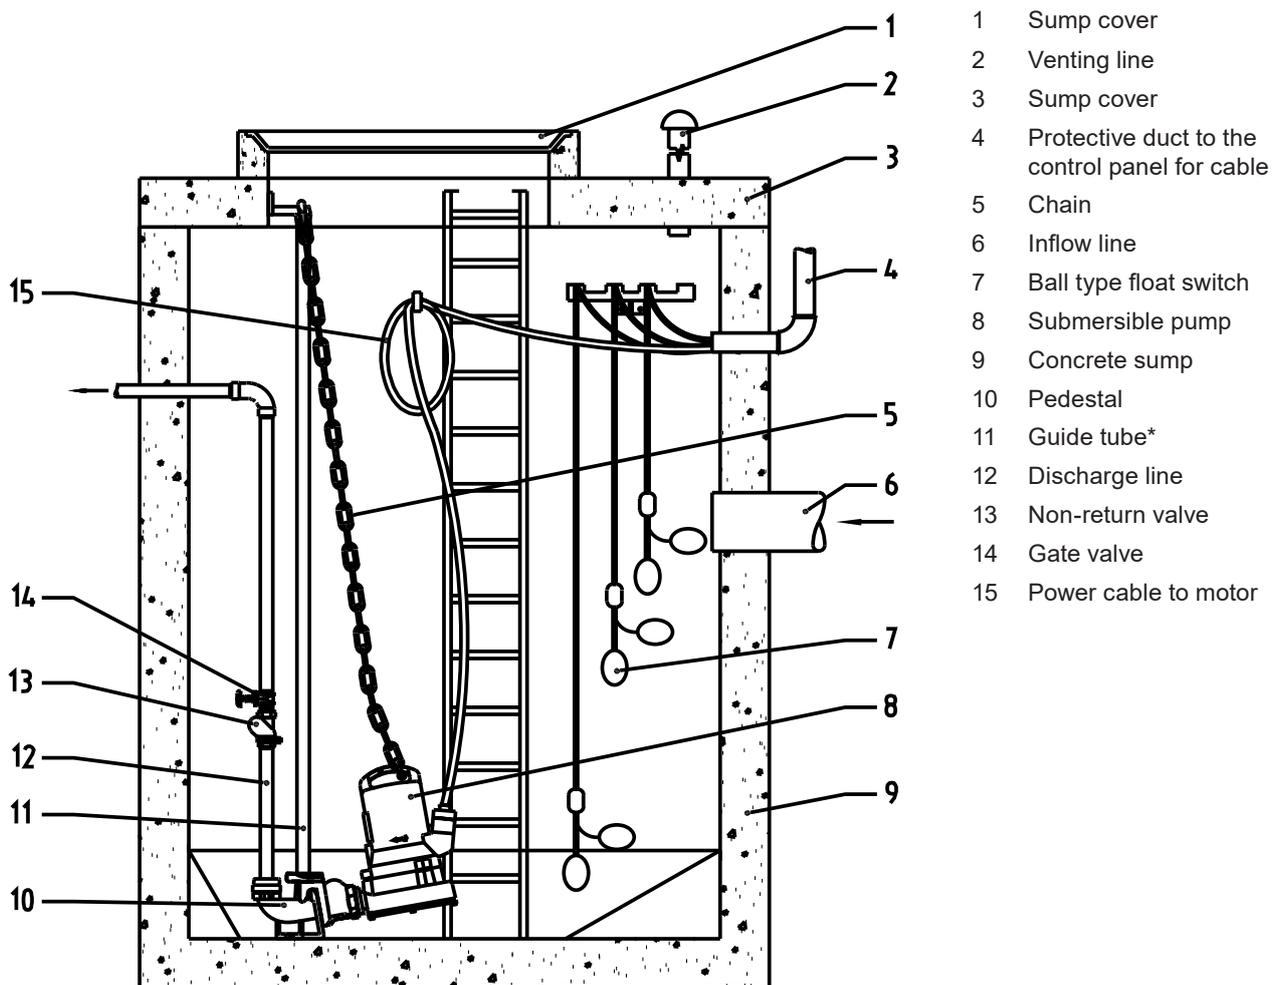

- 1 Sump cover
- 2 Venting line
- 3 Sump cover
- 4 Protective duct to the control panel for cable
- 5 Chain
- 6 Inflow line
- 7 Ball type float switch
- 8 Submersible pump
- 9 Concrete sump
- 10 Pedestal
- 11 Guide tube*
- 12 Discharge line
- 13 Non-return valve
- 14 Gate valve
- 15 Power cable to motor

* The fitting of a guide tube is compulsory when the pump is installed on a pedestal.

The pump is installed using the Sulzer pedestal kit as specified below for the particular Piranha model (assembly leaflet is supplied with kit).

Piranha	Size	Part number
S10/4 - S30/2	G 1¼": 90° cast bend	62320674
	G 1¼": 90° cast bend with built-in non-return valve	62320536
PE30/2C	G 1¼": 90° cast bend	62320676
	G 1¼": 90° cast bend with built-in non-return valve	62320538
PE55/2E - 125/2E	DN 50 / G2" without bend (DIN)	62320660
	DN 50 / G2" without bend (ASA)	62320661

Particular attention should be paid to:

- the provision of venting to the sump.
- installation of isolating valves on the discharge line.
- removal of any slack from the power cable by coiling and securing it to the sump wall so that it cannot be damaged during operation of the pump.

ATTENTION! *The power cable should be handled carefully during installation and removal of the pump in order to avoid damage to the insulation. When raising the pump out of the concrete sump with the hoist ensure that the connection cables are lifted out simultaneously as the pump itself is being raised.*

Lowering the pump on the guide rail:

- Fit the pedestal coupling bracket and seal to the discharge flange of the pump.
- Fit a chain to the lifting hoop and using a hoist lift the pump into position where the pedestal bracket can slide into place on the guide rail.

Piranha S10/4 - S30/2: To allow the pump to be lowered at the correct angle and fixed correctly to the pedestal, the shackle must be fixed to the lifting hoop at the point furthest from the guide rail.

Piranha PE30/2C - 125/2E: Due to the design of the lifting hoop the pump will automatically lower at the necessary angle.

- Lower the pump slowly down along the guide rail.
- The pump couples automatically on the pedestal, and seals to a leak-tight connection by the compression from the combination of its own weight and the fitted seal.

9.3.2 Dry-installed (horizontal)

The pump is installed using the Sulzer horizontal support kit as specified below for the particular Piranha model.

Piranha	Part number
S10/4 - S30/2	62665103
PE30/2C	62665399
PE55/2E - PE125/2E	62665400

Particular attention should be paid to:

- the provision of venting to the sump.
- installation of isolating valves on the inlet and discharge lines.
- removal of any slack from the power cable by coiling and securing it so that it cannot be damaged during operation of the pump.

ATTENTION! *The power cable should be handled carefully during installation and removal of the pump in order to avoid damage to the insulation.*



When dry-installed the pump motor housing may become hot. In such a case, to avoid burn injury, allow to cool down before handling.

9.3.3 Transportable

For transportable installation the Piranha is fitted to a pump stand.

Place the pump on a firm surface which will prevent it from overturning or burrowing down. The pump stand can also be bolted down to the floor surface, or the pump suspended slightly by the lifting handle. Connect the discharge pipe and cable.



Arrange the cable run so that the cables will not be kinked or nipped.



Submersible pumps used outdoors must be fitted with a power cable of at least 10 meter length. Other regulations may apply in different countries.

Hoses, pipes and valves must be sized to suit the pump performance.

9.3.4 Venting of the volute

After lowering the pump into a sump full of water, an air lock may occur in the volute and cause pumping problems. To clear the air lock, shake the pump, or raise the pump in the medium and then lower it again. If necessary, repeat this venting procedure.

10 Electrical connection



Before commissioning, an expert should check that one of the necessary electrical protective devices is available. Earthing, neutral, earth leakage circuit breakers, etc. must comply with the regulations of the local electricity supply authority and a qualified person should check that these are in perfect order.

ATTENTION! *The power supply system on site must comply with local regulations with regard to cross-sectional area and maximum voltage drop. The voltage stated on the nameplate of the pump must correspond to that of the mains*

Suitably rated means of disconnection shall be incorporated in the fixed wiring by the installer for all pumps in accordance with applicable local National codes.

The power supply cable must be protected by an adequately dimensioned slow-blow fuse corresponding to the rated power of the pump.



The incoming power supply as well as the connection of the pump itself to the terminals on the control panel must comply with the circuit diagram of the control panel as well as the motor connection diagrams and must be carried out by a qualified person.

All relevant safety regulations as well as general good technical practice must be complied with.

Submersible pumps used outdoors must be fitted with a power cable of at least 10 m / 33 ft length. Other regulations may apply in different countries.

In all installations, the power supply to the pump must be via a residual current device (e.g. RCD, ELCB, RCBO etc.) with a rated residual operating current in accordance with local regulations. For installations not having a fixed residual current device the pump must be plugged into the power supply through a portable version of the device.

All three phase pumps must be installed with motor starting and overload protective devices in the fixed wiring by the installer. Such motor control and protective devices must comply with the requirements of IEC standard 60947-4-1. They must be rated for the motor that they control, and wired and set/adjusted according to the instructions provided by the manufacturer. In addition, the overload protective device that is responsive to the motor current shall be set / adjusted to 125 % of the marked rated current.



Risk of electrical shock. Do not remove cord and strain relief and do not connect conduit to pump.

NOTE *Please consult your electrician.*

The following components should be incorporated in the fixed wiring for all single phase pumps:

- Motor starting and/or running capacitor that complies with the requirements of IEC 60252-1 and rated as specified in the installation instruction. The capacitor shall be class S2 or S3.
- Motor contactor that complies with the requirements of IEC Standard 60947-4-1 and rated for the motor that it controls.

PE1 Capacitor Ratings			
Motor	Start (µF)	Run (µF)	Voltage (V)
PE25/2W	180	70	450
PE35/2W	180	70	450
PE45/2W	180	70	450

NOTE *The supply cord must be replaced by the manufacturer, its service agent or a similar qualified person.*

10.1 Operation with frequency inverters (Piranha-PE only)

The stator design and the insulation grade of the Piranha-PE motors from Sulzer means that they are suitable for usage with VFD, according to IEC 60034-25:2022 / NEMA 61800-2:2005. It is however essential that the following conditions are met:


- The guidelines for EMC (electromagnetic compatibility) are complied with.
- Explosion-proof motors must be equipped with thermistors (PTC temperature sensors) if operated in hazardous areas (ATEX Zone 1 and 2).
- Machines designated as Ex machines may never, without exception, be operated using a mains frequency that is greater than the maximum of 50 Hz or 60 Hz as indicated on the nameplate. Make sure that the rated current specified on the nameplate is not exceeded after starting the motors. The maximum number of starts according to the motor datasheet may not be exceeded.
- Machines that are not designated as Ex machines may only be operated using the mains frequency indicated on the nameplate. Greater frequencies can be used but only after consulting with and receiving permission from the Sulzer manufacturing plant.
- For operation of Ex-motors on frequency inverters, special requirements in relation to the tripping times of the thermo control elements must be observed.
- The lowest frequency must be set so that the minimum fluid velocity of 1 m/s is present in the volute.
- The maximum frequency must be set so that the rated power of the motor is not exceeded.

VFD's must be equipped with adequate filters when used in the critical zone. The filter chosen must be suitable for the VFD with regard to its rated voltage, wave frequency, rated current, and maximum output frequency. Ensure that the voltage characteristics (voltage peaks, dU/dt and rise time of the voltage spikes) at the motor terminal board are in accordance to IEC 60034-25:2022 / NEMA 61800-2:2005. This can be achieved using various types of VFD filters, depending on the specified voltage and cable length. Please contact your supplier for detailed information and the correct configuration.

10.2 Seal monitoring

Piranha-PE and Piranha-S pumps are supplied with a leakage sensor (DI) to detect and alert to the ingress of water into the motor and seal chambers. DI is optional with Piranha-S, and in the Ex-version monitors only the motor chamber.

In order to integrate this seal monitoring function into the control panel of the pump it is necessary to fit a Sulzer DI module and connect this in accordance with the circuit diagram below.

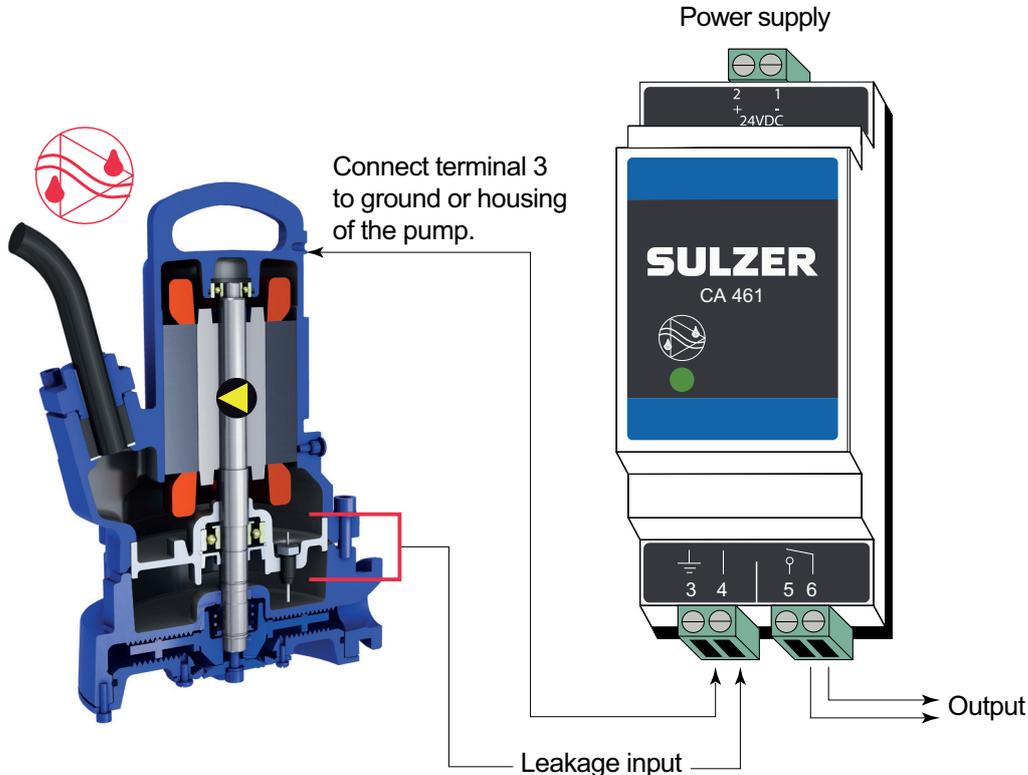

Sulzer leakage control type CA 461

Electronic amplifier:

110 - 230 V AC 50/60 Hz (CSA). Part No.: 16907010.

18-36 VDC, SELV. Part No.: 16907011.

ATTENTION! *Maximum relay contact loading: 2 Ampere*

ATTENTION! *It is very important to note that with the connection example above it is not possible to identify which sensor/alarm is being activated. As an alternative Sulzer highly recommends to use a separate CA 461 module for each sensor/input, to allow not only identification but also to prompt to the appropriate response to the alarm category/severity.*

Multiple-input leakage control modules are also available. Please consult with your local Sulzer representative.

ATTENTION: *If the DI seal monitoring is activated the unit must be immediately taken out of service. Please contact your Sulzer Service Centre.*

NOTE! *Running the pump with the thermal and/or leakage sensors disconnected will invalidate related warranty claims.*


10.3 Temperature monitoring

Thermal sensors in the stator windings protect the motor from overheating.

Piranha motors are fitted with bimetallic thermal sensors in the stator as standard in Piranha-PE and Ex Piranha-S, and as an option in non-Ex Piranha-S.

ATTENTION: *Explosion-proof pumps may only be used in explosive zones with the thermal sensors connected.*

10.3.1 Temperature sensor bimetal

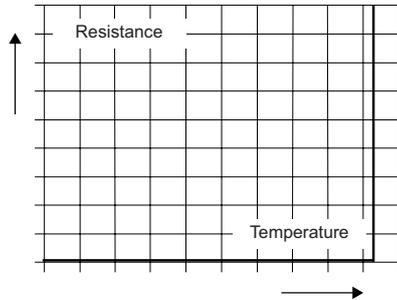

Application	Option
Function	Temperature switch using the bimetallic principle, which opens at a rated temperature
Switching	Taking care not to exceed the allowable switching current, these can be fitted directly into the control circuit


Curve showing principle of operation of bimetallic temperature limiter

Operating voltage ...AC	100 V to 500 V ~
Rated voltage AC	250 V
Rated current AC $\cos \varphi = 1,0$	2.5 A
Rated current AC $\cos \varphi = 0,6$	1.6 A
Max. switching current at I_N	5.0 A

ATTENTION! *The maximum switching ability of the thermal sensors is 5 A, the rated voltage 250 V.*


10.4 Wiring diagrams

Single phase:

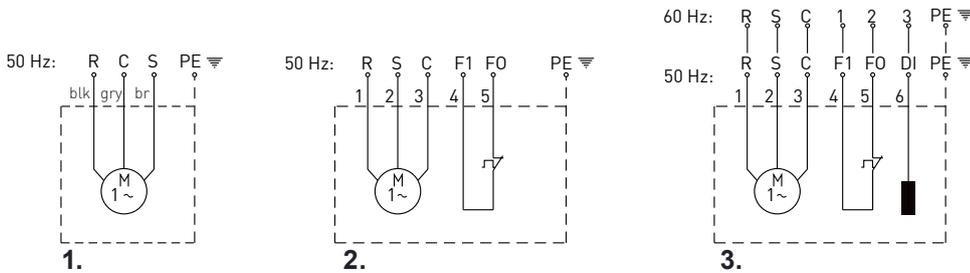

NOTE:
 R = Run
 S = Start
 C = Neutral (Common)
 F1, F0 = Thermal sensor
 DI = Seal monitor
 PE = Earth
 blk = Black
 gry = Grey
 br = Brown

Three phase:

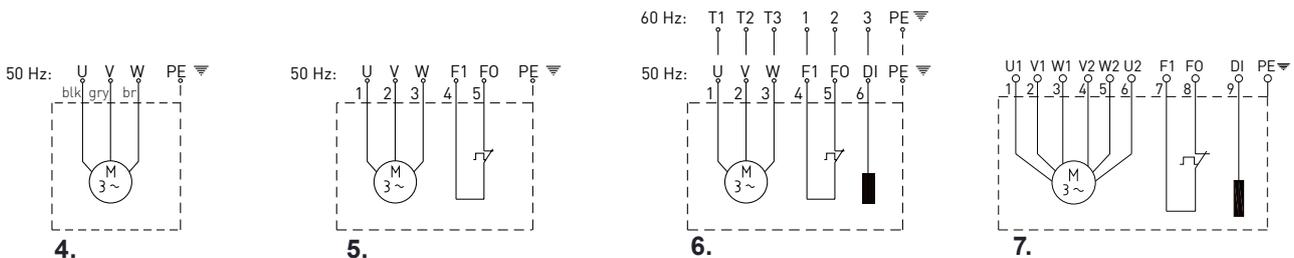

	Single phase			Three phase			
	1.	2.	3.	4.	5.	6.	7.
Piranha 50 Hz	S10/4 S12/2 S17/2	S10/4-Ex S12/2-Ex S17/2-Ex	S10/4 S10/4-Ex S12/2 S12/2-Ex S17/2 S17/2-Ex	S13/4 S12/2 S17/2 S21/2 S21/2 HH S26/2	S13/4-Ex S12/2-Ex S17/2-Ex S21/2-Ex S26/2-Ex	S13/4 S13/4-Ex S12/2 S12/2-Ex S17/2 S17/2-Ex S21/2 S21/2-Ex S26/2 S26/2 (DO5)* S26/2-Ex PE30/2C-Ex	PE55/2E-Ex PE70/2E-Ex PE90/2E-Ex PE110/2E-Ex
Piranha 60 Hz	-	-	S10/4 S10/4-Ex S20/2 S20/2-Ex S26/2 S26/2-Ex S26/2-HH PE25/2C-Ex PE35/2C-Ex PE45/2C-Ex	-	-	S10/4 S10/4-Ex S20/2 S20/2-Ex S30/2 S30/2-Ex PE28/2C-Ex PE35/2C-Ex PE45/2C-EX PE80/2E-EX PE100/2E-EX PE110/2E-EX PE125/2E-EX	-

* 400/695V

ATTENTION: *It is important to use the correct capacitors with single phase pumps, use of incorrect capacitors will lead to motor burn-out.*

11 Commissioning

Before commissioning the unit should be checked and a functional test carried out. Particular attention should be paid to the following:

- Have the electrical connections been carried out in accordance with regulations?
- Have the thermal sensors been connected?
- Is the seal monitoring device (where fitted) correctly installed?
- Is the motor overload switch correctly set?
- Have the power and control circuit cables been correctly fitted?
- Was the sump cleaned out?
- Have the inflow and outflows of the pump station been cleaned and checked?
- Is the direction of rotation correct - even if run via an emergency generator?
- Are the level controls functioning correctly?
- Are the required gates valves (where fitted) open?
- Do the non-return valves (where fitted) function easily?
- Has the volute been vented (see Sec. 9.3.4) ?

11.1 Types of operation and frequency of starting

Pumps of the Piranha-PE series have been designed for continuous operation S1 when either submerged or dry-installed.

Piranha-S has been designed for intermittent use only (S3, 25%) when dry-installed, and continuous use (S1) when submerged (minimum water level = 279 mm / 11 ins).

11.2 Checking direction of rotation

When three phase units are being commissioned for the first time and also when used on a new site, the direction of rotation must be carefully checked by a qualified person.



When checking the direction of rotation, the unit should be secured in such a manner that no danger to personnel is caused by the rotating impeller, or by the resulting air flow. Do not place your hand into the hydraulic system!



When checking the direction of rotation, or when starting the unit, pay attention to the **START REACTION**. This can be very powerful and cause the pump to jerk in the opposite direction to the direction of rotation.

ATTENTION:

When viewed from above, the direction of rotation is correct if the impeller rotates in a clockwise manner.



NOTE:

The start reaction is anti-clockwise.

NOTE:

If a number of units are connected to a single control panel then each unit must be individually checked.

ATTENTION!

The mains supply to the control panel should have a clockwise rotation. If the leads are connected in accordance with the circuit diagram and lead designations, the direction of rotation will be correct.

11.3 Changing direction of rotation



The direction of rotation should only be altered by a qualified person.

If the direction of rotation is incorrect then this is altered by changing over two phases of the power supply cable in the control panel. The direction of rotation should then be rechecked

NOTE:

The direction of rotation measuring device monitors the direction of rotation of the mains supply or that of an emergency generator.

12 Maintenance and service



Before commencing any maintenance work the unit should be completely disconnected from the mains by a qualified person and care should be taken that it cannot be inadvertently switched back on.



Repair work must only be carried out by qualified personnel approved by Sulzer.



When carrying out any on-site service or maintenance work i.e. cleaning, venting, fluid inspection or changing, and adjustment of the bottom plate gap, the safety regulations covering work in enclosed areas of sewage installations as well as good general technical practices should be followed.



Under continuous running conditions the pump motor housing can become very hot. To prevent burn injury allow to cool down before handling.



Coolant temperature can reach up to 60 °C / 140 °F under normal operating conditions.

NOTE

The maintenance instructions given here are not designed for “do-it-yourself” repairs as special technical knowledge is required.

12.1 General maintenance hints

Sulzer submersible pumps are reliable quality products, each being subjected to careful final inspection. Lubricated-for-life ball bearings, together with monitoring devices, ensure optimum pump reliability provided that the pump has been connected and operated in accordance with the operating instructions. However, should a malfunction occur, do not improvise, but ask your Sulzer Customer Service Department for assistance.

This applies particularly if the pump is continually switched off by the current overload in the control panel, by the thermal sensors of the thermo-control system, or by the seal monitoring system (DI).

Regular inspection and care is recommended to ensure a long service life. Service intervals vary for Piranha pumps depending on installation and application. For recommended service interval details contact your local Sulzer Service Centre. A maintenance contract with our Service Department will guarantee the best technical service.

When carrying out repairs, only original spare parts supplied by the manufacturer should be used.

Sulzer warranty conditions are only valid provided that any repair work has been carried out in a Sulzer approved workshop and where original Sulzer spare parts have been used.

NOTE ***ATEX- and FM-rated Piranha pumps are approved for use in hazardous locations. If an Ex-rated pump is serviced or repaired in a workshop that is not Ex-approved then it must no longer be used in hazardous locations. In that case the Ex nameplate must be removed and replaced by the standard nameplate, or where instead a standard and a secondary Ex nameplate is fitted to the pump the secondary nameplate must be removed.***

ATTENTION! ***Repair work on explosion-proof motors may only be carried out in authorized workshops by qualified personnel using original parts supplied by the manufacturer. Otherwise the Ex-approvals are no longer valid. Detailed guidelines, instructions and dimensional drawings for the service and repair of Ex-approved pumps are in the Workshop Manual.***

Motor chamber

The motor chamber should be inspected every 12 months to ensure it is free from moisture.

12.2 Shredding system

The shredding system of the Piranha is a wearing part, and as such may need to be replaced. A reduction in cutting performance can reduce the output. We recommend that the shredding system is inspected regularly. This is particularly so if sewage containing sand is being pumped. Regular inspection and care is recommended to ensure a long service life.

The Sulzer Service Organisation would be pleased to advise you on any applications you may have and to assist you in solving your pumping problems.

12.3 Oil filling and changing

The motor chamber (Piranha-PE), and the seal chamber between the motor and the hydraulic section (Piranha-PE & Piranha-S), have been filled at manufacture.

An oil change is only necessary:

- at specified service intervals (for details contact your local Sulzer Service Centre).
- if the DI leakage sensor detects an ingress of water into the seal chamber or motor chamber.
- after repair work that requires draining of the oil.
- if the pump is being taken out of service the oil should be changed before storage.

12.3.1 Instructions on how to drain and fill the seal chamber

1. Loosen the plug screw enough to release any pressure that may have built-up, and re-tighten (for location see pages 8, 9 and 10).



Before doing so, place a cloth over the plug screw to contain any possible spray of oil as the pump de-pressurises.

2. Place the pump in a horizontal position on a waste oil sump with the drain hole underneath.
3. Remove the plug screw and seal ring from the drain hole.

4. After the oil is fully drained rotate the pump so that the drain hole is positioned to the top.
5. Select the required volume from the oil-fill quantities table and slowly fill with oil into the drain hole.
6. Refit the plug screw and seal ring. **Attention: apply Bondloc B577.**

12.4 Oil-fill quantities (liters)

Piranha	Motor	Seal chamber
S	S10/4, S10/4W, S20/2, S20/2W, S26/2W, S30/2, S26/2W HH	0.53
PE	PE25/2W-C, PE28/2-C, PE35/2-C, PE35/2W-C, PE45/2-C, PE45/2W-C	0.43
	PE80/2-E, PE100/2-E, PE110/2-E, PE125/2-E	0.68


Specification

White mineral VG8 - VG10.

12.5 Bottom plate adjustment

At manufacture, the bottom plate is fitted to the volute with the correct clearance gap set between the impeller and the bottom plate. Piranha-S HH has an inner second impeller with a diffuser attached to the volute. The bottom plate is subsequently attached to the diffuser.

12.5.1 Re-setting the clearance gap following wear

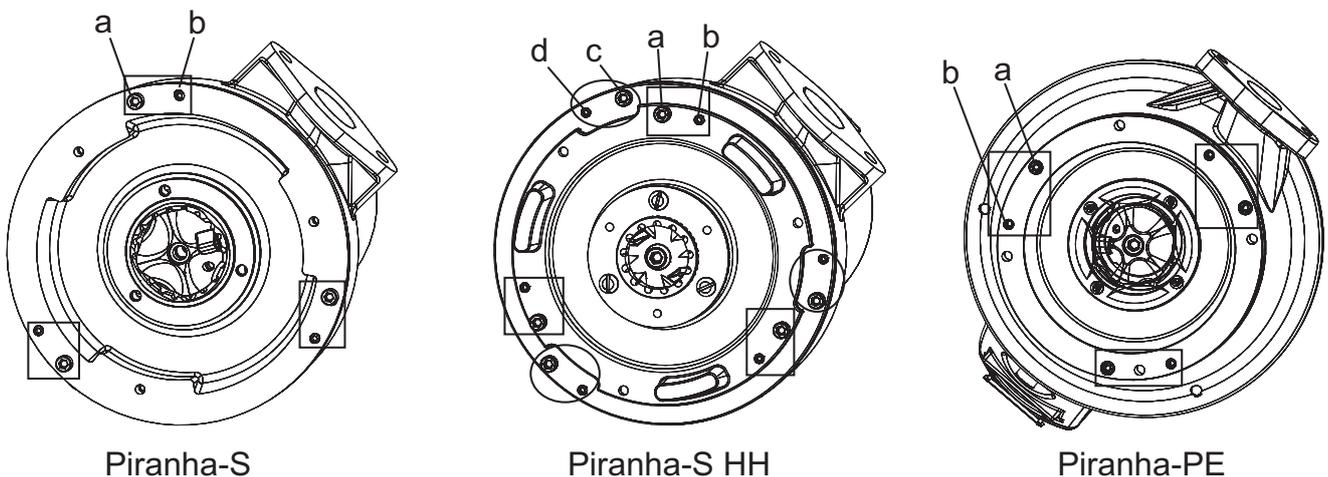

Piranha-S and Piranha-PE:

1. Remove the three securing screws (a) and loosen the three adjusting screws (b).
2. Tap the bottom plate down fully against the impeller and volute.
3. Tighten the adjusting screws gradually until the impeller is lightly rubbing against the bottom plate when rotated by using a hex wrench in the fixing screw.
Attention: because of the shredding rotor's sharp edges do not rotate by gripping with your hand.
4. Apply Bondloc B242 to the securing screws, refit and tighten fully.

Piranha-S HH:

The gap between the inner impeller and diffuser must be adjusted in advance of the gap between the outer impeller and the bottom plate.

1. Loosen the three securing screws (a) and the three adjusting screws (b).
2. Remove the three securing screws (c) and loosen the three adjusting screws (d).
3. Tap the diffuser down fully against the impeller and volute.
4. Tighten the adjusting screws gradually until the impeller is lightly rubbing against the diffuser when rotated by using a hex wrench in the fixing screw.
Attention: because of the shredding rotor's sharp edges do not rotate by gripping with your hand.

5. Apply Bondloc B242 to the securing screws, refit and tighten fully.
6. To adjust the bottom plate follow the procedure for Piranha-S and Piranha-PE.

12.6 Bearings and mechanical seals

Piranha pumps are fitted with lubricated-for-life ball bearings.

Shaft sealing is by means of double mechanical seals (Piranha-PE), and mechanical seal / lip seal (Piranha-S).

ATTENTION! *Once removed, bearings and seals must not be re-used, and must be replaced with genuine Sulzer spare parts in an approved workshop.*

12.7 Changing the power cable



The power cable must be replaced by the manufacturer, its service agent or a similar qualified person, in strict adherence to relevant safety regulations.

Piranha-PE:

To facilitate quick and easy changing or repair of the power cable, the connection between the cable and motor is by means of an integrated 10-pole terminal block.

12.8 Clearing pump blockage

12.8.1 Instructions for operator

The operator should only attempt to unblock the pump by re-setting the overload reset button or MCB on the control panel. The initial start force may be enough to displace any clogged material. If the pump continues to trip out on restart then a qualified service agent must be called.



To carry out the procedure above safely the control panel must not need to be opened to do so. The overload reset button or MCB must therefore be an externally mounted design.

12.8.2 Instructions for service personnel



The pump must be isolated from the power supply before removing it from the installation.



Adequate personal protective equipment must be worn at all times (see Section 3.1).



Lifting safety regulations must be adhered to when lifting the pump (see Section 8).

1. Ensure that the pump is secured so that it cannot topple or roll over.
2. Use pump pliers to check for rags etc in the volute inlet and discharge.
Attention: never use fingers, even in gloves, to check around the volute internally due to the danger of something sharp piercing the gloves and skin.
3. Remove the bottom plate and cutting ring and clear out any debris with a pliers.
4. If the impeller is still jammed from behind then the impeller has to be removed.
5. The impeller and bottom plate should be checked for impact and wear damage.
6. Once the debris has been cleared out the impeller is refitted and should rotate freely by hand.
Attention: apply Bondloc B242 to the securing screw.
7. Refit the bottom plate and cutting ring.
Attention: the gap between the impeller and bottom plate must be checked and adjusted if necessary (see Section 12.5). This is important as a measure to help prevent future blockages.
8. Reconnect the pump to the power source and dry run to check audibly for bearing or other mechanical damage.
Attention: secure the pump so it cannot roll or fall on starting, and do not stand near the pump or directly in front of the pump discharge.

12.9 Cleaning

If the pump is used for transportable applications, then in order to avoid deposits of dirt and encrustation it should be cleaned after each usage by pumping clear water. In the case of fixed installation, we recommend that the functioning of the automatic level control system be checked regularly. By switching the selection switch (switch setting "HAND") the sump will be emptied. If deposits of dirt are visible on the floats then these should be cleaned. After cleaning, the pump should be rinsed out with clear water and a number of automatic pumping cycles carried out.

13 Troubleshooting guide

Fault	Cause	Fix
Pump does not run	Moisture sensor shutdown.	Check for loose or damaged oil plug, or locate and replace faulty mechanical seal / damaged o-rings. Change oil. ¹⁾
	Air lock in volute	Shake or raise and lower the pump repeatedly until resulting air bubbles no longer appear at surface level.
	Level control override.	Check for float switch that is faulty or tangled and held in OFF position in sump.
	Impeller jammed.	Inspect and remove jammed object. Check gap between impeller and bottom plate and adjust if necessary. See Sections 12.5 and 12.8.
Gate valve closed, non-return valve blocked.		Open gate valve, clean blockage from non-return valve.
Pump switching on/off intermittently	Temperature sensor shutdown.	Motor will restart automatically when pump cools down. Check thermal relay settings in control panel. Check for impeller blockage. If none of above, a service inspection is required. ¹⁾
Low head or flow	Wrong direction of rotation.	Change rotation by interchanging two phases of the power supply cable.
	Gap too wide between impeller and bottom plate	Reduce gap (see Section 12.5).
	Gate valve partially open.	Open valve fully.
Excessive noise or vibration	Defective bearing.	Replace bearing. ¹⁾
	Clogged impeller.	Remove and clean hydraulics (see Section 12.8).
	Wrong direction of rotation.	Change rotation by interchanging two phases of the power supply cable.



Before commencing any inspection or repair work the pump should be completely disconnected from the mains by a qualified person and care should be taken that it cannot be inadvertently switched back on.

¹⁾Pump must be taken to approved workshop.

SERVICE LOG

Date	Hours of Operation	Comments	Sign

SERVICE LOG

Date	Hours of Operation	Comments	Sign

