

Conversion kit XJ

SULZER

XJ 25	→ ND (3")	→ HD (3")
Impeller 50 Hz	00833046	00833049
Impeller 60 Hz	00833047	00833050
Diffuser, lower	00833039	00833264
Wear ring	00833066	00833067

XJ 40	→ ND (3")	→ HD (3")
Impeller 50 Hz	00833052	00833054
Impeller 60 Hz	00833046	00833049
Diffuser, lower	00833039	00833264
Wear ring	00833066	00833067

XJ 50	→ ND (4")	→ HD (3")	→ LD (6")
Impeller 50 Hz	00833056	00833061	00833058
Impeller 60 Hz	00833387	00833054	00833059
Impeller washer	00833028	00833089	00833028
Diffuser lower	00833042	00833044	00833043
Wear ring 50 Hz	00833071	00833067	-
Wear ring 60 Hz	00833071	00833067	-
Distance ring	-	-	00833317
Discharge (hose)	00833081	00833077	00833085
Discharge (thread G/BSP)	00833083	00833079	00833086

XJ 80	→ ND (4")	→ HD 60 Hz (3")	→ LD (6")
Impeller 50 Hz	00833063	-	00833065
Impeller 60 Hz	00833056	00833061	00833058
Impeller washer	00833028	00833089	00833028
Diffuser lower	00833042	00833044	00833043
Wear ring 50 Hz	00833071	-	-
Wear ring 60 Hz	00833071	00833067	-
Distance ring	-	-	00833317
Discharge (hose)	00833081	00833077	00833085
Discharge (thread G/BSP)	00833083	00833079	00833086

XJ 110	→ ND (4")	→ HD (3")
Impeller 50 Hz	310 100 005 001	310 100 024 001
Impeller 60 Hz	310 100 013 001	310 100 026 001
Impeller washer	00833089	00833089
Diffuser lower	310 100 003 001	310 100 029 001
Diffuser upper	00833033	310 100 031 001
Wear ring	310 100 006 400	00833067
Discharge (hose)	00833081	00833077
Discharge (thread G/BSP)	00833083	00833079

