

PC Transfer Perform Pump

1300-01

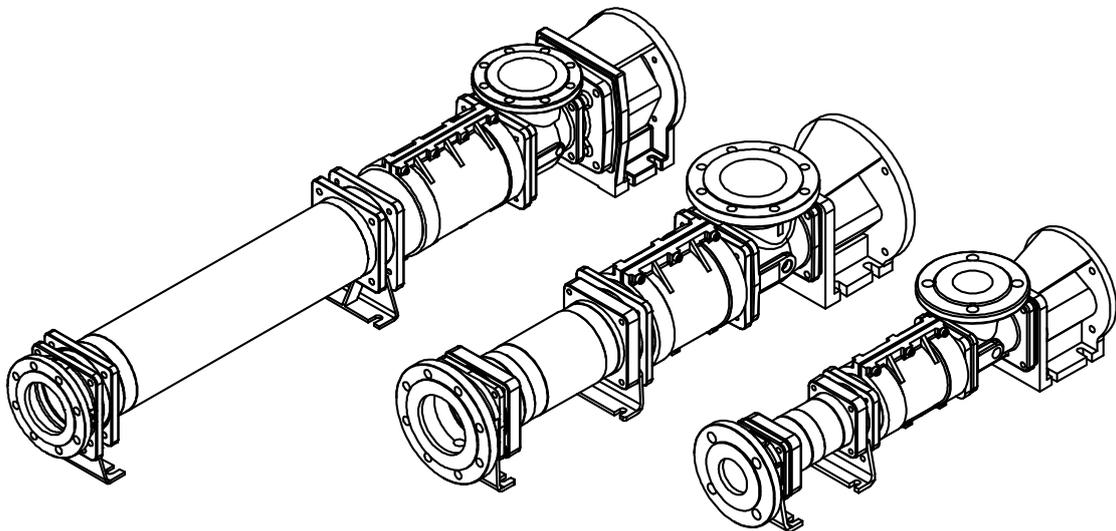



EN: Declaration of Conformity
DE: Konformitätserklärung
FR: Déclaration de Conformité
ES: Declaración de Conformidad
IT: Dichiarazione di conformità
NL: Overeenkomstigheidsverklaring
SV: Försäkran om överensstämmelse
NO: Samsvarserklæring
FI: Vaatimustenmukaisuusvakuutus
RU: Заявление о соответствии

EN: Manufacturer / Address:	IT: Costruttore / Indirizzo:	NO: Produsent / Adresse:
DE: Hersteller / Adresse:	NL: Fabrikant / Adres:	FI: Valmistaja / Osoite:
FR: Fabricant / Adresses:	SV: Tillverkare / Adress:	RU: Изготовитель / Адрес
ES: Fabricante / Dirección:		

Sulzer Pump Solutions Ireland Ltd. / Clonard Road, Wexford, Ireland.

EN: Name and address of the person authorised to compile the technical file to the authorities on request:
DE: Name und Adresse der Person, die berechtigt ist, das technische Datenblatt den Behörden auf Anfrage zusammenzustellen:
FR: Nom et adresse de la personne autorisée pour générer le fichier technique auprès des autorités sur demande:
ES: Nombre y dirección de la persona autorizada para compilar a pedido el archivo técnico destinado a las autoridades:
IT: Il nome e l'indirizzo della persona autorizzata a compilare la documentazione tecnica per le autorità dietro richiesta:
NL: Naam en adres van de persoon die geautoriseerd is voor het op verzoek samenstellen van het technisch bestand:
SV: Namn och adress på den person som är auktoriserad att på begäran utarbeta den tekniska dokumentsamlingen till myndighe terna:
NO: Navn og adresse på den personen som har tillatelse til å sette sammen den tekniske filen til myndighetene ved forespørsel:
FI: Viranomaisten vaatiessa teknisten tietojen lomaketta lomakkeen valtuutetun laatijan nimi ja osoite:
RU: Ф.И.О и адрес лица, уполномоченного составлять техническую документацию по требованию органов власти:

James Wall,
Head of Product Safety and Regulations Flow Equipment,
Sulzer Management AG,
Neuwiesenstrasse 15,
8401 Winterthur,
Switzerland.

EN: Declare under our sole responsibility that the products:
DE: Erklärt eigenverantwortlich, daß die Produkte:
FR: Déclarons sous notre seule responsabilité que les produits:
ES: Declaramos bajo nuestra exclusiva responsabilidad que los productos:
IT: Dichiariamo sotto la nostra esclusiva responsabilità che i prodotti:
NL: Verklaan geheel onder eigen verantwoordelijkheid dat de produkten:
SV: Försäkrar under eget ansvar att produkterna:
NO: Erklærer på eget ansvar, at følgende produkter:
FI: Vakuutamme yksinomaan omalla vastuullamme, että seuraavat tuotteet:
RU: Заявляем со всей полнотой ответственности, что изделия:

EN: PC Transfer Perform Pump	NL: PC excenterwormpomp Perform
DE: PC Transferpumpe – Komfort	SV: PC perform transferpump
FR: Pompe de transfert haute performance PC	NO: PC ytelse transportpumpe
ES: Bomba PC de cavidad progresiva quick-strip	FI: Korkean suorituskyvyn siirtopumppu PC
IT: PC pompa monovite quick-strip	RU: PC Винтовой насос для сточных вод PC

EN: To which this declaration relates are in conformity with the following standards or other normative documents
DE: Auf die sich diese Erklärung bezieht, den folgenden und/oder anderen normativen Dokumenten entsprechen
FR: Auxquels se réfère cette déclaration sont conformes aux normes ou à d'autres documents normatifs
ES: Objeto de esta declaración, están conformes con las siguientes normas u otros documentos normativos
IT: Ai quali questa dichiarazione si riferisce sono conformi alla seguente norma o ad altri documenti normativi
NL: Waarop deze verklaring betrekking heeft, zijn in overeenstemming met de volgende normen of andere normatieve documenten
SV: Som omfattas av denna försäkran är i överensstämmelse med följande standarder eller andra regelgivande dokument
NO: Som dekkes av denne erklæringen, er i samsvar med følgende standarder eller andre normative dokumenter
FI: Joihin tämä vakuutus liittyy, ovat seuraavien standardien sekä muiden sääntöamäärittävien asiakirjojen mukaisia
RU: К которым применимо данное заявление, соответствуют следующим стандартам или нормативным документам.

EN: As defined by Machinery Directive 2006/42/EC, Low Voltage Directive 2014/35/EU, Outdoor Noise Directive 2000/14/EC amended by 2005/88/EC, RoHS 2011/65/EU and (EU) 2017/2102, WEEE 2012/19/EU.

DE: Wie definiert in Maschinenrichtlinie 2006/42/EG, Niederspannungsrichtlinie 2014/35/EU, Richtlinie 2000/14/EG über Geräuschemissionen geändert durch Richtlinie 2005/88/EG, RoHS 2011/65/EU und (EU) 2017/2102, WEEE 2012/19/EU.

FR: Comme définie par directive Machines 2006/42/CE, directive Basse tension 2014/35/UE, Directive sur le bruit extérieur 2000/14/CE, amendée par la directive 2005/88/CE, RoHS 2011/65/UE et (UE) 2017/2102, DEEE 2012/19/UE.

ES: Como se establece en Directiva sobre maquinaria 2006/42/EC, Directiva sobre bajo voltaje 2014/35/UE, Directiva sobre el ruido 2000/14/CE enmendada por 2005/88/CE, RoHS 2011/65/UE y (UE) 2017/2102, RAEE 2012/19/UE.

IT: Come definito in Direttiva Macchina 2006/42/CE, Direttiva Bassa tensione 2014/35/UE, Direttiva sull'emissione acustica ambientale 2000/14/CE modificata dalla direttiva 2005/88/CE, RoHS 2011/65/UE e (UE) 2017/2102, RAEE 2012/19/UE.

NL: Zoals gedefinieerd door de machinerichtlijn 2006/42/EC, laagspanningsrichtlijn 2014/35/EU, Geluidsemissierichtlijn 2000/14/EG gewijzigd door 2005/88/EG, RoHS 2011/65/EU en (EU) 2017/2102, AEEA 2012/19/EU.

SV: Såsom definierats av Maskindirektiv 2006/42/EG, Direktiv om lågspänning 2014/35/EU, Utomhusbullerdirektivet 2000/14/EC ändrat av 2005/88/EC, RoHS 2011/65/EU och (EU) 2017/2102, WEEE 2012/19/EU.

NO: I henhold til maskindirektiv 2006/42/EF, lavspennings direktivet 2014/35/EU, Utendørsstøydirektiv 2000/14/EU endret av 2005/2005/88/EU, RoHS 2011/65/EU og (EU) 2017/2102, WEEE 2012/19/EU.

FI: Määritetty näissä normeissa: Konedirektiivi 2006/42/EY, Matalajännittdirektiivi 2014/35/EU, Ulkona käytettävien laitteiden melupäästöjä koskeva direktiivi 2000/14/EY, jota on muutettu direktiivillä 2005/88/EY, RoHS 2011/65/EU ja (EU) 2017/2102, WEEE 2012/19/EU.

RU: В соответствии с директивой по механическому оборудованию 2006/42/EC, директивой по низковольтным устройствам 2014/35/EU, Директива по внешнему шуму 2000/14/EC, дополненная 2005/88/EC, RoHS 2011/65/EU и (EU) 2017/2102, WEEE 2012/19/EU.

EN ISO 12100:2010, EN 809:1998 + A1:2009 + AC:2010

Brendan Sinnott
General Manager,
Sulzer Pump Solutions Ireland Ltd.
25-07-2023

UKCA Declaration of Conformity

Manufacturer: Sulzer Pump Solutions Ireland Ltd.

Address: Clonard Road, Wexford, Ireland

Declare under our sole responsibility that the product:

PC Transfer Perform Pump

To which this declaration relates is in conformity with the following standards or other normative documents as defined by:

Supply of Machinery (Safety) Regulations 2008, S.I. 2008 No 1597

Electrical Equipment (Safety) Regulations 2016, S.I. 2016 No 1101

Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001, S.I. 2001 No 3957

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, S.I. 2012 No 3133

The Waste Electrical and Electronic Equipment (Amendment) (No. 2) Regulations 2018, S.I. 2018 No 1214

BS EN ISO 12100:2010, BS EN 809:1998 + A1:2009 + AC:2010



Brendan Sinnott
General Manager,
Sulzer Pump Solutions Ireland Ltd.
04-02-2022

PC Transfer Perform Pump**Table of contents**

1	ATEX warning statements	7
1.1	Pumps and pump units	7
2.	Installation	8
2.1	Installation and safety recommendations	8
2.1.1	General	8
2.1.2	System design & installation	8
2.2	Handling	8
2.3	Storage and infrequent operation	9
2.3.1	Short term storage	9
2.3.2	Long term storage	9
2.4	Electrical	9
2.5	Pressure relief valves and non-return valves	10
2.6	Vertical mounting.....	10
2.7	General safety.....	11
2.8	Duty conditions.....	12
3	Start-up procedure	12
3.1	Dry running.....	12
3.2	Pump rotation details	12
3.3	Gland packing	12
3.4	Mechanical seals - all pumps	13
3.5	Guards	13
3.6	Warning / Control device	13
3.7	Pump operating temperature	13
3.8	Noise levels.....	13
3.9	Lubrication.....	13
3.10	Pump units	13
3.11	Cleaning prior to operation	14
3.12	Explosive products/hazardous atmospheres	14
3.13	Access ports	14
3.14	Maintenance of wearing components	15
3.14.1	Rotor and stator	15
3.14.2	Drive shaft - packed gland	15
3.14.3	Coupling rod joints	15
3.14.4	Flexishaft drive pumps	15
3.15	Mechanical speed variators	15

4.0	Assembly and dismantling	15
4.1	Drainage	15
4.2	Use of items not approved or manufactured by Sulzer	15
4.3	Disposal of worn components	15
5	Pump coding	16
6	Recommended lifting points.....	17
7	Pump and wear part weights (kg).....	18
8	Diagnostic chart.....	19
9	Drawing reference numbers.....	20
9.1	M41 and above excluding M82	20
9.2	M82	21
9.3	M91 and above	22
9.4	M44 & M54	23
9.5	M64, M74 & M84	24
9.6	MB1 & MBL	25
10	Exploded view drawings	26
10.1	M41 - M8L	26
10.2	M82	27
10.3	M91 and above	28
10.4	M44 and M54	29
10.5	M64, M74, M84	30
10.6	MB1 and MBL.....	31
10.7	Packed gland	32
10.8	Bearing housing only.....	33
11	Drive shaft assembly with plug	34
12	Tightening torques (Nm).....	35
13	Rotor and stator change dismantling procedures.....	36
13.1	M#1, M#2, M#L	36
13.2	M#4	43
14	Complete dismantling procedures	48
14.1	M#1, M#2, M#L	48
15	Rotor and stator change assembly procedures.....	58
15.1	M#1, M#2, M#L	58
15.2	M#4	66
16	Complete assembly procedure.....	72
16.1	M#1, M#2, M#L	72
17	Pin joint lubrication.....	76
18	Recommended lubrication and service intervals	76
19	Setting lengths for mechanical seals.....	77

Symbols and notices used in this booklet:



Presence of dangerous voltage.



Non-compliance may result in personal injury.

NOTE

Important information for particular attention.

1 ATEX warning statements

1.1 Pumps and pump units

1. Where a pump or pump unit is to be installed in a potentially explosive atmosphere ensure that this has been specified at the time of purchase and that the equipment has been supplied accordingly and displays an ATEX nameplate or is supplied with a certificate of conformity. If there is any doubt as to the suitability of the equipment please contact Sulzer before commencing with installation and commissioning.
2. Process liquids or fluids should be kept within specified temperature limits otherwise the surface of pump or system components may become an ignition source due to temperature rises. Where the process liquid temperature is less than 90 °C the maximum surface temperature will not exceed 90 °C provided the pump is installed, operated and maintained in accordance with this manual. Where the process fluid temperature exceeds 90 °C the maximum surface temperature will be equal to the maximum process fluid temperature.
3. Cavities that could allow the accumulation of explosive gases, such as under guards, should where possible, be designed out of the system. Where this is not possible they should be fully purged before any work is carried out on the pump or system.
4. Electrical installation and maintenance work should only be carried out by suitably qualified and competent persons and must be in accordance with relevant electrical regulations.
5. All electrical equipment, including control and safety devices, should be suitably rated for the environment into which they are installed.
6. Where there may be a risk of an accumulation of explosive gases or dust, non-sparking tools should be used for installation and maintenance.
7. In addition to causing permanent damage to the stator, dry-running of the pump could generate a rapid rise in the temperature of the stator tube or barrel, which could become an ignition source. It is therefore essential that a dry-run protection device be fitted. This must shut the pump down immediately should a dry-run situation occur. Details of suitable devices are available from Sulzer.
8. To minimise the risk of sparking or temperature rises due to mechanical or electrical overload the following control and safety devices should be fitted in addition to a dry-run protection system:
 - (a) a pressure relief system whereby the pump can not generate pressures in excess of the maximum rated pressure or an over-pressure device which should shut the pump down when the maximum discharge pressure is exceeded.
 - (b) a control system that will shut the pump down if the motor current or temperature exceed specified limits.
 - (c) an isolator switch that will disconnect all electrical supply to the motor and ancillary electrical equipment and be capable of being locked in the off position.
 All control and safety devices should be fitted, operated and maintained in accordance with the manufacturer's instructions. All valves on the system should be open when the pump is started, otherwise serious mechanical overload and failure may result.
9. It is important that the pump rotates in the direction indicated on the nameplate. This must be checked on installation and commissioning and after any maintenance has been carried out. Failure to observe this may lead to dry-running or mechanical or electrical overload.
10. When fitting drives, couplings, belts, pulleys and guards to a pump or pump unit it is essential that these are correctly fitted, aligned, and adjusted, in accordance with the manufacturer's instructions. Failure to do so may result in sparking due to unintended mechanical contact or temperature rises due to mechanical or electrical overload or slipping of drive belts. Regular inspection of these parts must be carried out to ensure they are in good condition and replacement of any suspect part must be carried out immediately.

11. Mechanical seals should be suitably rated for the environment. The seal and any associated equipment, such as a flushing system, must be installed, operated, and maintained in accordance with the manufacturer's instructions.
12. Where a packed gland seal is fitted this must be correctly fitted and adjusted. This type of seal relies on the process liquid to cool the shaft and packing rings, so a constant drip of liquid from the gland section is required. Where this is undesirable an alternative seal type should be fitted.
13. Failure to operate or maintain the pump and ancillary equipment in line with the manufacturer's instructions may lead to premature and potentially dangerous failure of components. Regular inspection, and where necessary replacement, of bearings and lubrication is essential.
14. The pump and its components have been designed to ensure safe operation within the guidelines covered by legislation. Accordingly, Sulzer have declared the machine safe to use for the duty specified as defined by the Declaration of Conformity that is issued with this instruction manual.
15. The use of replacement parts that are not manufactured by or approved by Sulzer may affect the safe operation of the pump and it may therefore become a safety hazard to both operators and other equipment. In these circumstances the Declaration provided will become invalid. The guarantee referenced on the Terms and Conditions of Sale will also be invalidated.

2. Installation

2.1 Installation and safety recommendations

In common with other items of process plant a pump must be installed correctly to ensure satisfactory and safe operation. The pump must also be maintained to a suitable standard. Following these recommendations will ensure that the safety of personnel and satisfactory operation of the pump is achieved.

2.1.1 General

When handling harmful or objectionable materials, adequate ventilation must be provided in order to disperse dangerous concentrations of vapours. It is recommended that wherever possible, Sulzer pumps should be installed with provision for adequate lighting, thus ensuring that effective maintenance can be carried out in satisfactory conditions. With certain product materials, a hosing down facility with adequate draining will simplify maintenance and prolong the life of pump components.

Pumps operating on high temperature duties should be allowed to cool sufficiently before any maintenance is carried out.

2.1.2 System design & installation

At the system design stage, consideration must be given to provision of filler plugs, and the installation of non-return and/or isolating valves. Pumps cannot be reliably used as non-return valves. Pumps in parallel and those with high static discharge head must be fitted with non-return valves.

The pumps must also be protected by suitable devices against over-pressure and dry-running.

i. Horizontal mounting

Sulzer PC pumps are normally installed in a horizontal position with baseplates mounted on a flat surface, grouted-in and bolted, thus ensuring firm fixing and a reduction in noise and vibration.

The unit should be checked after bolting down to ensure that the alignment of the pump to its prime mover is correct.

ii. Vertical mounting

If it is intended to mount any pump in a vertical position, please consult Sulzer prior to ordering. Where a mechanical seal is fitted it must be provided with a suitable quench system.

2.2 Handling



During installation and maintenance, attention must be paid to the safe handling of all items.

For safe handling of both bareshaft pumps and pump units (pump/gearbox/motor etc.) slings should be used. The position of the slings will depend upon the specific pump/unit construction and should be carried out by personnel with the relevant experience to ensure that the pump is not damaged and injury to personnel does not occur.

If eyebolts do exist then these should only be used for lifting the individual components for which they are supplied.

ATTENTION! *Observe the total weight of the Sulzer units and their attached components! (see nameplate for weight of base unit).*

The duplicate nameplate provided must always be located and visible close to where the pump is installed (e.g. at the terminal boxes / control panel where the pump cables are connected).

NOTE: *Lifting equipment must be used if the total unit weight and attached accessories exceeds local manual lifting safety regulations.*

The total weight of the unit and accessories must be observed when specifying the safe working load of any lifting equipment! The lifting equipment, e.g. crane and chains, must have adequate lifting capacity. The hoist must be adequately dimensioned for the total weight of the Sulzer units (including lifting chains or steel ropes, and all accessories which may be attached). The end user assumes sole responsibility that lifting equipment is certified, in good condition, and inspected regularly by a competent person at intervals in accordance with local regulations. Worn or damaged lifting equipment must not be used and must be properly disposed of. Lifting equipment must also comply with the local safety rules and regulations

NOTE! *The guidelines for the safe use of chains, ropes and shackles supplied by Sulzer are outlined in the Lifting Equipment manual provided with the items and must be fully adhered to.*

2.3 Storage and infrequent operation

The situation where a pump is used infrequently is also covered by the instructions in this section.

2.3.1 Short term storage

Where a pump has to be stored for six months or less then the following steps are advised:

1. Store pump inside wherever possible or if this is not feasible then provide protective covering. Do not allow moisture to collect around the pump.
2. Remove the drain plug if fitted. Any inspection plates fitted should also be removed to ensure that the suction housing can drain and dry completely.
3. Loosen the packed gland and inject sufficient grease into the stuffing box. Tighten the gland nut hand tight. If a water flush system is to be used do not grease. A small amount of light oil is recommended for these.
4. See manufacturers instructions for motor/gearbox/drive instructions for storage procedures.

2.3.2 Long term storage

If the pump is to be kept in storage for more than six months, then in addition to the above, the following procedures should be carried out regularly (every 2 - 3 weeks if possible):

1. If practicable rotate the pump at least three quarters of one revolution to avoid the rotor setting in the stator.
2. Note, however, that the pump is not to be rotated for more than two revolutions each time because damage could be caused to the rotor/stator elements.



Before installing the pump after storage please ensure that all plugs and inspection plates are replaced and that excess grease/oil is removed from the stuffing box.

2.4 Electrical



Electrical connection should only be made using equipment suitable for both rating and environment.

Where any doubts exist regarding the suitability of equipment, Sulzer should be consulted before proceeding. Normally the Sulzer pump should be installed with starting equipment arranged to give direct-on-line starting.

Earthing points will be provided on electric drives (if supplied) and it is essential that these are correctly connected. When the motor is being wired and checked for rotation, the start/stop sequence must be instantaneous to prevent dry running (see Section 3) or pressurising upstream equipment (check direction arrow on pump nameplate). The electrical installation should include appropriate isolating equipment to ensure that the pump, drive and motor, or macerator grinder motor is safe to work on.

2.5 Pressure relief valves and non-return valves

1. It is recommended that a suitable safety device is installed on the discharge side of the pump to prevent over-pressurisation of the system.
2. It is also recommended that a non-return valve is installed on the discharge side of the pump to prevent reverse flow through the system.

When both are installed it is advised that the relief valve is positioned closer to the pump than the non-return valve.



The pump must never run against a closed inlet or outlet valve, as this could result in mechanical failure.

2.6 Vertical mounting

Care must be taken when lifting the pump into the vertical position. Normally these pumps will be designed with a sole plate that will be bolted to the installation framework.

All vertically mounted pumps require a constant level oiler to be fitted to the gland section in order to prevent the mechanical seals dry running. The oilers will be supplied loose with the pump to avoid damage during transit, so upon receipt of the equipment they will need to be installed prior to operation.

Instructions for fitting the oilers are as follows:

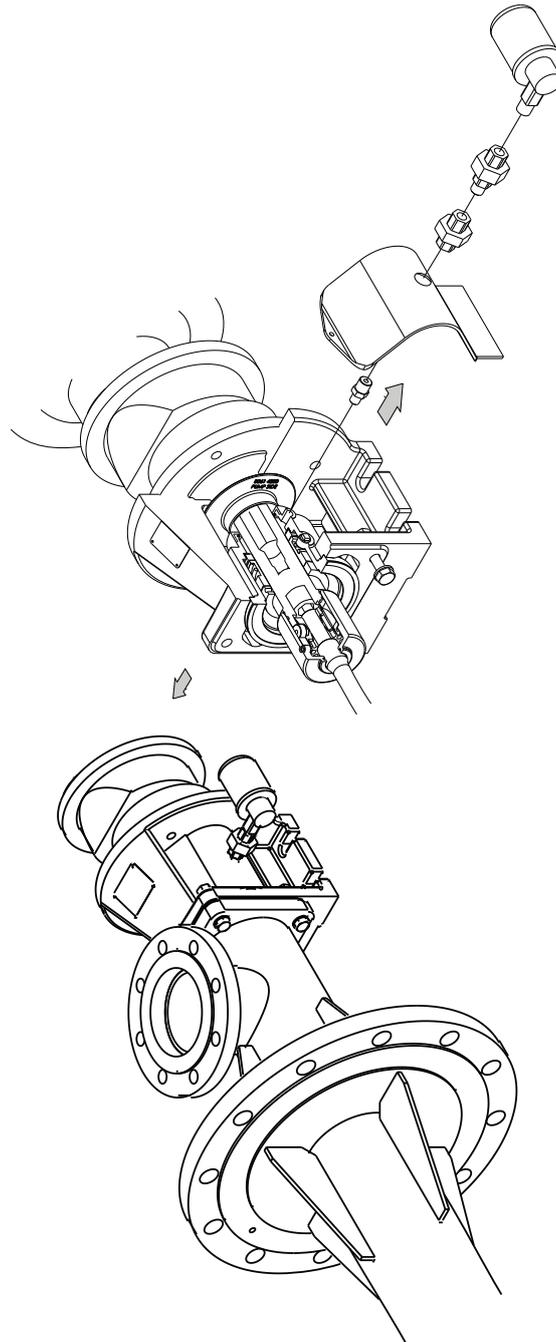


Figure 1. Fitting of constant level oilers.

2.7 General safety



All guards and removable covers must be in place and securely fitted while the machine is running.



Great care must be taken to protect all electrical equipment from splashing when hosing down. Where Sulzer have supplied a bareshaft pump the onus is on the user to fit adequate guards in compliance with the requirements of the relevant regulations.



Inspection port covers/ports must not be opened while the machine is running.

All nuts and bolts, securing flanges and base mounting fixtures must be checked for tightness before operation. To eliminate vibration, the pump must be correctly aligned with the drive unit, and all guards must be securely fixed in position. When commissioning the plant, all joints in the system must be checked thoroughly for leakage.

If, when starting, the pump does not appear to operate correctly (see Section 3), the plant must be shut down immediately and the cause of the malfunction established before operations are recommenced. It is recommended that, depending upon plant system operation, either a combined vacuum and pressure gauge or a vacuum gauge only be fitted to the pump inlet port, and a pressure gauge fitted to the outlet port. These will then continuously monitor the pump operating conditions.

May contain substances from the ECHA SVHC Candidates List (REACH - Regulation (EC) No. 1907/2006).

2.8 Duty conditions

Pumps should only be installed on duties for which Sulzer have specified the materials of construction, flow rates, pressure, temperature, speed etc. Where dangerous materials are to be pumped, consideration must be given to the safe discharge from relief valves, gland drains etc.



If the duty should be changed, Sulzer should be contacted and their recommendations sought in the interest of application, safety of plant, efficiency, and pump life.

3 Start-up procedure

Pumps must be filled with liquid before starting. The initial filling is not for priming purposes, but to provide the necessary lubrication of the stator until the pump primes itself. When the pump is stopped, sufficient liquid will normally be trapped in the rotor/stator assembly to provide lubrication upon re-starting.

If however, the pump has been left standing for an appreciable time, moved to a new location, or has been dismantled and re-assembled, it must be refilled with liquid and given a few turns before starting. The pump is normally somewhat stiff to turn by hand owing to the close rotor/stator fit. However, this stiffness disappears when the pump is running normally against pressure.

3.1 Dry running



Never run the pump in a dry condition even for a few revolutions or the stator will be damaged immediately. Continual dry running could produce some harmful or damaging effects.

3.2 Pump rotation details

PC transfer pumps are bi-directional. Anti-clockwise determines that the inlet is at the drive end.



Before the direction of rotation is changed, Sulzer must be consulted so that the suitability of the pump can be confirmed when operating on the new duty.

3.3 Gland packing

Where a pump is supplied fitted with gland packing (manufactured from a non-asbestos material), the gland will require adjustment during the initial running-in period. Newly packed glands must be allowed to run-in with only finger-tight compression on the gland follower nuts. This should continue for about three days. The gland follower should be gradually tightened over the next week to achieve a leakage rate as shown in the table below. Gland followers should be adjusted at regular intervals to maintain the recommended leakage flow rate.

Under normal working conditions a slight drip from the gland under pressure assists in cooling and lubricating the packing. A correctly adjusted gland will always have a small leakage of fluid.



When properly adjusted, packed gland sealing systems will always have a small leakage of potentially hazardous fluid. Adequate personal protective equipment must be worn at all times to prevent injury from hazardous leakage.

Typical leakage rates from packed glands:

Up to 50mm shaft diameter	2 drops per minute
50 ... 75mm shaft diameter	3 drops per minute
75 ... 100mm shaft diameter	4 drops per minute
100 ... 125mm shaft diameter	5 drops per minute
125 ... 160mm shaft diameter	6 drops per minute

A gland drip is, however, undesirable when handling corrosive, degreasing, or abrasive materials. Under these conditions the gland must be tightened the minimum amount whilst the pump is running, to ensure satisfactory sealing when under pressure, or to stop entry of air when under suction conditions.

The gland leakage of toxic, corrosive or hazardous liquids can cause problems of compatibility with the construction materials of the pumps.

Provision of a gland drain should be considered, especially for the leakage of hazardous products.



Care is required when adjusting the gland whilst the pump is running.

3.4 Mechanical seals - all pumps

When a mechanical seal is fitted to the pump it may be necessary to provide a barrier fluid to some part of the seal. This should be provided in line with the seal manufacturers instructions.

3.5 Guards



In the interests of safety, all guards must be replaced after necessary adjustments have been made to the pump.

3.6 Warning / Control device

Prior to operating the pump, if any warning or control devices are fitted, these must be set in accordance with their specific instructions.

3.7 Pump operating temperature

The range of temperatures the pump surfaces will develop is dependent upon factors such as product temperature and ambient temperature of the installation. There may be instances where the external pump surface can exceed 50 °C.

In these instances, personnel must be made aware of this and suitable warnings/guarding used.

3.8 Noise levels

1. The sound pressure level should not exceed 85dB at one metre distance from the pump.
2. This is based on a typical installation and does not necessarily include noise from other sources or any contribution from building reverberation or installation pipework.
3. It is recommended that the actual pump unit noise levels are ascertained once the unit is installed and running at duty conditions.

3.9 Lubrication

Pumps fitted with bearings should be inspected periodically to see if grease replenishment is necessary, and if so, grease should be added until the chambers at the ends of the bearing spacer are approximately one third full.

Periodic bearing inspection is necessary to maintain optimum bearing performance. The most expedient time to inspect is during periods of regular scheduled equipment downtime for routine maintenance, or downtime for any other reason.

Under tropical or other arduous conditions however, a more frequent examination may be necessary. It is therefore advisable to establish a correct maintenance schedule or periodic inspection.

BP LC2 / Mobilgrease XHP 222 or their equivalent must be used for replenishment.

3.10 Pump units

Where a pump unit is dismantled and re-assembled, consideration must be given to ensure that where appropriate the following steps are covered.

1. Correct alignment of pump/gearbox.
2. Use of appropriate couplings and bushes.
3. Use of appropriate belts and pulleys correctly tensioned.

3.11 Cleaning prior to operation

i. Non-food use

During the commissioning of a new pump or re-commissioning of an overhauled pump, it is advisable to clean the pump prior to the initial operation of the pump in the process.

ii. Food use

When a pump has been supplied for a food application, it is important to ensure that the pump is clean prior to initial operation of the pump.

Therefore, it is important that a clean-in-place treatment is executed on the pump at the following times:

1. When the pump is first commissioned for use.
2. When any spare components are fitted into the wetted area of the pump.

A recommended CIP procedure is as follows:

Caustic wash: LQ94 ex Lever Diversey or equivalent 2% concentration.

Acid wash: P3 Horolith 617 ex Henkel Ecolab or equivalent 1% concentration.

Procedure:

1. Caustic wash @ 75 °C for 20 mins
 2. Water rinse @ 80 °C for 20 mins
 3. Acid wash @ 50 °C for 20 mins
 4. Water rinse @ 80 °C for 20 mins
- CIP flow rates (hence pump speeds) should be maximised to achieve highest level of cleanability. A C.I.P. liquid velocity of 1.5 to 2.0 m/s is required for removal of solids and soiling. Pumps fitted with CIP by-pass ports will permit higher flow rates without the need to increase pump speed.
 - The use of neat active caustic and acid chemicals is not recommended. Proprietary cleaning agents should be used in line with manufacturers instructions.
 - All seals and gaskets should be replaced with new if disturbed during maintenance.
 - Pump internals should be regularly inspected to ensure hygienic integrity is maintained, especially with respect to elastomeric components and seals, and replaced if necessary. The four stages constitute one cycle and we recommend that this cycle is used to clean the pump before use on food. Once the pump has been commissioned, the cleaning process will depend upon the application. The user must therefore ensure that their cleaning procedures are suitable for the duty for which the pump has been purchased.

3.12 Explosive products/hazardous atmospheres

In certain instances the product being pumped may well be of a hazardous nature.

In these installations consideration must be given to provide suitable protection and appropriate warnings to safeguard personnel and plant.

3.13 Access ports



Where access ports are fitted then the following steps must be followed prior to removal:

1. Pump must be shut down and the electrical supply isolated.
2. Protective clothing should be worn, especially if the pumped product is obnoxious.
3. Remove access plate with care, utilising where possible, drip trays to collect product leakage.

Access ports are included to assist in removing blockages and to allow a visual check on the components within the suction chamber. It is not to be considered as an additional method in dismantling the pump. Re-assembly of the plate should be completed using new gaskets prior to the pump being switched on.

3.14 Maintenance of wearing components

3.14.1 Rotor and stator

The wear rate on these components is dependent on many factors, such as product abrasivity, speed, pressure etc. When pump performance has reduced to an unacceptable level one or possibly both items will need replacing.

3.14.2 Drive shaft - packed gland

The wear rate of the gland area is dependent on many factors such as product abrasivity and speed. Regular gland maintenance will maximise the life of the shaft. Replacement of both the gland packing and shaft will be necessary when shaft sealing becomes difficult to achieve.

3.14.3 Coupling rod joints

Regular maintenance and lubrication will maximise life of the joints.

Replacement of one or both joint assemblies, and possibly the coupling rod, may be necessary when wear is apparent.

To ensure maximum life, it is essential to replace all the joint items with genuine Sulzer parts.

3.14.4 Flexishaft drive pumps

With this design there are no wearing items to replace in the drive train, however, if during routine inspection the shaft is visibly damaged / distorted or the protective coating is damaged, then this item should be replaced to avoid unexpected breakdowns.

3.15 Mechanical speed variators

Refer to the manufacturers instructions.

These machines require regular maintenance, which typically includes weekly adjustment through the full speed range.

4.0 Assembly and dismantling

Sections 13 - 16 contain the steps to dismantle and re-assemble the pump. All fastenings must be tightened securely and when identified the appropriate torque figures should be used (see Section 12).

4.1 Drainage

A drainage port may be provided on the suction chamber and/or end cover.

4.2 Use of items not approved or manufactured by Sulzer

The pump and its components have been designed to ensure that the pump will operate safely within the guidelines covered by legislation.

As a consequence, Sulzer have declared the machine safe to use for the duty specified as defined by the Declaration of Conformity that is issued with this Instruction Manual.

The use of replacement items that are not approved by or manufactured by Sulzer may affect the safe operation of the pump and it may therefore become a safety hazard to both operators and other equipment. In these instances the declaration provided will therefore become invalid. The guarantee referenced in the Terms and Conditions of Sale will also be invalidated if replacement items are used that are not approved or manufactured by Sulzer.

4.3 Disposal of worn components



When replacing wearing parts, please ensure disposal of used parts is carried out in compliance with local environmental legislation. Particular care should be taken when disposing of lubricants.

5 Pump coding

Range	Transfer Perform	M							
Size	22 m³/h @ 1000 rpm		4						
	37 m³/h @ 800 rpm		5						
	57 m³/h @ 700 rpm		6						
	79 m³/h @ 600 rpm		7						
	97 m³/h @ 500 rpm		8						
	125 m³/h @ 450 rpm		9						
	165 m³/h @ 400rpm		A						
	225 m³/h @ 350 rpm		B						
Stages (max. pressure)	Single stage extended pitch, 4 - 6 Bar			L					
	Single stage, 6 Bar			1					
	Two stage, 12 Bar			2					
	Four stage, 24 Bar			4					
Casing Material	Cast Iron						C		
	Stainless steel						S		
Rotating Parts	Alloy steel with HCP							1	
	Stainless steel AISI 316							2	
	Stainless steel AISI 316 + HCP							3	
Rotor Size	Mk 0 (oversized)								Z
	Mk 1 (standard)								A
	Mk 3 (temperature)								C
	Mk 5 (temperature)								E
Stator Material	Natural								A
	EPDM								E
	High nitrile								J
	Nitrile NBR								R
	Fluoroelastomer / Viton								V
	Hypalon								H
	White NBR								W
	Polyester based urethane								K
	Polyether based urethane								Y
Seal Type	Mechanical seal								M
	Packed gland								P
Build Option	A-size body								1
	B-size body								2

Example:

M 4 L C 3 A R M 2

6 Recommended lifting points

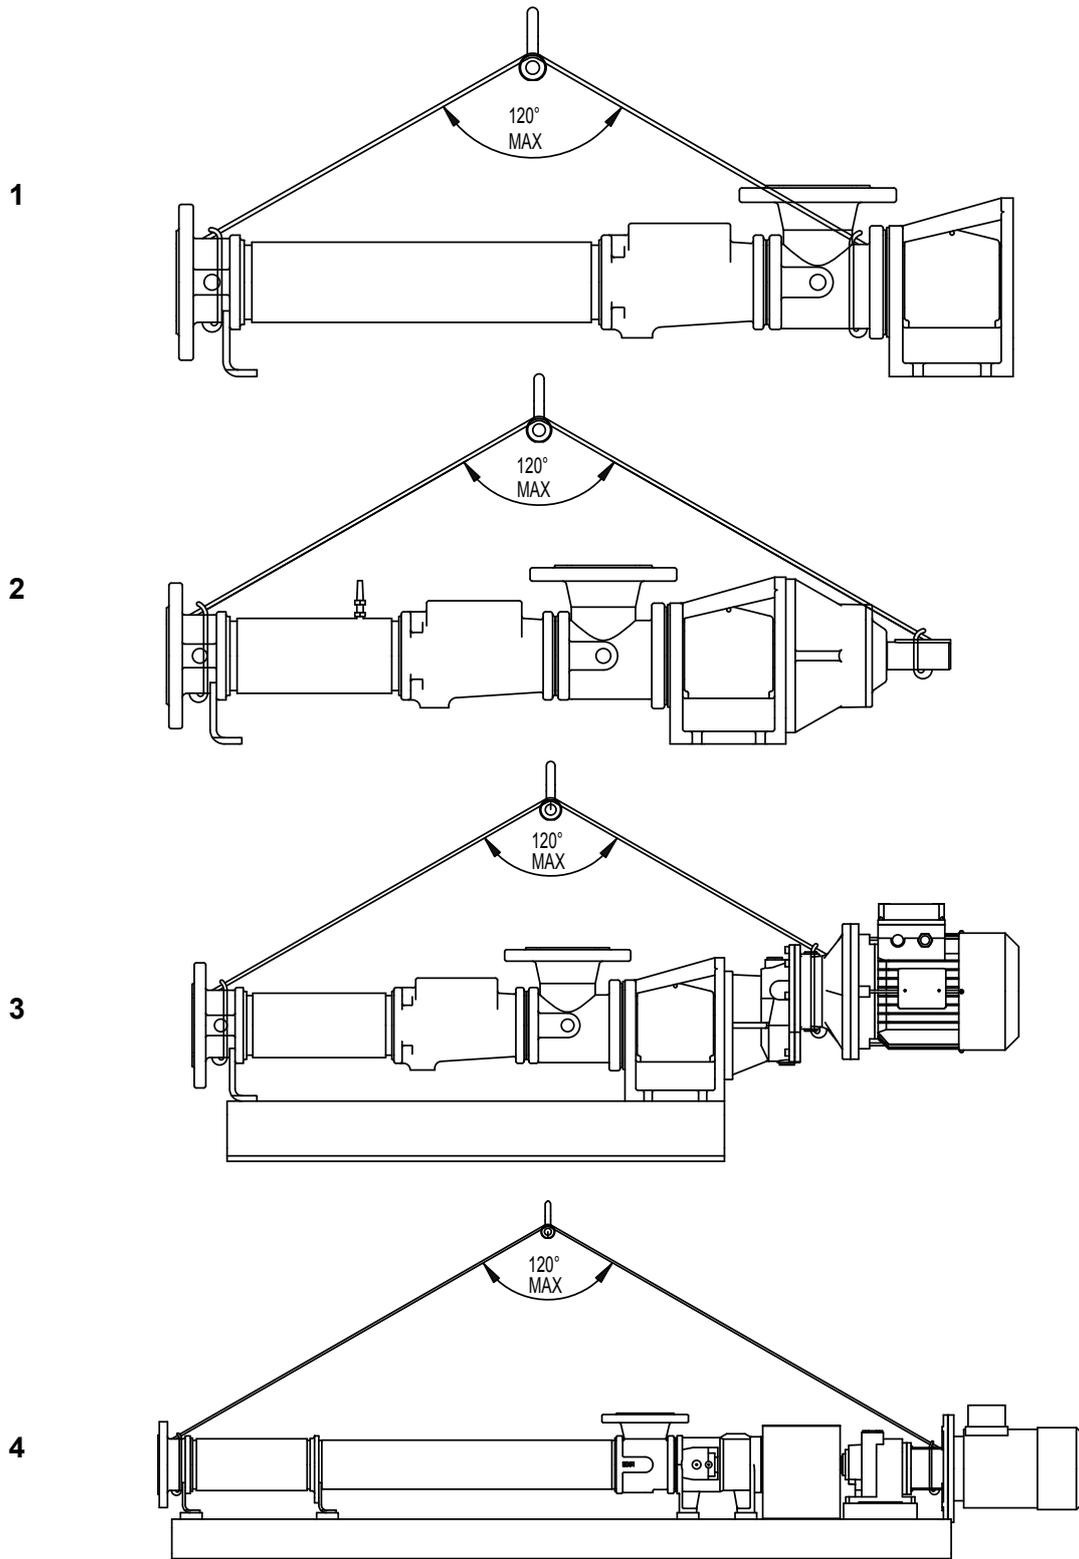


Figure 2. recommended lifting points

*Choke

7 Pump and wear part weights (kg)

Model	Pump	Stator	Rotor	Coupling Rod / Joint	Coupling Rod / Joint	Shaft
M41	34.0	3.5	2.6	1.2	1.3	1.7
M42	46.0	7.1	4.5	1.2	1.3	1.7
M44	72.0	14.0	9.2	2.4	2.7	3.1
M4L	42.0	7.1	4.5	1.2	1.3	1.7
M51	50.0	6.3	4.9	1.2	1.3	1.7
M52	70.0	12.4	9.1	2.4	2.7	3.1
M54	106.0	24.5	18.0	4.9	4.9	4.4
M5L	57.0	12.3	8.8	1.2	1.3	1.7
M61	77.0	11.0	8.4	2.4	2.7	3.1
M62	100.0	21.5	15.4	4.9	2.7	4.4
M64	186.0	42.5	30.2	12.3	17.9	8.7
M6L	94.0	5.0	15.3	2.4	2.7	3.1
M71	107.0	17.4	13.3	4.9	4.9	4.3
M72	150.0	34.3	24.5	4.6	4.9	4.3
M74	258.0	68.0	48.9	15.3	21.7	8.7
M7L	148.0	34.3	24.5	4.6	4.9	4.3
M81	112.0	23.1	17.9	6.2	4.9	4.3
M82	176.0	24.6	33.7	12.3	17.9	8.7
M84	297.0	87.0	65.7	15.3	21.7	9.5
M8L	171.0	45.0	33.0	6.2	4.9	4.3
M91	181.0	41.7	25.8	12.3	17.9	8.7
M92	292.0	65.9	47.6	12.3	17.9	8.7
M9L	276.0	67.2	47.6	12.3	17.9	8.7
MA1	221.0	37.4	38.8	12.3	17.7	8.7
MA2	361.0	74.4	72.4	15.3	21.7	9.5
MAL	307.0	74.4	71.4	12.3	17.9	8.7
MB1	355.0	64.5	68.1	15.3	21.7	9.5
MBL	479.0	122.9	126.8	15.3	21.7	9.5

8 Diagnostic chart

Symptoms	Possible causes
1. NO DISCHARGE	1. 2. 3. 7. 26. 28. 29.
2. LOSS OF CAPACITY	3. 4. 5. 6. 7. 8. 9. 10. 22. 13. 16. 17. 21. 22. 23. 29
3. IRREGULAR DISCHARGE	3. 4. 5. 6. 7. 8. 13. 15. 29.
4. PRIMING LOST AFTER START	3. 4. 5. 6. 7. 8. 13. 15
5. PUMP STALLS AT START UP	8. 11. 24.
6. PUMP OVERHEATS	8. 9. 11. 12. 18. 20
7. MOTOR OVERHEATS	8. 11. 12. 15. 18. 20.
8. EXCESSIVE POWER ABSORBED BY PUMP	8. 11. 12. 15. 18. 20
9. NOISE AND VIBRATION	3. 4. 5. 6. 7. 8. 9. 11. 13. 15. 18. 19. 20. 22. 23. 27. 31
10. PUMP ELEMENT WEAR	9. 11.
11. EXCESSIVE GLAND OR SEAL WEAR	12. 14. 25. 30.
12. GLAND LEAKAGE	13. 14.
13. SEIZURE	9. 11. 12. 20.
List of causes	Remedial actions
1. Incorrect direction of rotation	1. Reverse motor
2. Pump unprimed	2. Bleed system of air/gas
3. Insufficient NPSH available	3. Increase suction head or reduce speed/temp.
4. Product vaporising in supply line	4. Increase NPSH available (see 3 above)
5. Air entering supply line	5. Check pipe joints/gland adjustment
6. Insufficient head above supply vessel outlet	6. Raise vessel/increase pipe size
7. Foot valve/strainer obstructed or blocked	7. Clean out suction line/valves
8. Product viscosity above rated figure	8. Decrease pump speed/increase temp.
9. Product temp. above rated figure	9. Cool the product
10. Product viscosity below rated figure	10. Increase pump speed/reduce temp.
11. Delivery pressure above rated figure	11. Check for blockages in delivery line
12. Gland overtight	12. Adjust gland see o&m instructions
13. Gland undertight	13. Adjust gland see o&m instructions
14. Gland flushing inadequate	14. Check fluid flows freely into gland
15. Pump speed above rated figure	15. Decrease pump speed
16. Pump speed below rated figure	16. Increase pump speed
17. Belt drive slipping	17. Re-tension belts
18. Coupling misaligned	18. Check and adjust alignment
19. Insecure pump/drive mounting	19. Check and tighten all pump mountings
20. Shaft bearing wear/failure	20. Replace bearings
21. Worn pump element	21. Fit new parts
22. Relief valve chatter	22. Check condition of valve/renew
23. R.V. incorrectly set	23. Re-adjust spring compression
24. Low voltage	24. Check voltage/wiring sizes
25. Product entering packing area	25. Check packing condition and type
26. Drive train breakage	26. Check and replace broken components
27. Negative or very low delivery head	27. Close delivery valve slightly
28. Discharge blocked/valve closed	28. Reverse pump/relieve pressure/clear blockages
29. Stator turning	29. Replace worn parts/tighten up stator bolts
30. Stuffing box 'eats' packing	30. Check for worn shaft and replace
31. Vee belts	31. Check and adjust tension or replace

9 Drawing reference numbers**9.1 M41 and above excluding M82**

Drawing reference	Description	Drawing reference	Description
01A	Body	P104	Hex head bolt
06A	Nameplate (SOG)	P105	Hex nut
06B	Nameplate (DOG)	P106	Plain washer
10A	Mechanical seal	P107	Spring washer
15A	Thrower guard	P109	Hex nut
20A	Gasket - gland	P201	Tapered plug
20D	Suction chamb gasket	P202	Tapered plug
22A	Stator	P301	Socket capscrew
23A	Suction chamber	P302	Nyloc nut
23C	Suction chmb ext flange (stator side)	P401	Seal ring
23D	Suction chamb ext piece (drive side)	P402	Seal ring
23E	Suction chamb halves	P403	Spiral retaining ring
24A	End cover	P404	Spiral retaining ring
25A	Rotor	P405	Tie sealing cover
26B	Split coupling rod (rotor side)	P406	Tie sealing cover
26C	Split coupling rod (shaft side)	P501	Tapered plug
27A	Coupling rod bush	P502	Hex head bolt
27B	Coupling rod bush	P503	Stud
28A	Sealing cover	P504	Plain washer
28B	Sealing cover	P505	Hex nut
29A	Coupling rod pin	P506	Domed nut
29B	Coupling rod pin	P507	Hex head bolt
29C	Shaft pin	P508	Stud
32A	Drive shaft	P509	Plain washer
42A	Thrower	P510	Hex nut
62A	Support foot	P511	Domed nut
65A	Mechanical seal carrier	P512	Socket cap screw
66A	Abutment ring	P513	Domed nut
75A	Rotor/shaft sleeve	P514	Seal ring
75B	Rotor/shaft sleeve	P515	Stud
76A	Stator clamp	P516	Plain washer
		P517	Spring washer
		P518	Hex nut
		P519	Tapered plug
		P533	Spiral retaining ring
		P601	Hex head bolt
		P602	Spring washer
		P603	Plain washer
		P604	Hex nut

9.2 M82

Drawing reference	Description	Drawing reference	Description
01A	Body	P104	Hex head bolt
01C	Body adaptor	P105	Hex nut
06A	Nameplate (SOG)	P106	Plain washer
06B	Nameplate (DOG)	P107	Spring washer
10A	Mechanical seal	P109	Hex nut
15A	Thrower guard	P201	Tapered plug
20A	Gasket - gland	P202	Tapered plug
20B	Gasket - gland	P301	Socket capscrew
20D	Suction chamb half gasket	P302	Nyloc nut
22A	Stator	P401	Seal ring
23A	Suction chamber	P402	Seal ring
23C	Suction chmb ext flange (stator side)	P403	Spiral retaining ring
23D	Suction chamb ext piece (drive side)	P404	Spiral retaining ring
23E	Suction chamb half	P405	Tie sealing cover
24A	End cover	P406	Tie sealing cover
25A	Rotor	P501	Tapered plug
26B	Split coupling rod (rotor side)	P502	Hex head bolt
26C	Split coupling rod (shaft side)	P503	Stud
27A	Coupling rod bush	P504	Plain washer
27B	Coupling rod bush	P505	Hex nut
28A	Sealing cover	P506	Domed nut
28B	Sealing cover	P507	Hex head bolt
29A	Coupling rod pin	P508	Stud
29B	Coupling rod pin	P509	Plain washer
29C	Shaft pin	P510	Hex nut
32A	Drive shaft	P511	Domed nut
42A	Thrower	P512	Socket capscrew
62A	Support foot	P513	Domed nut
65A	Mechanical seal carrier	P514	Seal ring
66A	Abutment ring	P515	Stud
75A	Rotor/shaft sleeve	P516	Plain washer
75B	Rotor/shaft sleeve	P517	Spring washer
76A	Stator clamp	P518	Hex nut
		P519	Tapered plug
		P520	Stud
		P521	Plain washer
		P522	Spring washer
		P523	Hex nut
		P524	Stud
		P533	Spiral retaining ring
		P601	Hex head bolt
		P602	Spring washer
		P603	Plain washer
		P604	Hex nut

9.3 M91 and above

Drawing reference	Description	Drawing reference	Description
01A	Body	P104	Hex head bolt
06A	Nameplate (SOG)	P105	Hex nut
06B	Nameplate (DOG)	P106	Plain washer
10A	Mechanical seal	P107	Spring washer
15A	Thrower guard	P109	Hex nut
20A	Gasket - gland	P201	Tapered plug
20D	Suction chamb gasket	P202	Tapered plug
22A	Stator	P301	Socket capscrew
23A	Suction chamber	P302	Nyloc nut
23C	Suction chmb ext flange (stator side)	P401	Seal ring
23D	Suction chamb ext piece (drive side)	P402	Seal ring
23E	Suction chamb halves	P403	Spiral retaining ring
24A	End cover	P404	Spiral retaining ring
25A	Rotor	P405	Tie sealing cover
26B	Split coupling rod (rotor side)	P406	Tie sealing cover
26C	Split coupling rod (shaft side)	P501	Tapered plug
27A	Coupling rod bush	P502	Hex head bolt
27B	Coupling rod bush	P504	Plain washer
28A	Sealing cover	P506	Domed nut
28B	Sealing cover	P507	Hex head bolt
29A	Coupling rod pin	P509	Plain washer
29B	Coupling rod pin	P512	Socket capscrew
29C	Shaft pin	P513	Domed nut
32A	Drive shaft	P514	Seal ring
42A	Thrower	P515	Stud
62A	Support foot	P516	Plain washer
65A	Mechanical seal carrier	P517	Spring washer
66A	Abutment ring	P518	Hex nut
75A	Rotor/shaft sleeve	P519	Tapered plug
75B	Rotor/shaft sleeve	P525	Hex head bolt
76A	Stator clamp	P526	Plain washer
		P527	Spring washer
		P528	Hex nut
		P529	Hex head bolt
		P530	Plain washer
		P531	Spring washer
		P532	Hex nut
		P533	Spiral retaining ring
		P601	Hex head bolt
		P602	Spring washer
		P603	Plain washer
		P604	Hex nut

9.4 M44 & M54

Drawing reference	Description	Drawing reference	Description
01A	Body	P104	Hex head bolt
06A	Nameplate (SOG)	P105	Hex nut
06B	Nameplate (DOG)	P106	Plain washer
10A	Mechanical seal	P107	Spring washer
15A	Thrower guard	P109	Hex nut
20B	Gasket - gland	P201	Tapered plug
20D	Suct chamb half gasket	P202	Tapered plug
22A	Stator	P301	Socket cap screw
23A	Suction chamber	P302	Nyloc nut
23C	Suction chmb ext flange (stator side)	P401	Seal ring
23D	Suction chamb ext piece (drive side)	P402	Seal ring
23E	Suction chamb half	P403	Spiral retaining ring
24A	End cover	P404	Spiral retaining ring
25A	Rotor	P405	Tie sealing cover
26B	Split coupling rod (rotor side)	P406	Tie sealing cover
26C	Split coupling rod (shaft side)	P501	Hex nut
27A	Coupling rod bush	P502	Spring washer
27B	Coupling rod bush	P503	Plain washer
28A	Sealing cover	P507	Hex head bolt
28B	Sealing cover	P508	Plain washer
29A	Coupling rod pin	P509	Plain washer
29B	Coupling rod pin	P510	Spring washer
29C	Shaft pin	P511	Hex nut
32A	Drive shaft	P516	Stud
42A	Thrower	P518	Plain washer
62A	Support foot	P519	Spring washer
65A	Mechanical seal carrier	P520	Hex nut
66A	Abutment ring	P526	Tapered plug
75A	Rotor/shaft sleeve	P528	Tapered plug
75B	Rotor/shaft sleeve	P539	Seal ring
95A	Tie rod	P540	Socket cap screw
		P541	Hex nut
		P550	Hex head bolt
		P551	Plain washer
		P552	Spring washer
		P601	Hex head bolt
		P602	Spring washer
		P603	Plain washer
		P604	Hex nut

9.5 M64, M74 & M84


Drawing reference	Description	Drawing reference	Description
01A	Body	P102	Plain washer
01B	Body adaptor	P104	Hex head bolt
06A	Nameplate (SOG)	P105	Hex nut
06B	Nameplate (DOG)	P106	Plain washer
10A	Mechanical seal	P107	Spring washer
15A	Thrower guard	P109	Hex nut
20A	Gasket - gland	P201	Tapered plug
20B	Gasket - gland	P202	Tapered plug
20D	Suction chamb half gasket	P301	Socket cap screw
22A	Stator	P302	Nyloc nut
23A	Suction chamber	P401	Seal ring
23C	Suction chamb ext flange (stator side)	P402	Seal ring
23D	Suction chamb ext piece (drive side)	P403	Spiral retaining ring
23E	Suction chamb half	P404	Spiral retaining ring
24A	End cover	P405	Tie sealing cover
25A	Rotor	P406	Tie sealing cover
26B	Split coupling rod (rotor side)	P501	Hex nut
26C	Split coupling rod (shaft side)	P502	Spring washer
27A	Coupling rod bush	P503	Plain washer
27B	Coupling rod bush	P516	Stud
28A	Sealing cover	P518	Plain washer
28B	Sealing cover	P519	Spring washer
29A	Coupling rod pin	P520	Hex nut
29B	Coupling rod pin	P526	Tapered plug
29C	Shaft pin	P528	Tapered plug
32A	Drive shaft	P530	Stud
42A	Thrower	P531	Spring washer
62A	Support foot	P532	Plain washer
65A	Mechanical seal carrier	P533	Hex nut
66A	Abutment ring	P534	Stud
75A	Rotor/shaft sleeve	P535	Hex nut
75B	Rotor/shaft sleeve	P536	Plain washer
95A	Tie rod	P537	Spring washer
		P539	Seal ring
		P540	Socket cap screw
		P541	Hex nut
		P550	Hex head bolt
		P551	Plain washer
		P552	Spring washer
		P601	Hex head bolt
		P602	Spring washer
		P603	Plain washer
		P604	Hex nut

9.6 MB1 & MBL

Drawing reference	Description	Drawing reference	Description
01A	Body	P102	Plain washer
06A	Nameplate (SOG)	P104	Hex head bolt
06B	Nameplate (DOG)	P105	Hex nut
10A	Mechanical seal	P106	Plain washer
15A	Thrower guard	P107	Spring washer
20A	Gasket - gland	P109	Hex nut
20D	Suct chamb half gasket	P201	Tapered plug
22A	Stator	P202	Tapered plug
23A	Suction chamber	P301	Socket cap screw
23C	Suction chamb ext flange (stator side)	P302	Nyloc nut
23D	Suction chamb ext piece (drive side)	P401	Seal ring
23E	Suction chamb half	P402	Seal ring
24A	End cover	P403	Spiral retaining ring
25A	Rotor	P404	Spiral retaining ring
26B	Split coupling rod (rotor side)	P405	Tie sealing cover
26C	Split coupling rod (shaft side)	P406	Tie sealing cover
27A	Coupling rod bush	P501	Hex nut
27B	Coupling rod bush	P502	Spring washer
28A	Sealing cover	P504	Plain washer
28B	Sealing cover	P506	Domed nut
29A	Coupling rod pin	P507	Hex head bolt
29B	Coupling rod pin	P509	Plain washer
29C	Shaft pin	P512	Socket cap screw
32A	Drive shaft	P513	Domed nut
42A	Thrower	P514	Seal ring
62A	Support foot	P515	Stud
62B	Support foot	P516	Plain washer
65A	Mechanical seal carrier	P517	Spring washer
66A	Abutment ring	P518	Hex nut
75A	Rotor/shaft sleeve	P519	Tapered plug
75B	Rotor/shaft sleeve	P529	Hex head bolt
76A	Stator clamp	P530	Plain washer
		P531	Spring washer
		P533	Spiral retaining ring
		P601	Hex head bolt
		P602	Spring washer
		P603	Plain washer
		P604	Hex nut


10 Exploded view drawings

10.1 M41 - M8L

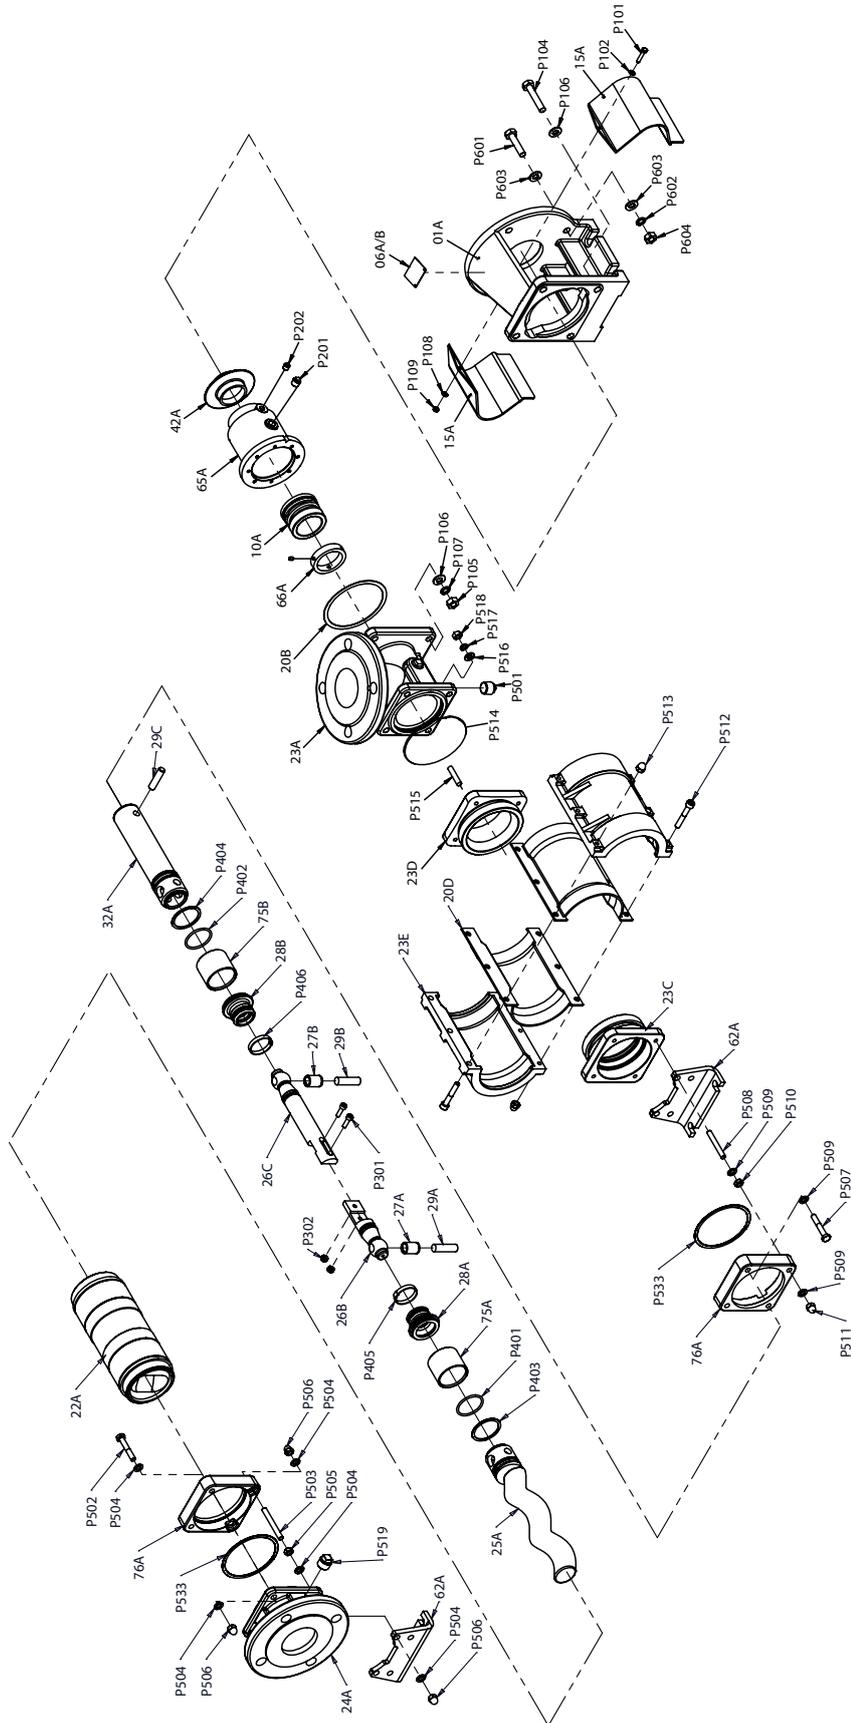


1301-01

10.2 M82

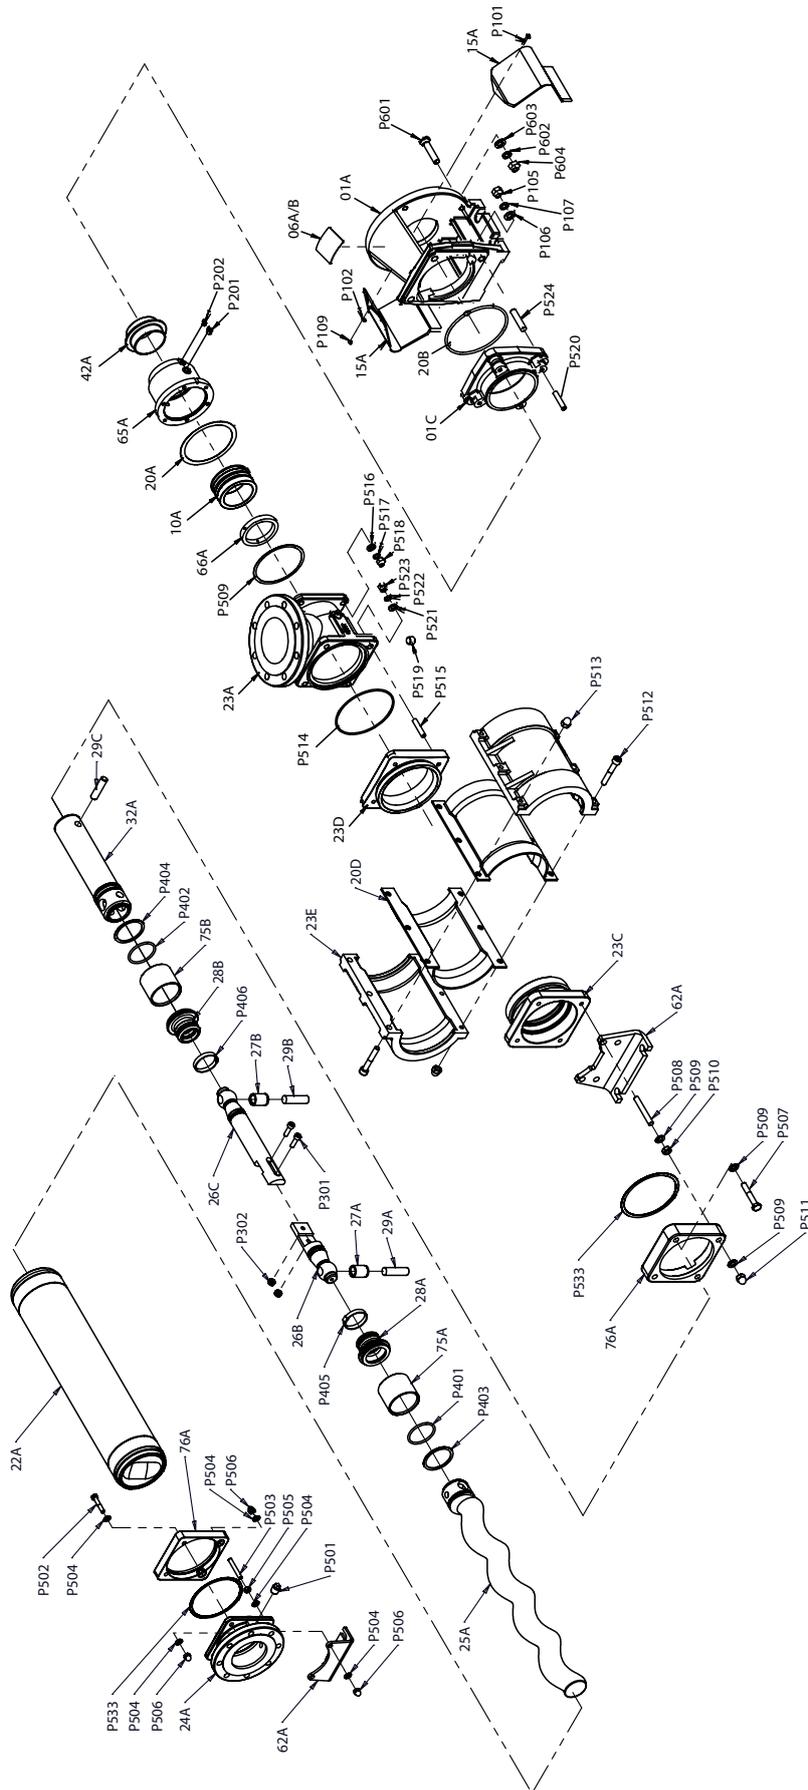


1302-01

10.3 M91 and above

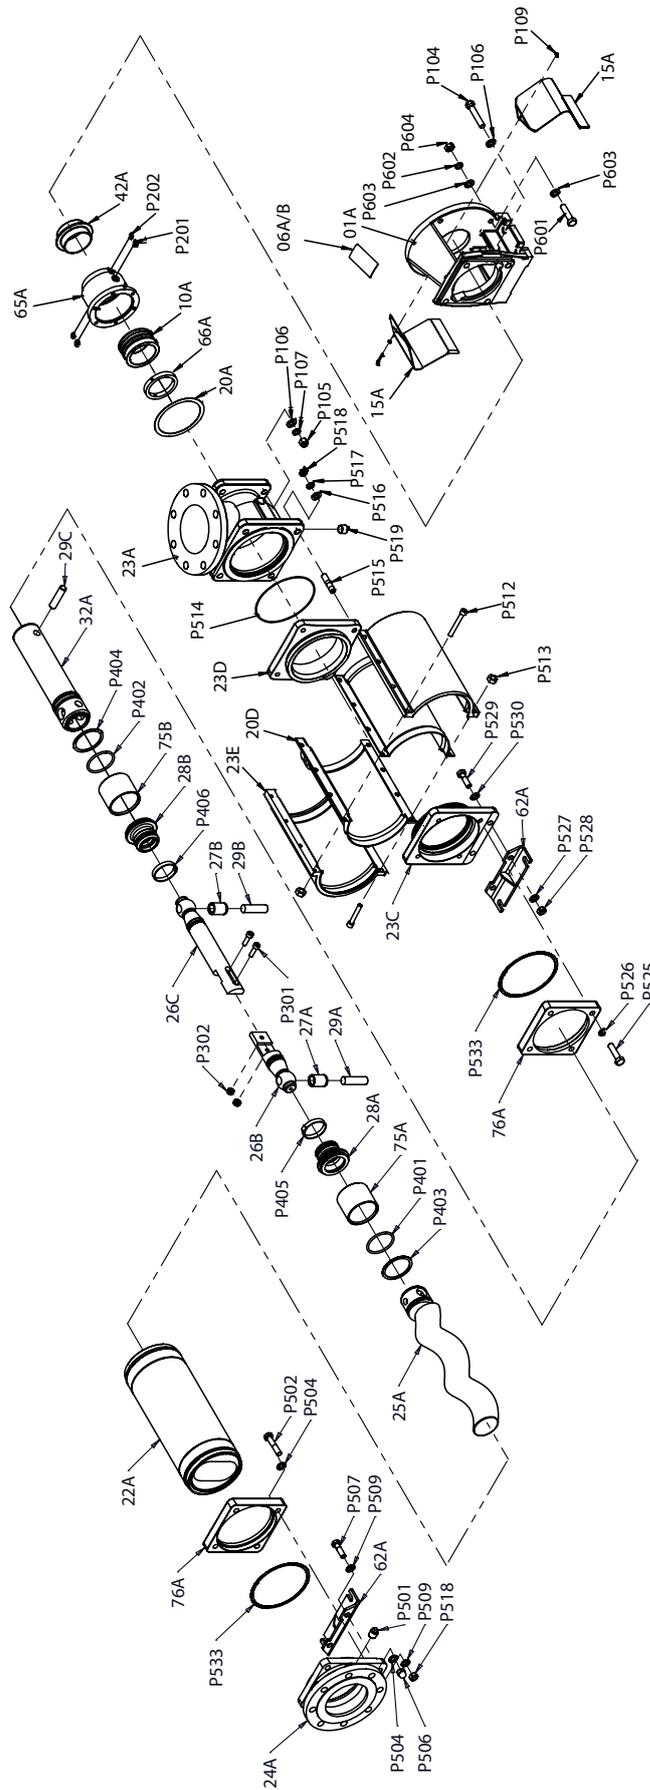


1303-01


10.4 M44 and M54

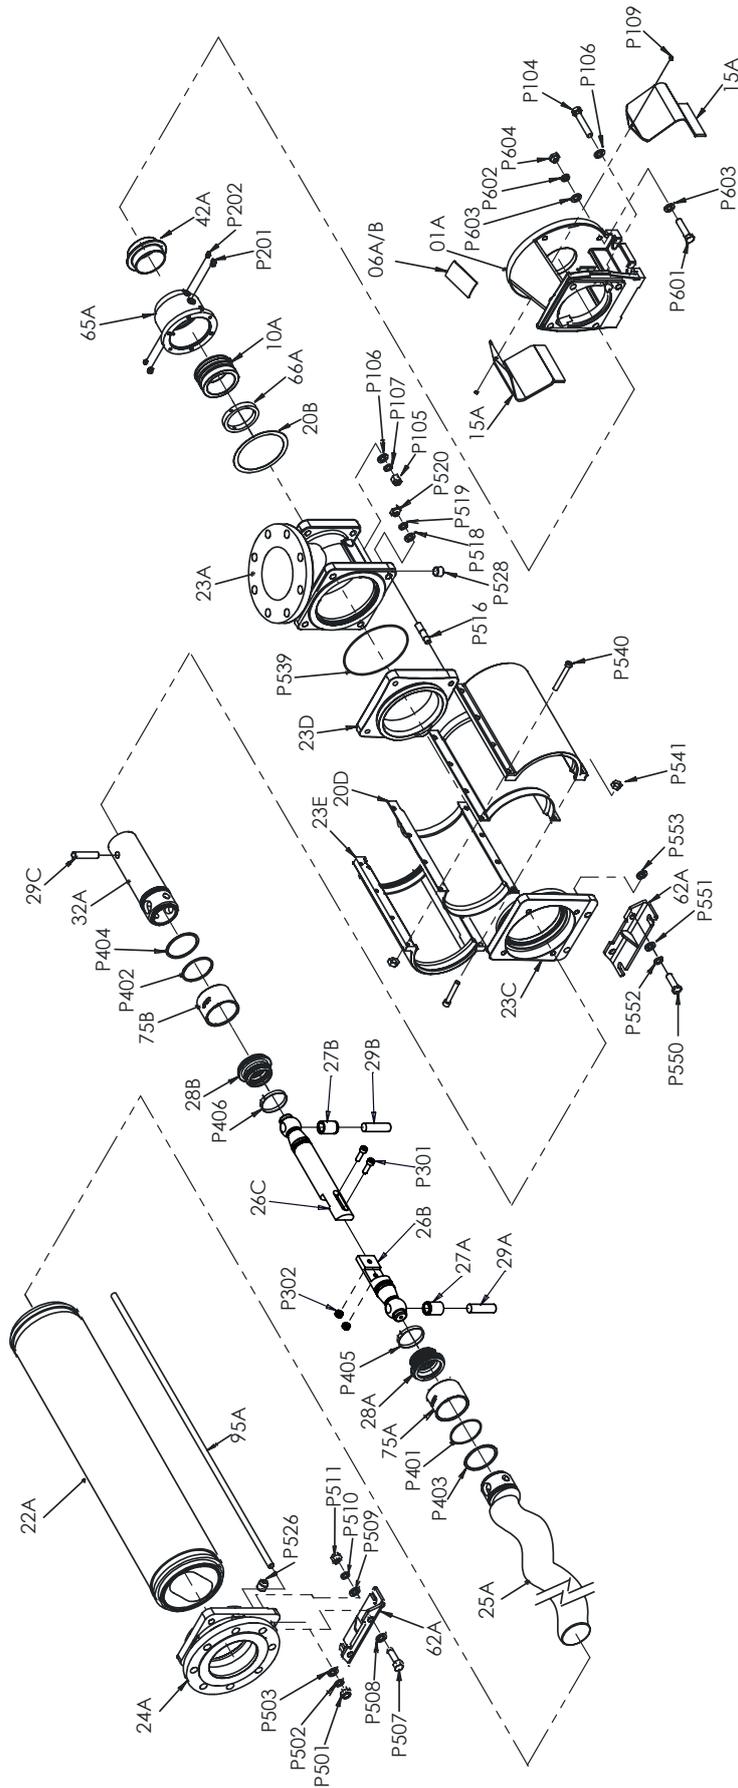

10.6 MB1 and MBL

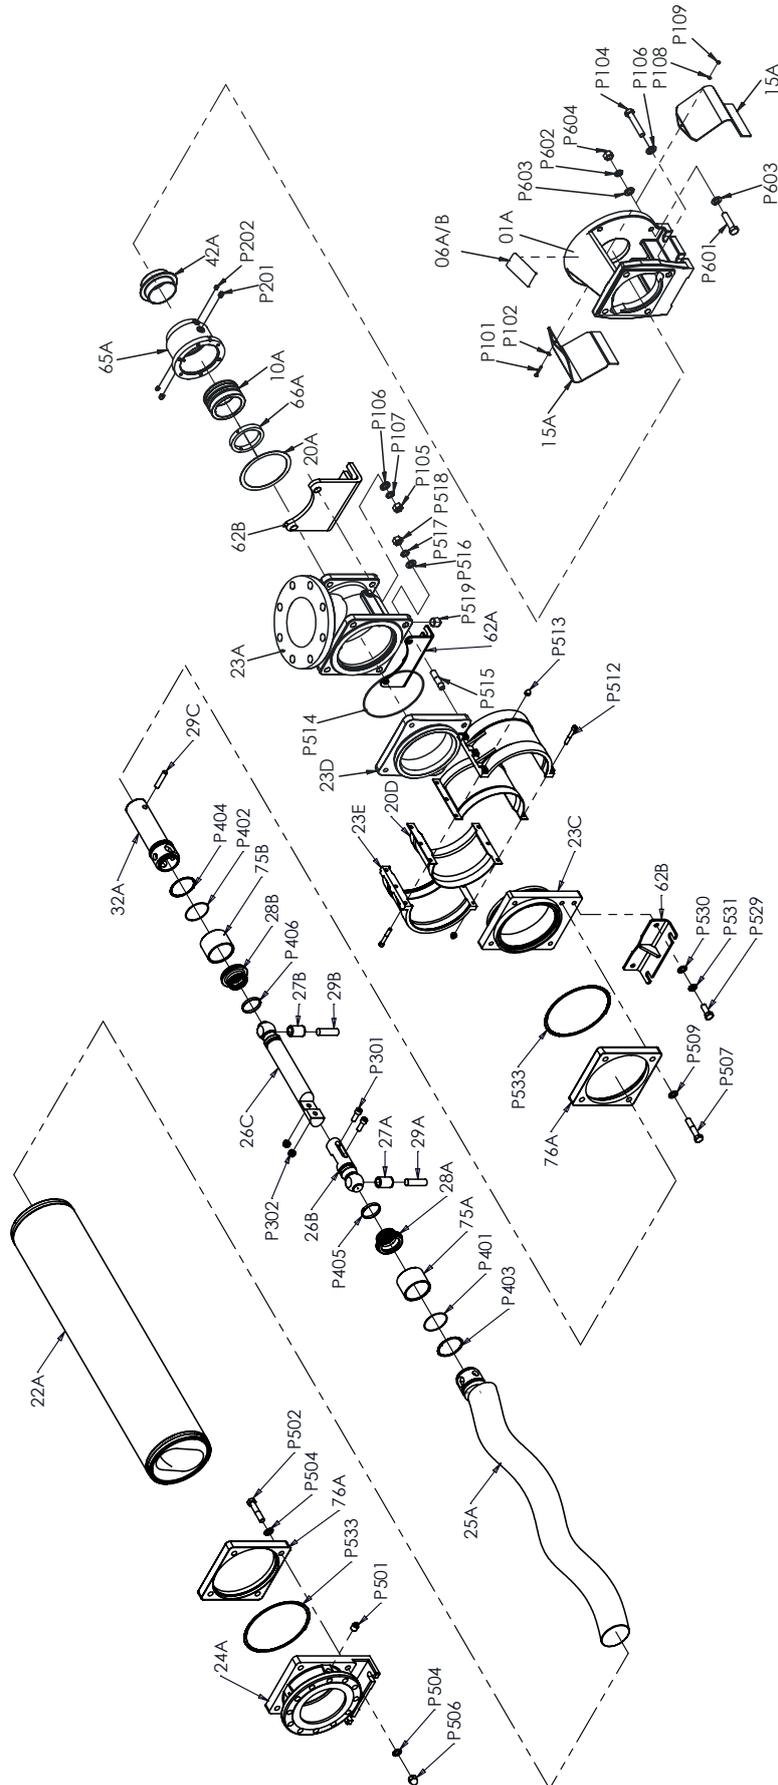


10.7 Packed gland

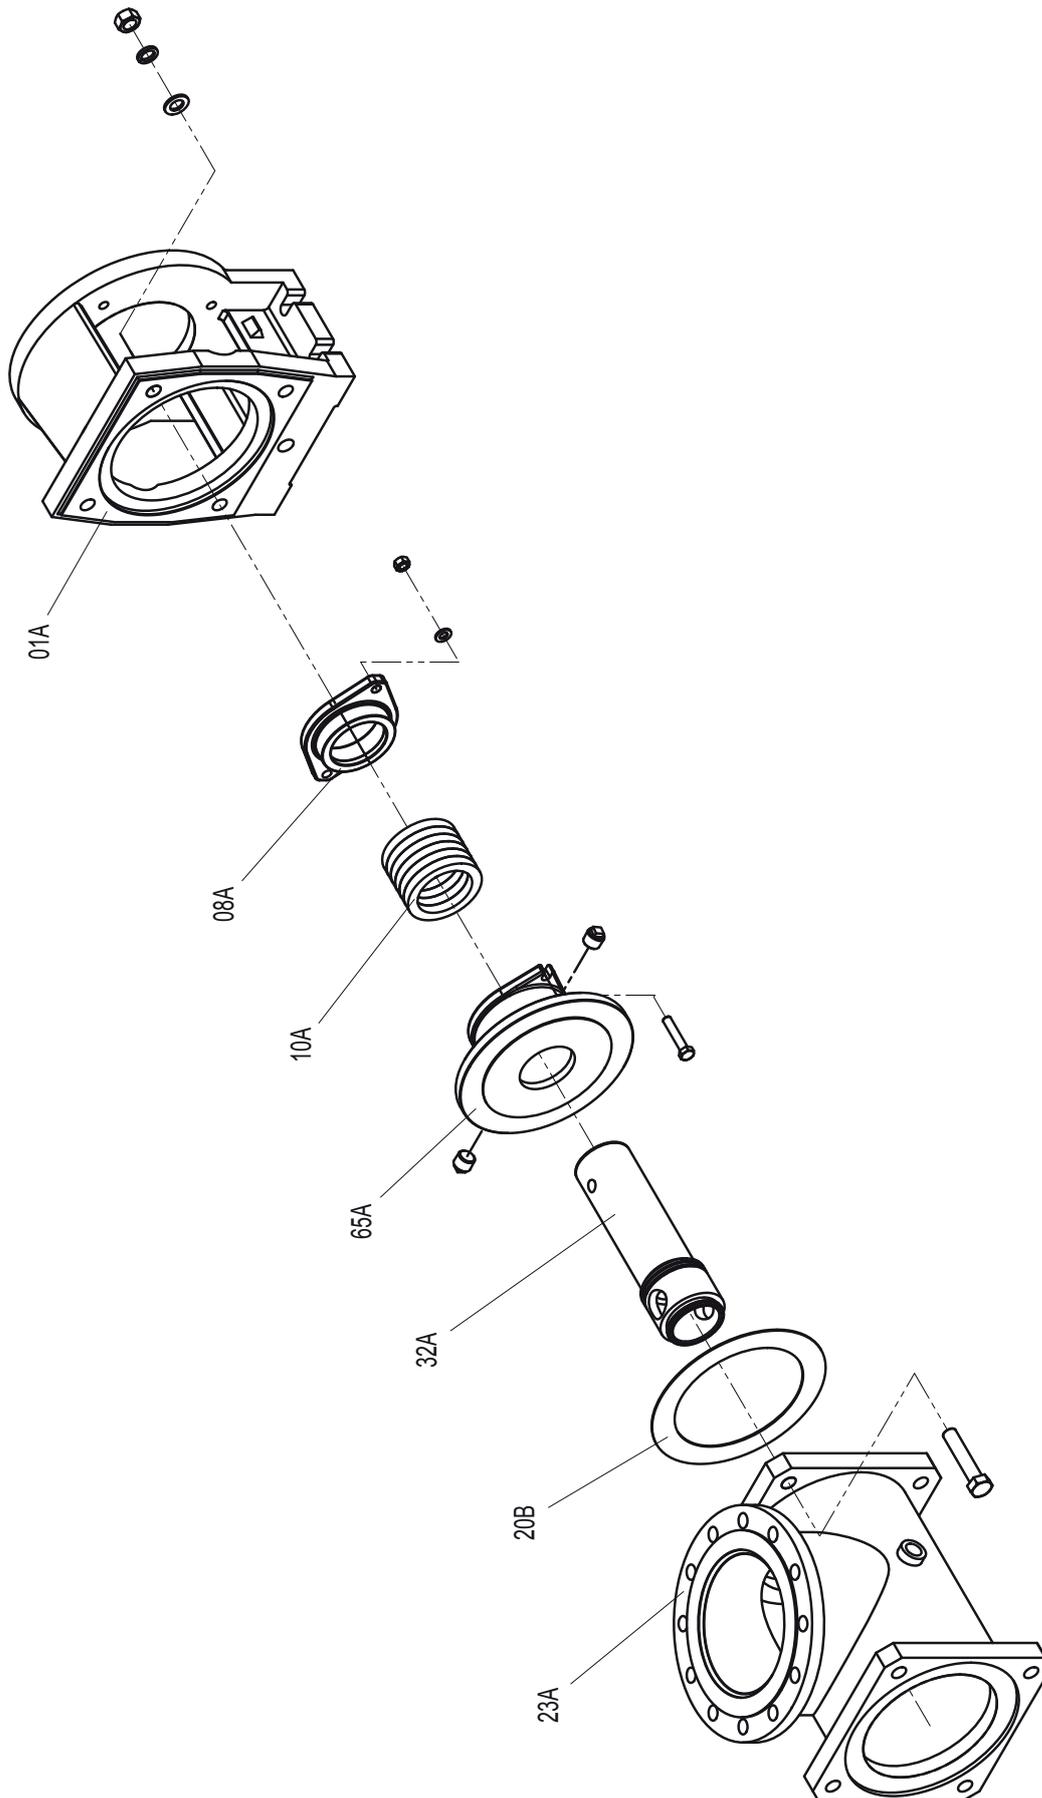


1257-00

10.8 Bearing housing only

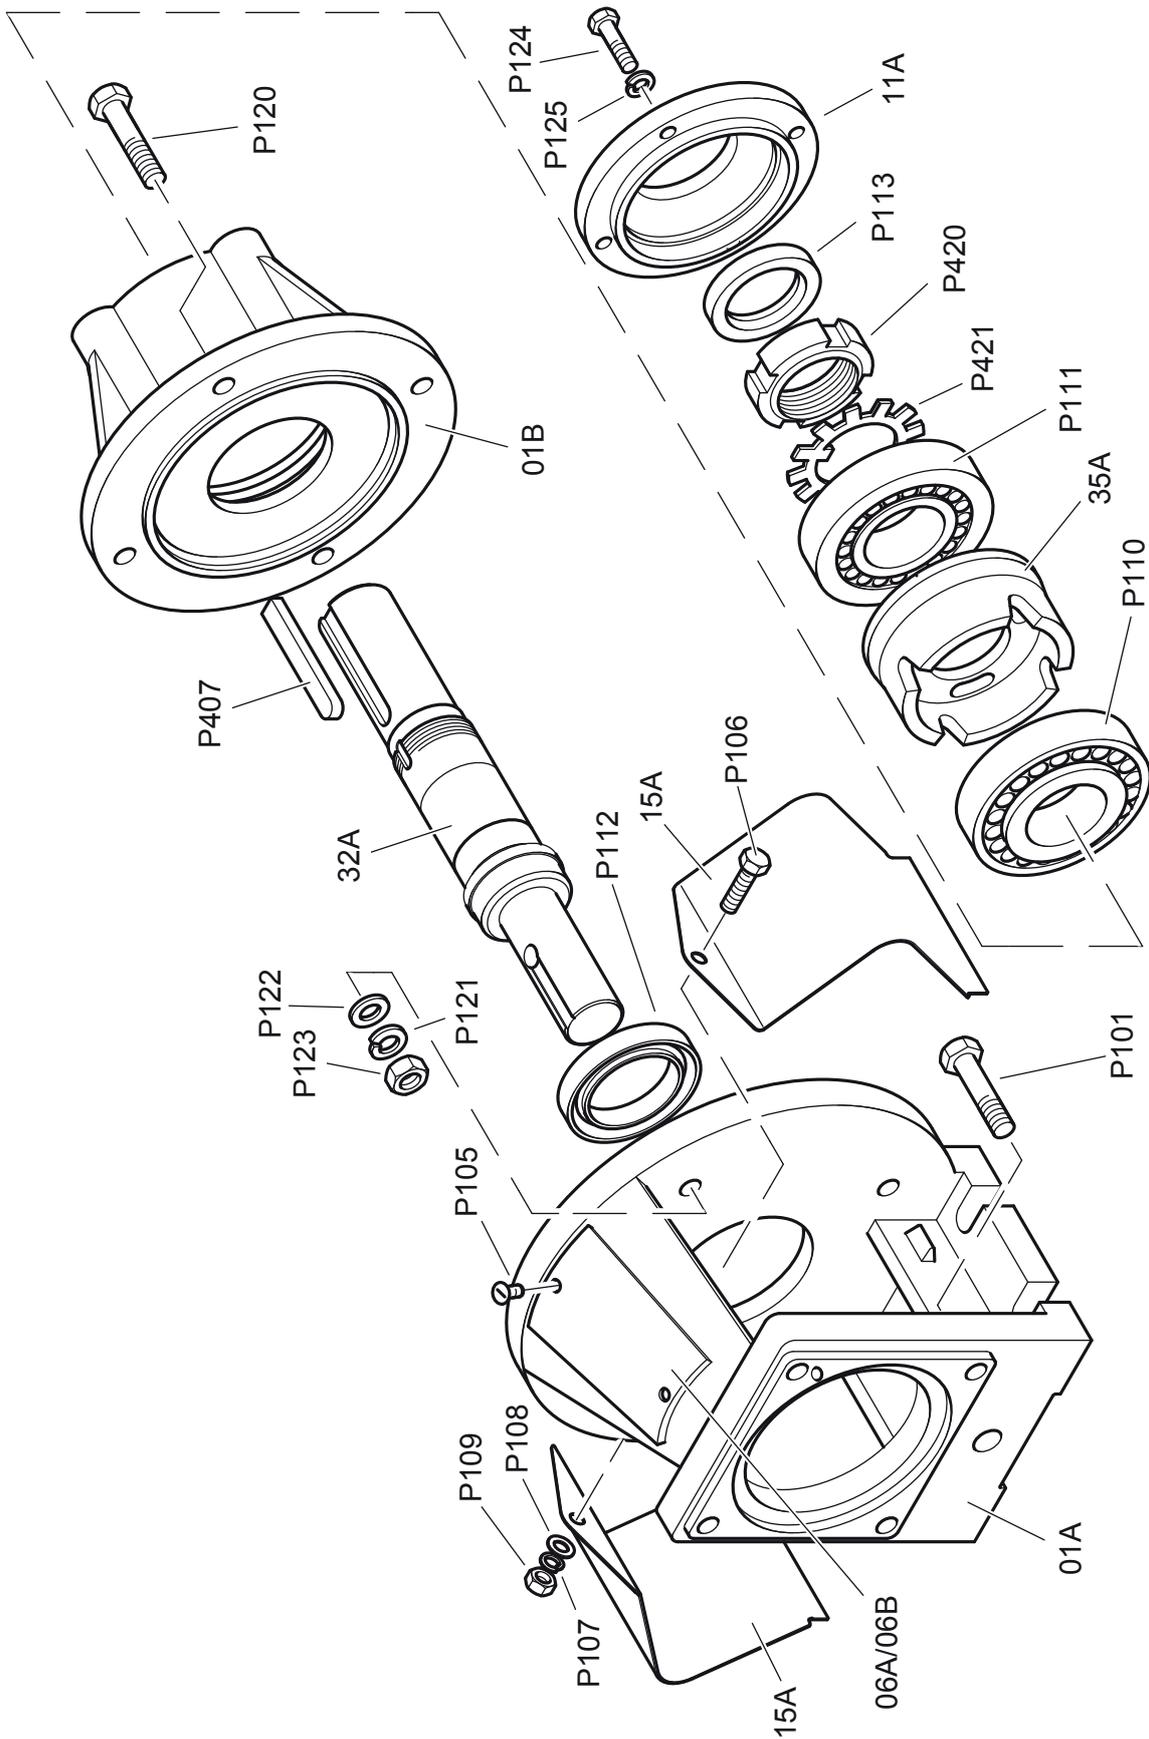

1258-00

11 Drive shaft assembly with plug

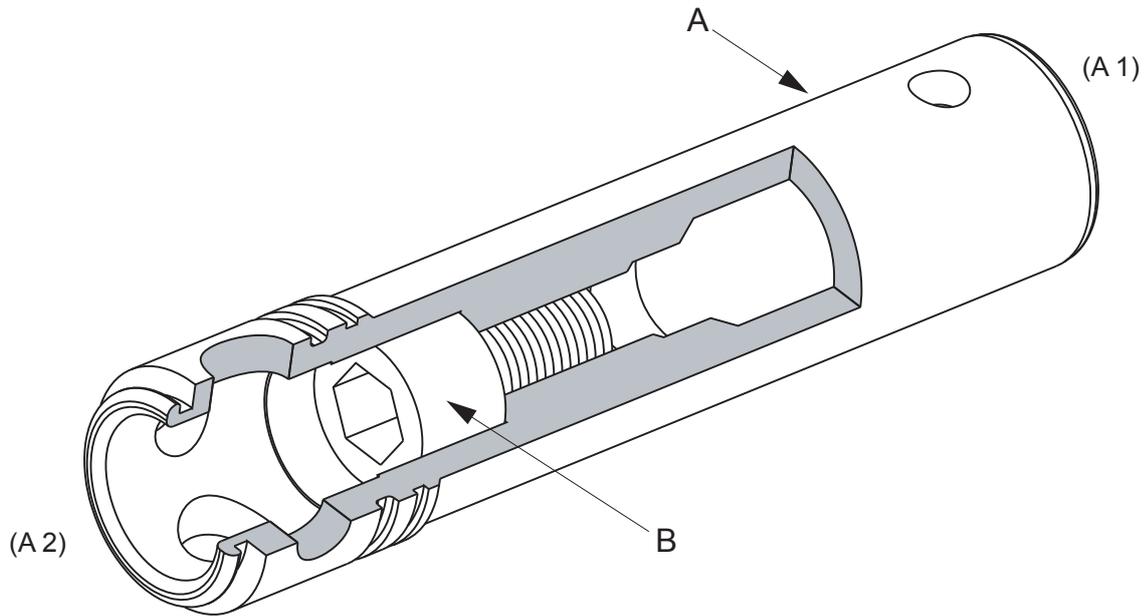

A: Drive shaft.

A1 = Motor shaft end, A2 = Coupling rod end.

B: Cap head screw (grade 12.9).


Threads to be sealed with Loctite 5910 or equivalent

Note: this screw may be removed to allow a jacking bolt to be used to aid removal of the drive shaft from the gearbox shaft.

NOTE *Ensure the cap head screw is tightened and sealed before assembling with coupling rod.*

12 Tightening torques (Nm)

Pump size	Body / Suction chamber			Stator clamp		Stator tie bars		Split coupling rod	Split suction chamber halves
	P526	P105	P530	P506	P511	P105	P501	P301	P540*
M41		11		4		-		4	25
M4L		11		4		-		7	25
M42		11		7		-		8	25
M44		11		-		11		16	25
M51		11		6		-		8	35
M5L		21		6		-		10	35
M52		21		10		-		16	35
M54		21		-		11		34	35
M61		21		12		-		13	35
M6L		21		10		-		16	35
M62		36		19		-		23	35
M64		36		-		24		57	35
M71		36		15		-		23	45
M7L		36		16		-		41	45
M72		36		25		-		45	45
M74		36		-		24		103	45
M81		36		21		-		31	55
M8L		36		18		-		38	55
M82	50	-	36	35		-		60	55
M84	50	-	36	-		40		139	55
M91		90		35		-		42	70
M9L		90		38		-		76	70
M92		90		57		-		83	70
MA1		90		46		-		62	70
MA2		90		39		-		76	70
MAL		90		75		-		145	70
MB1		176		90		-		124	70
MBL		176		76		-		154	70

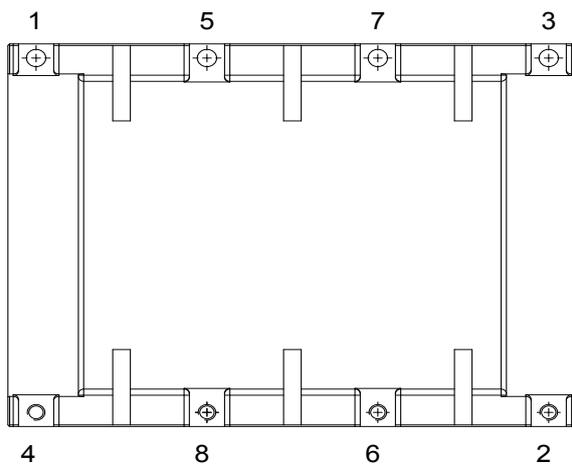


Tighten in sequence as shown in 3 steps:

- Step 1 - 35% of specified torque
- Step 2 - 70% of specified torque
- Step 3 - 100% of specified torque


* DO NOT fit lock nut P541 until the screws (P540) are tightened to the specified torque.


13 Rotor and stator change dismantling procedures


13.1 M#1, M#2, M#L

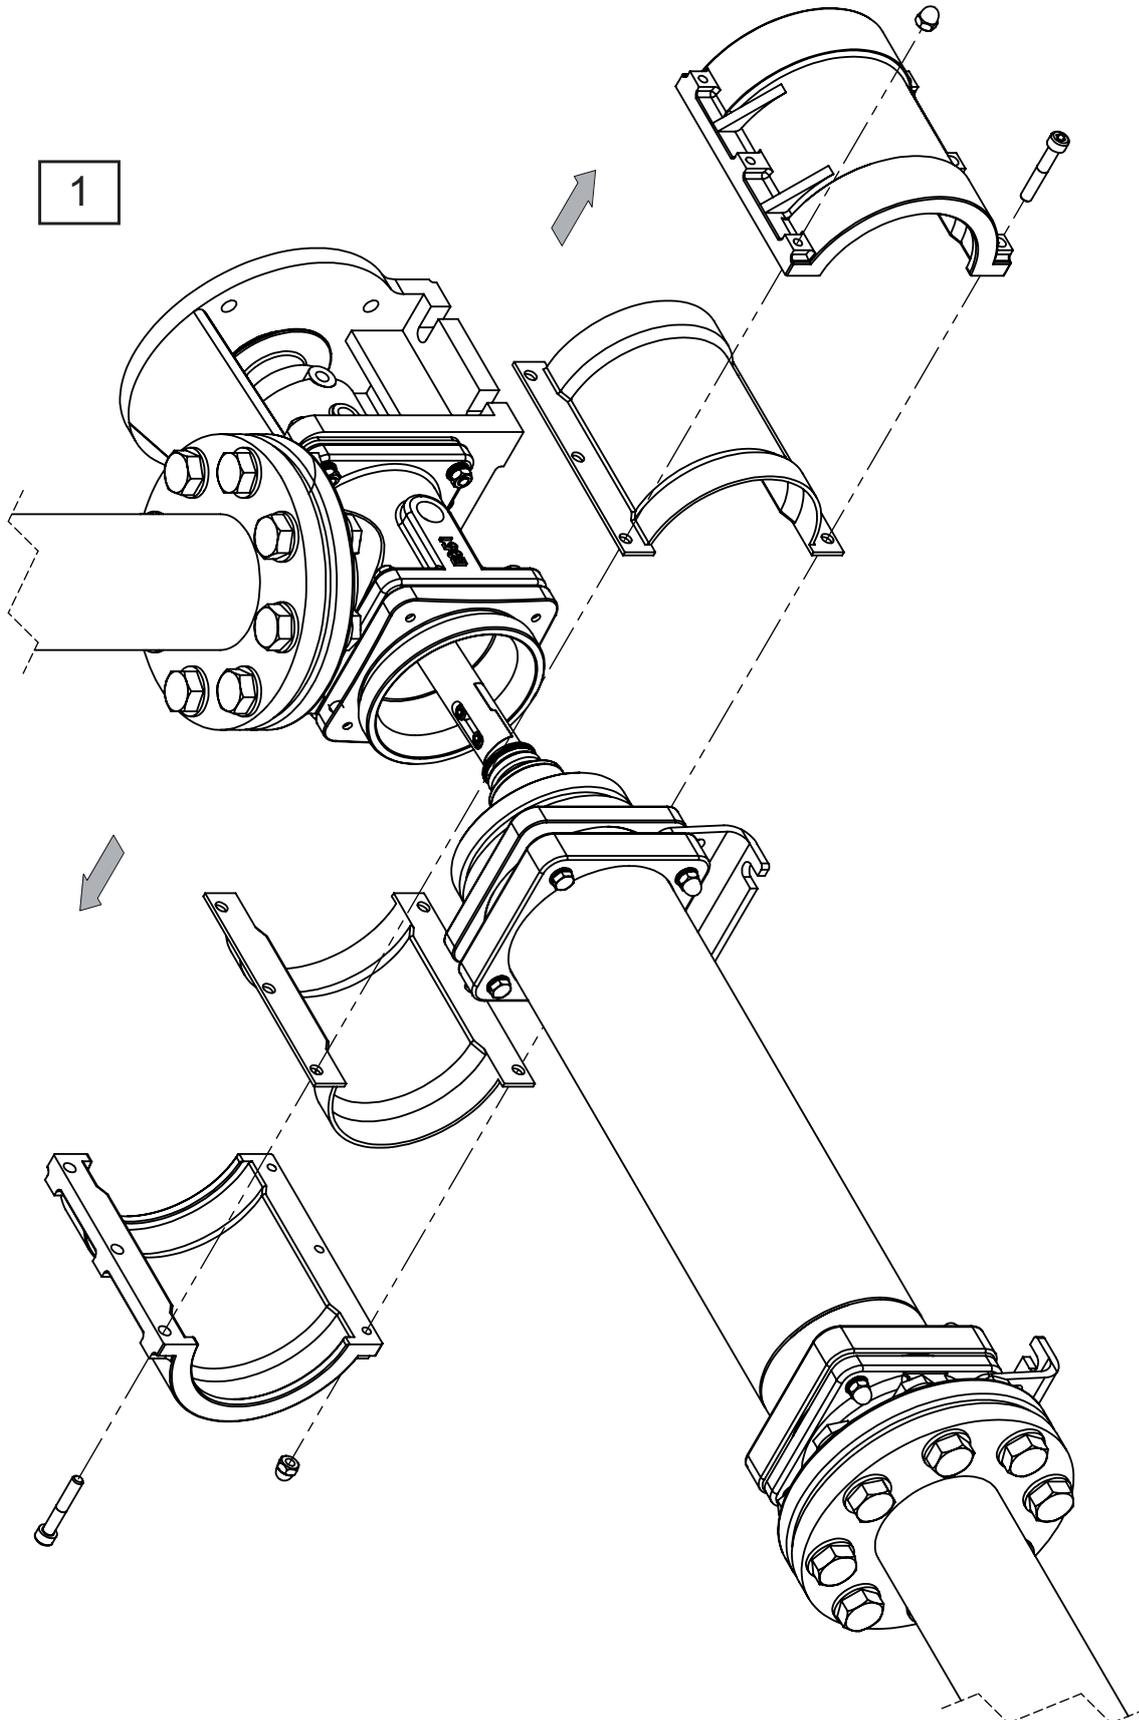


1308-01

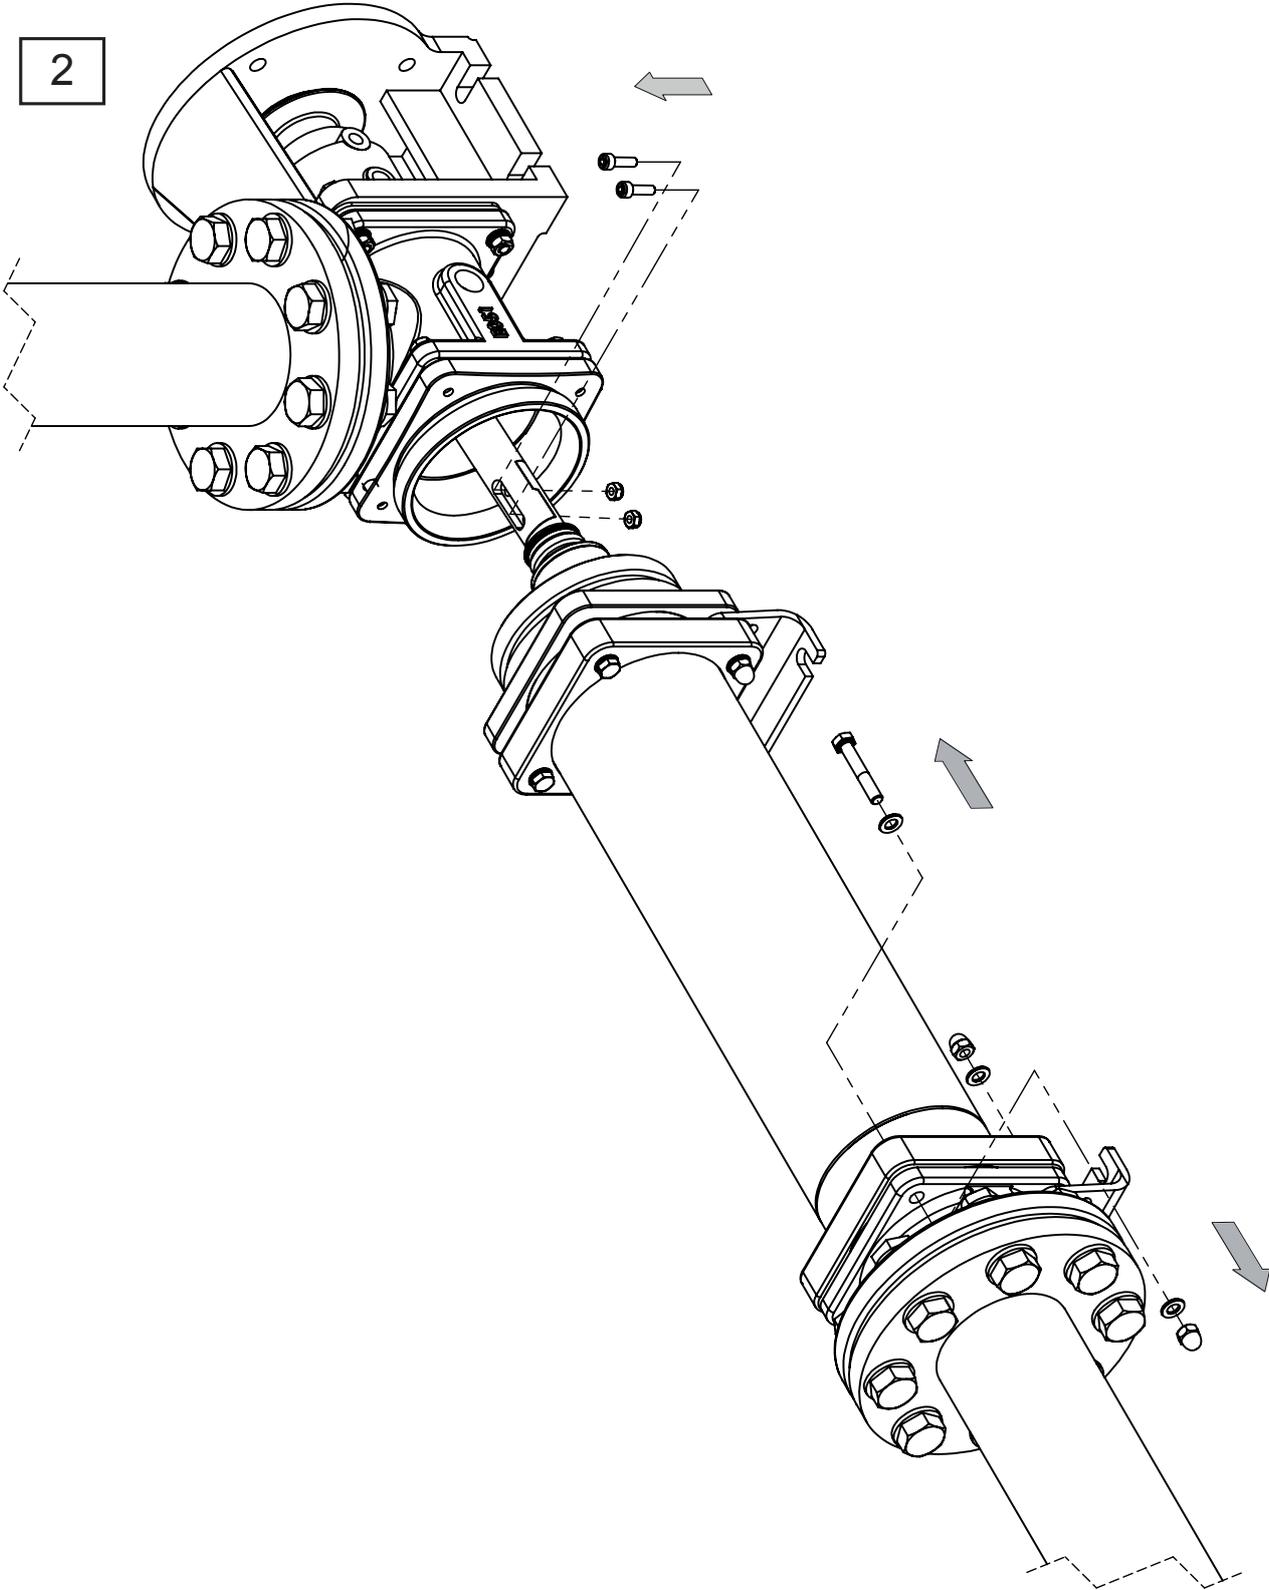



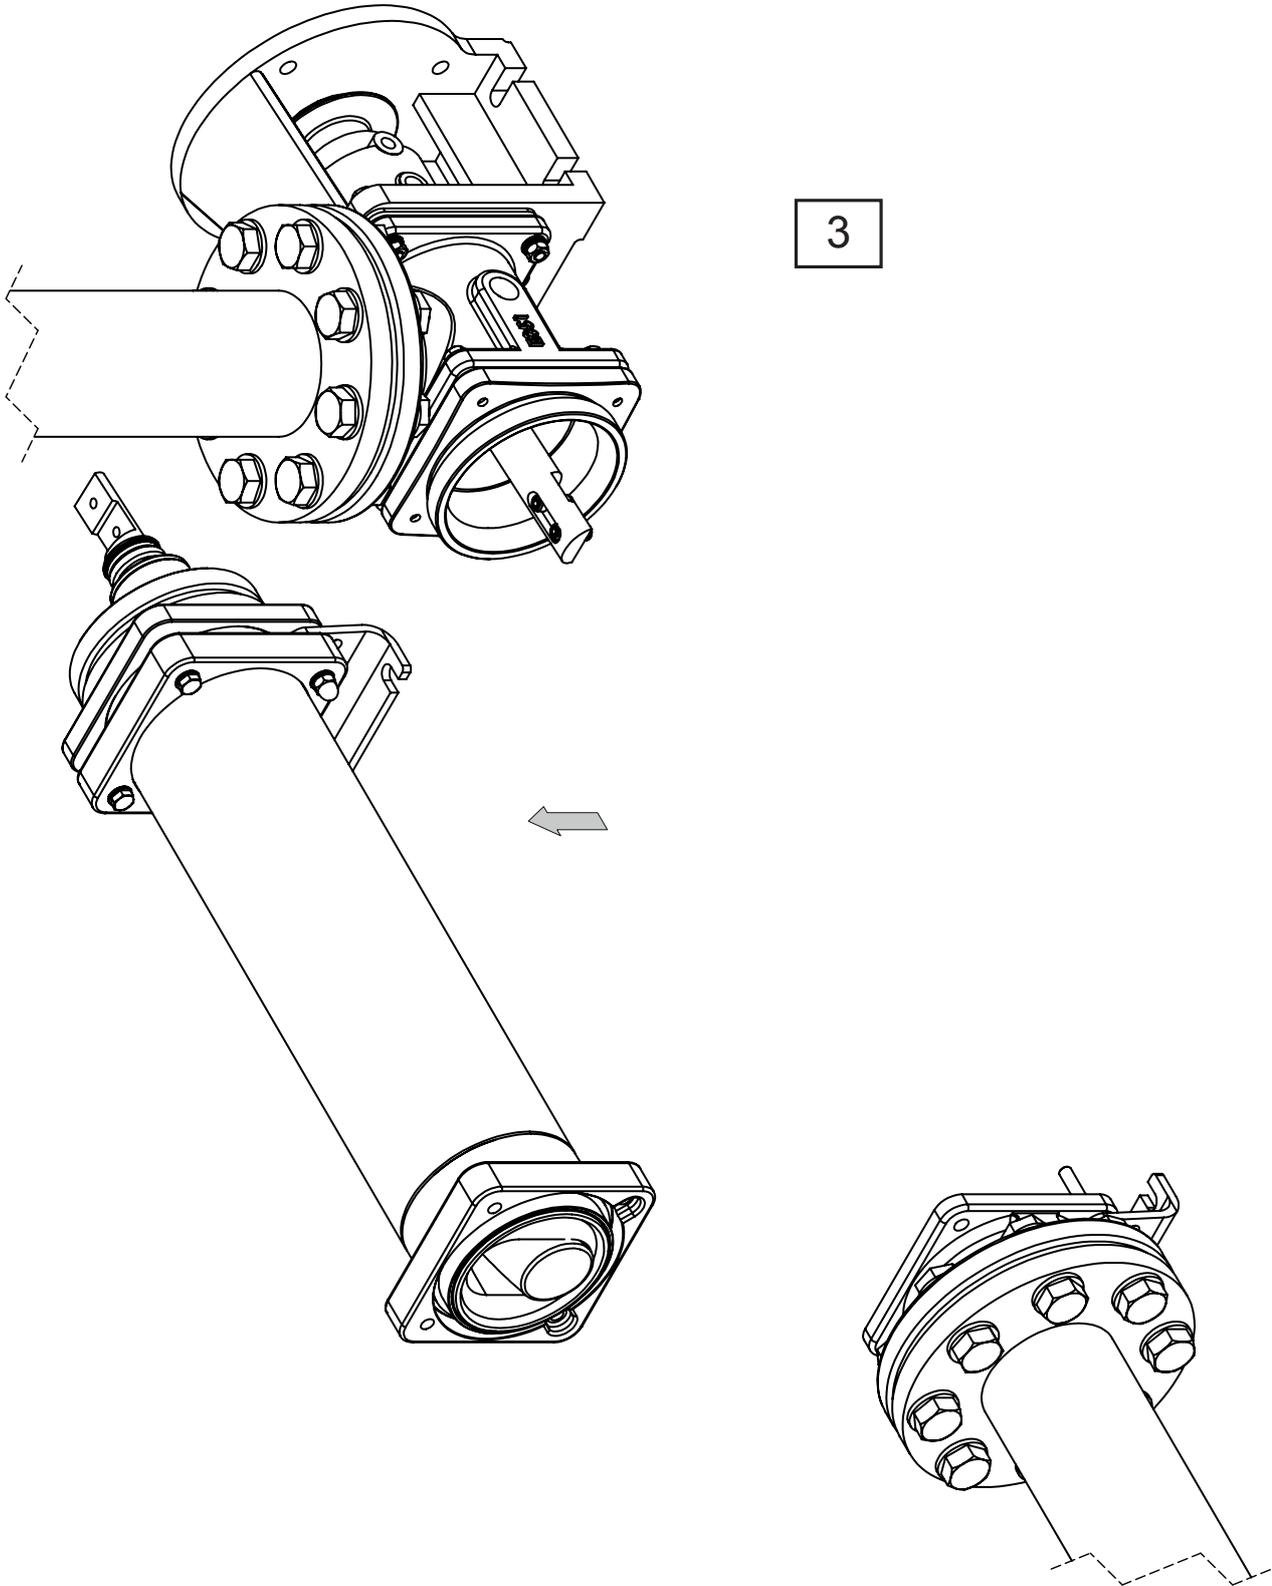


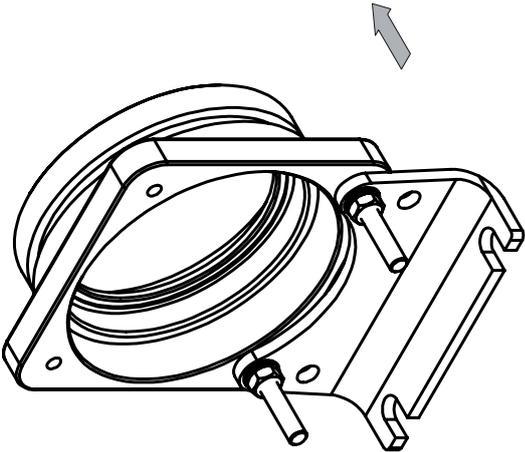


4

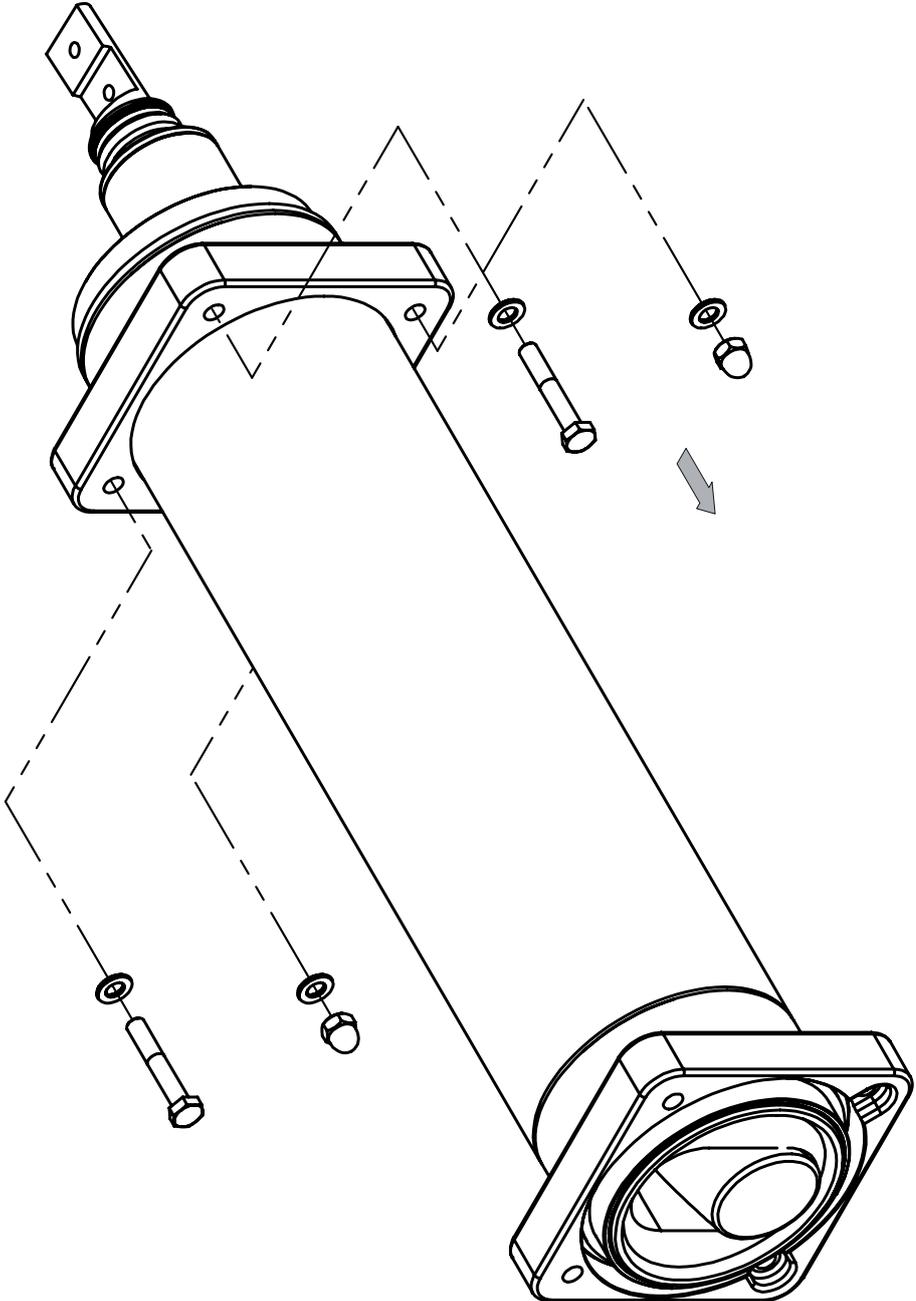


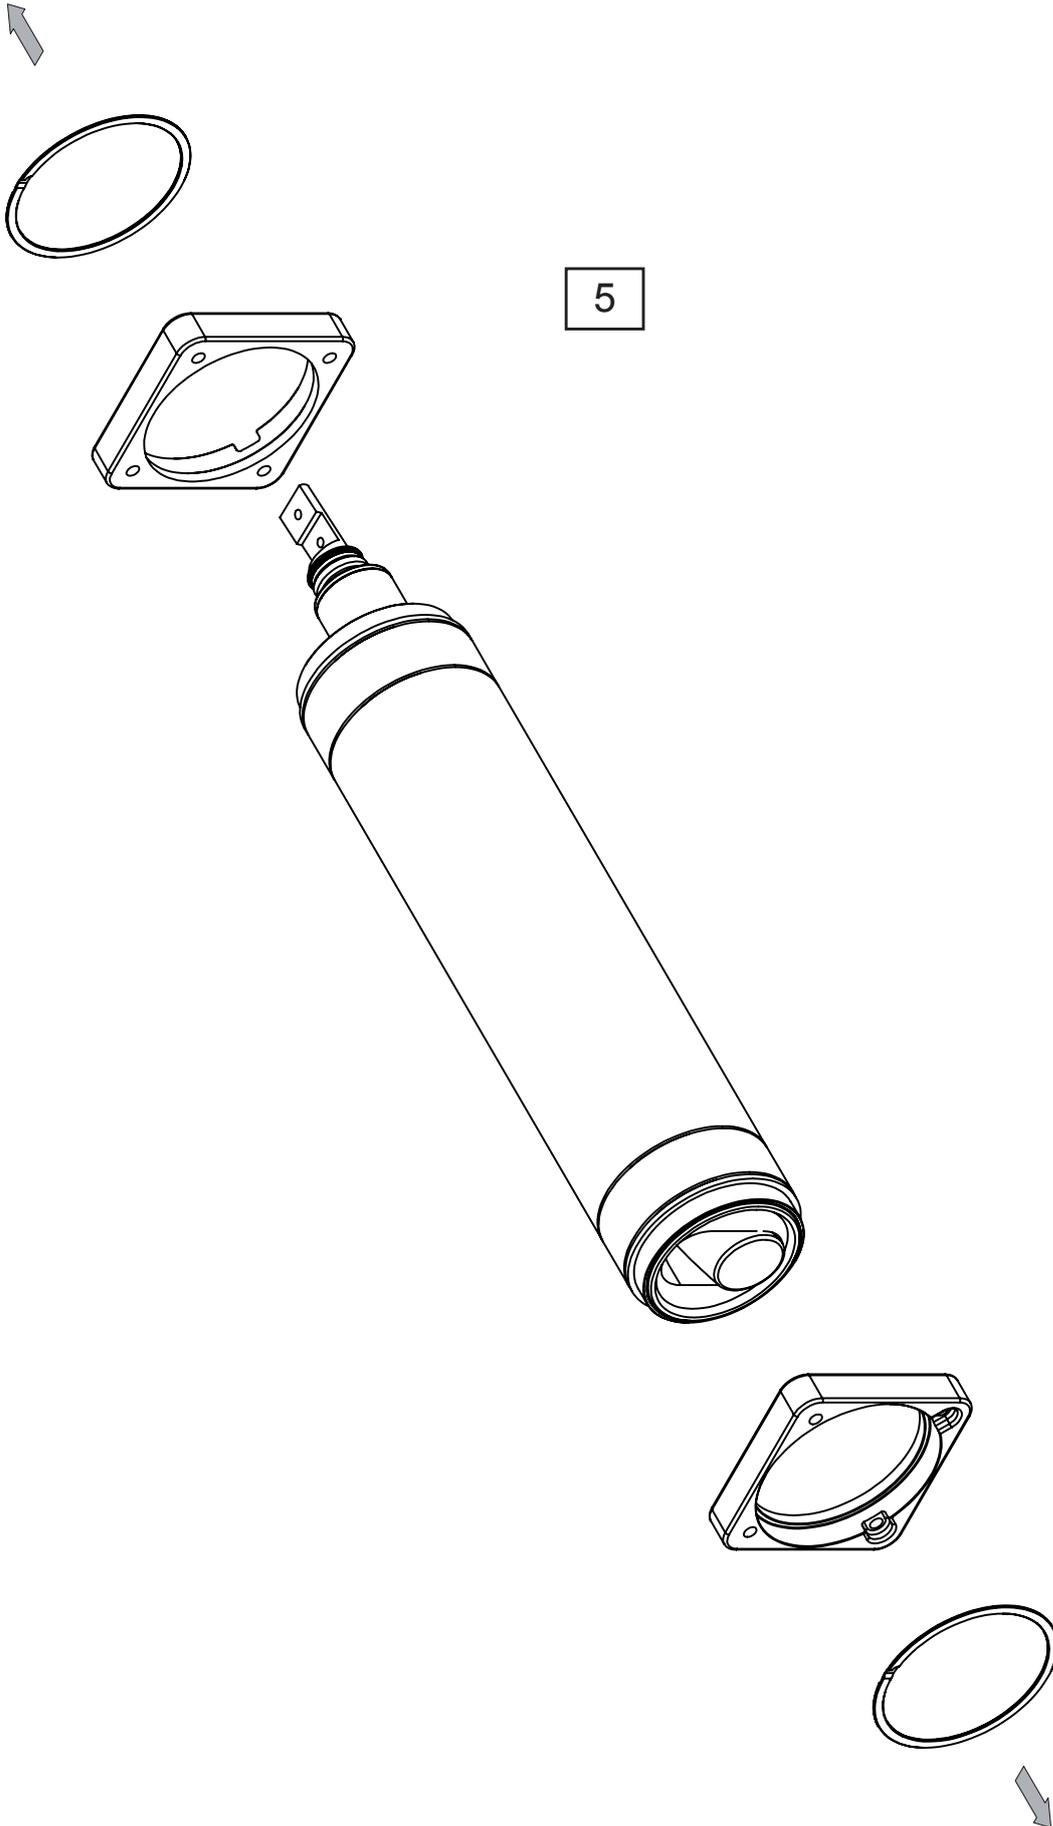

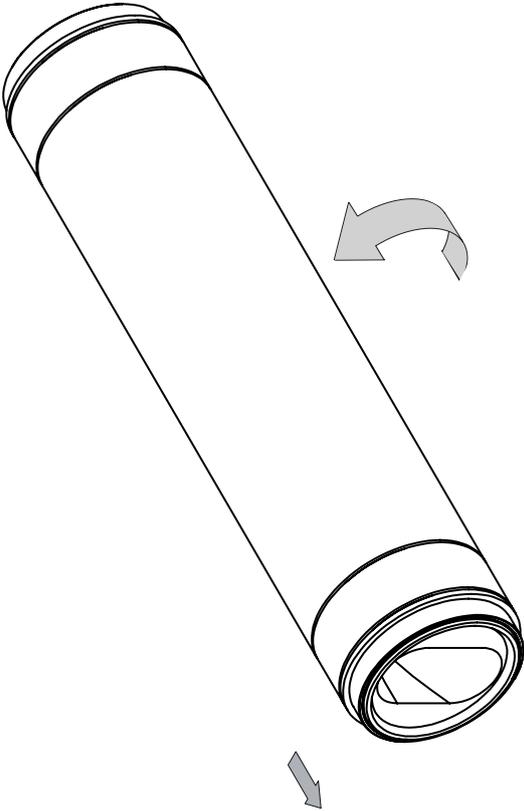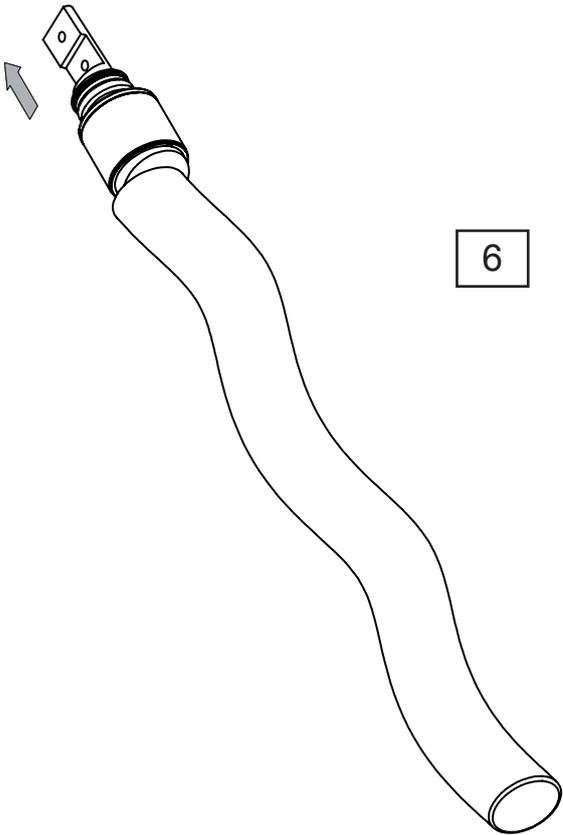


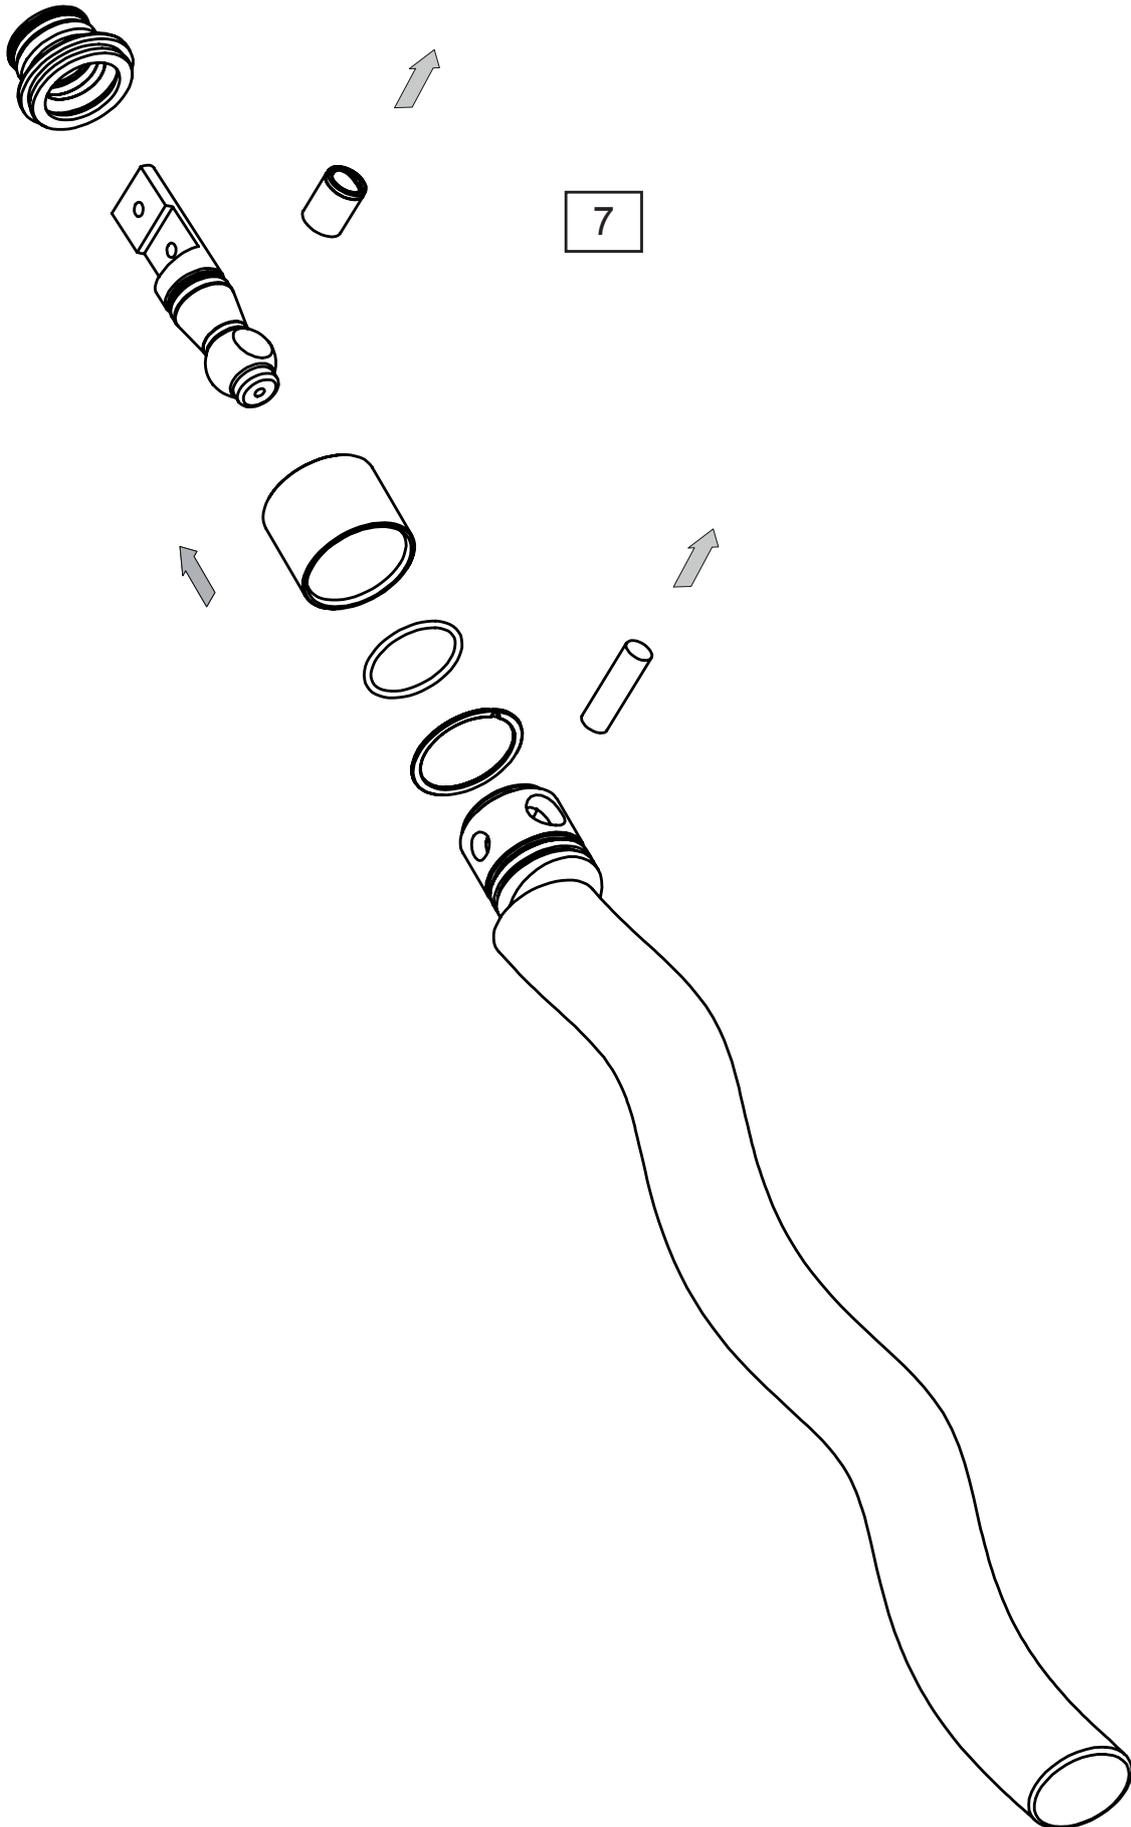


13.2 M#4


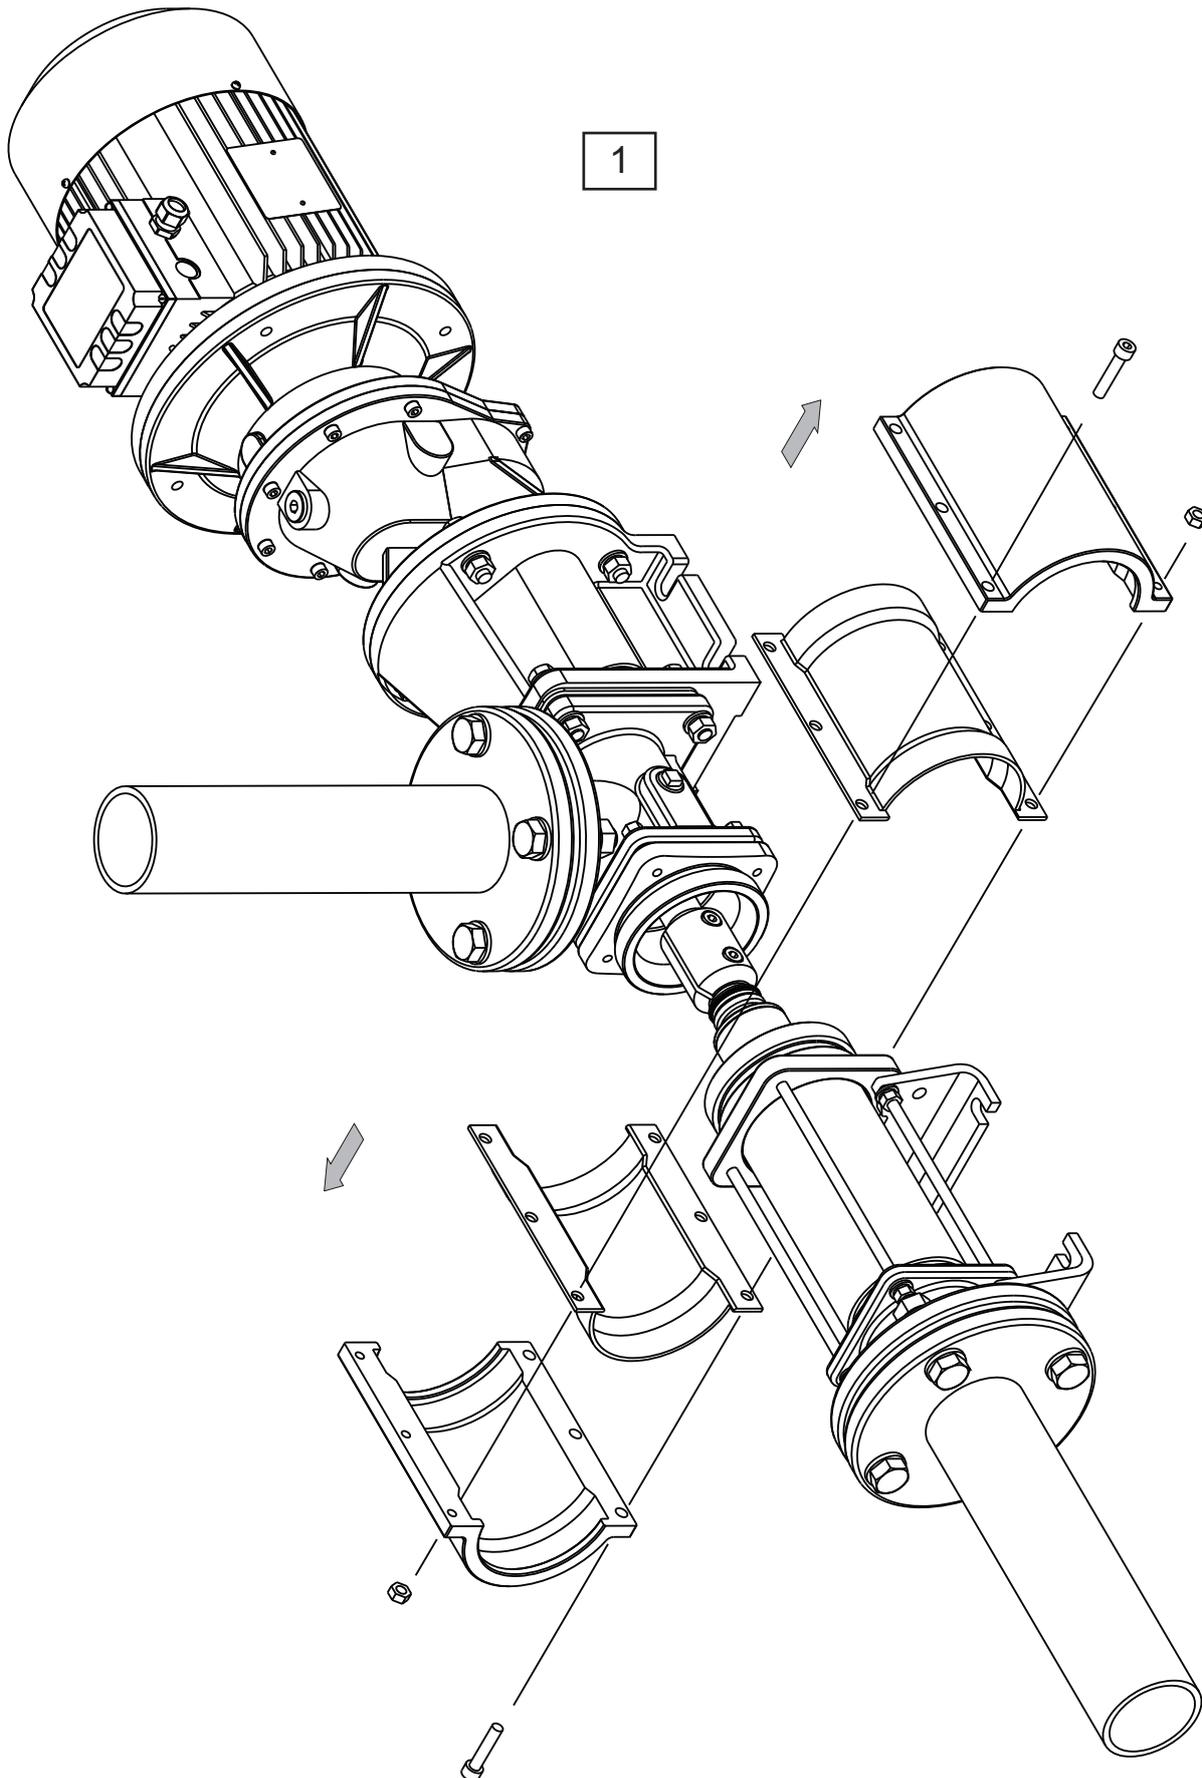



1308-00

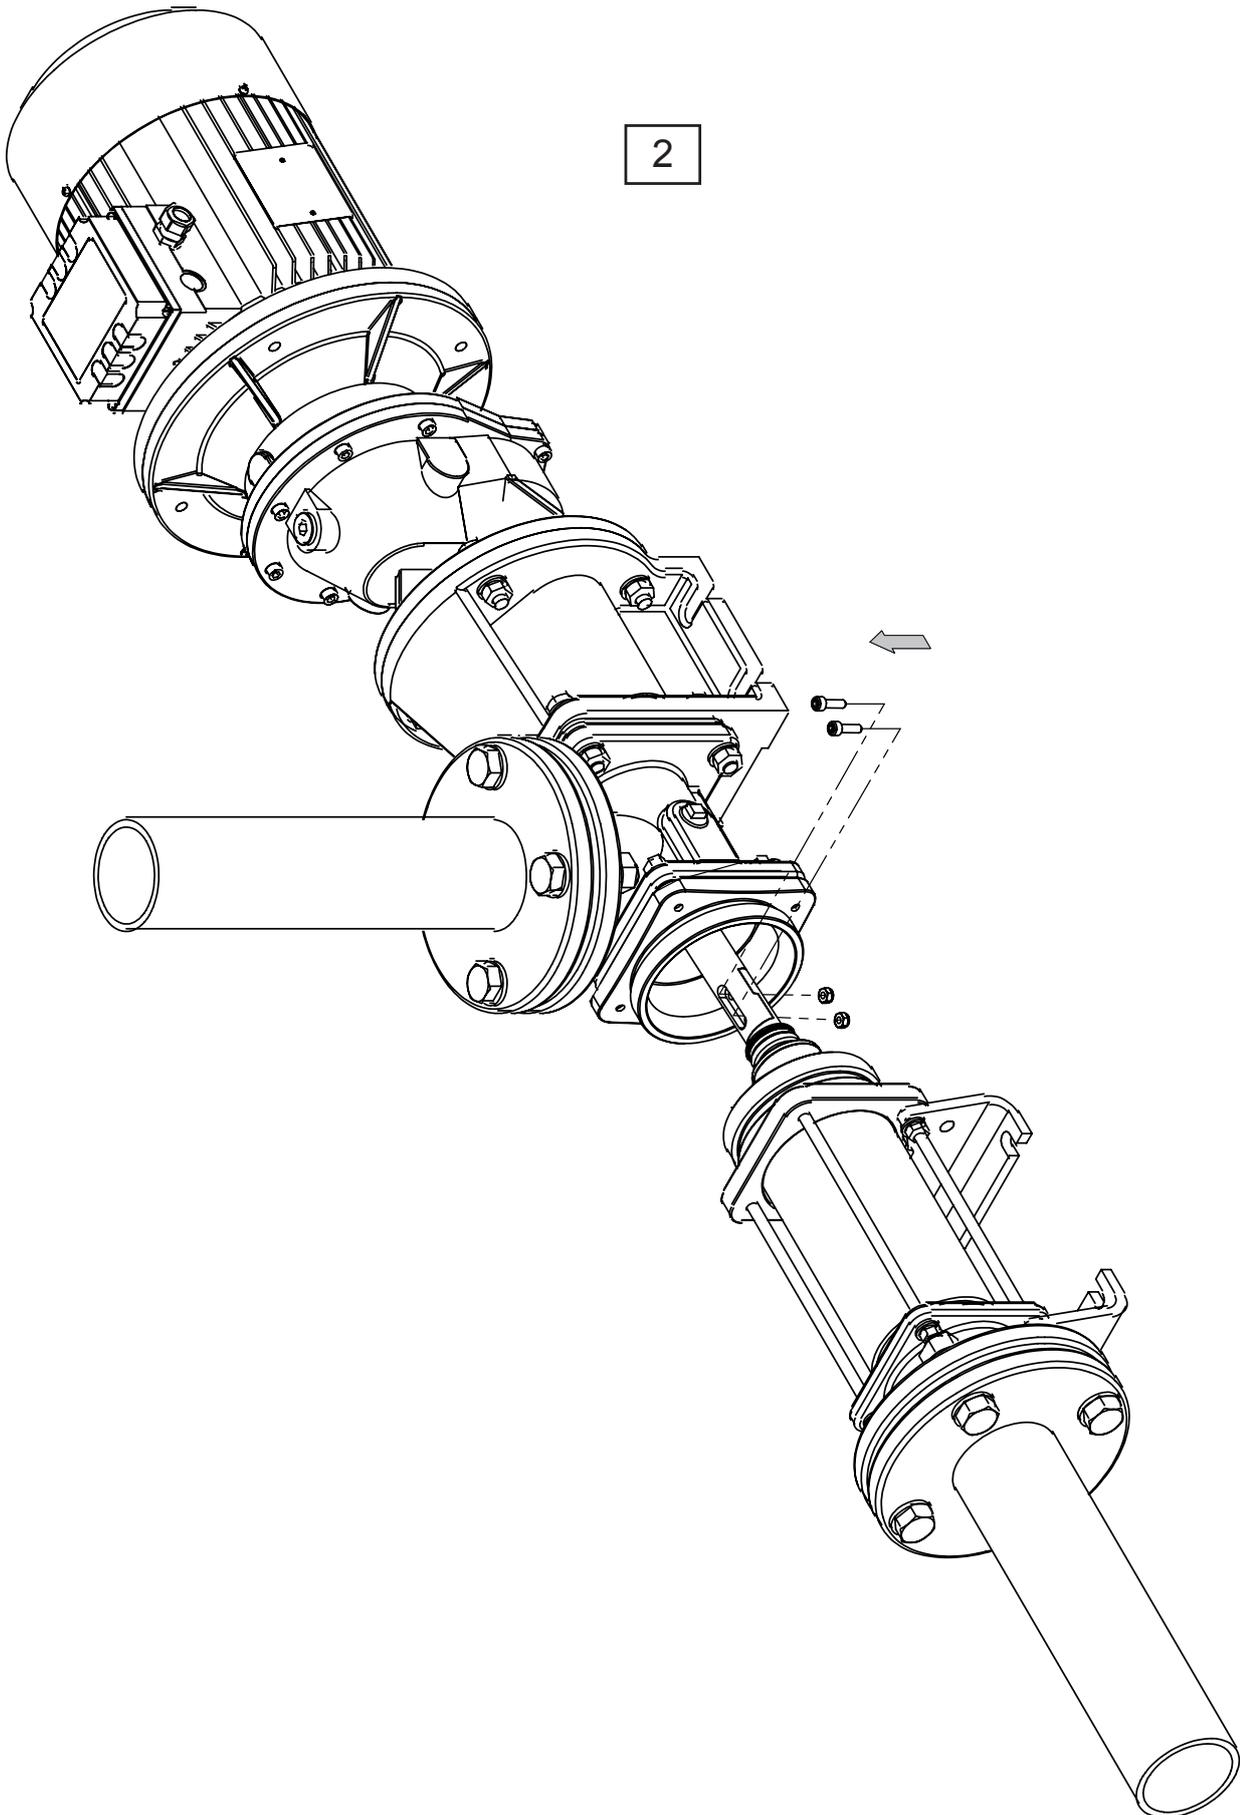



3

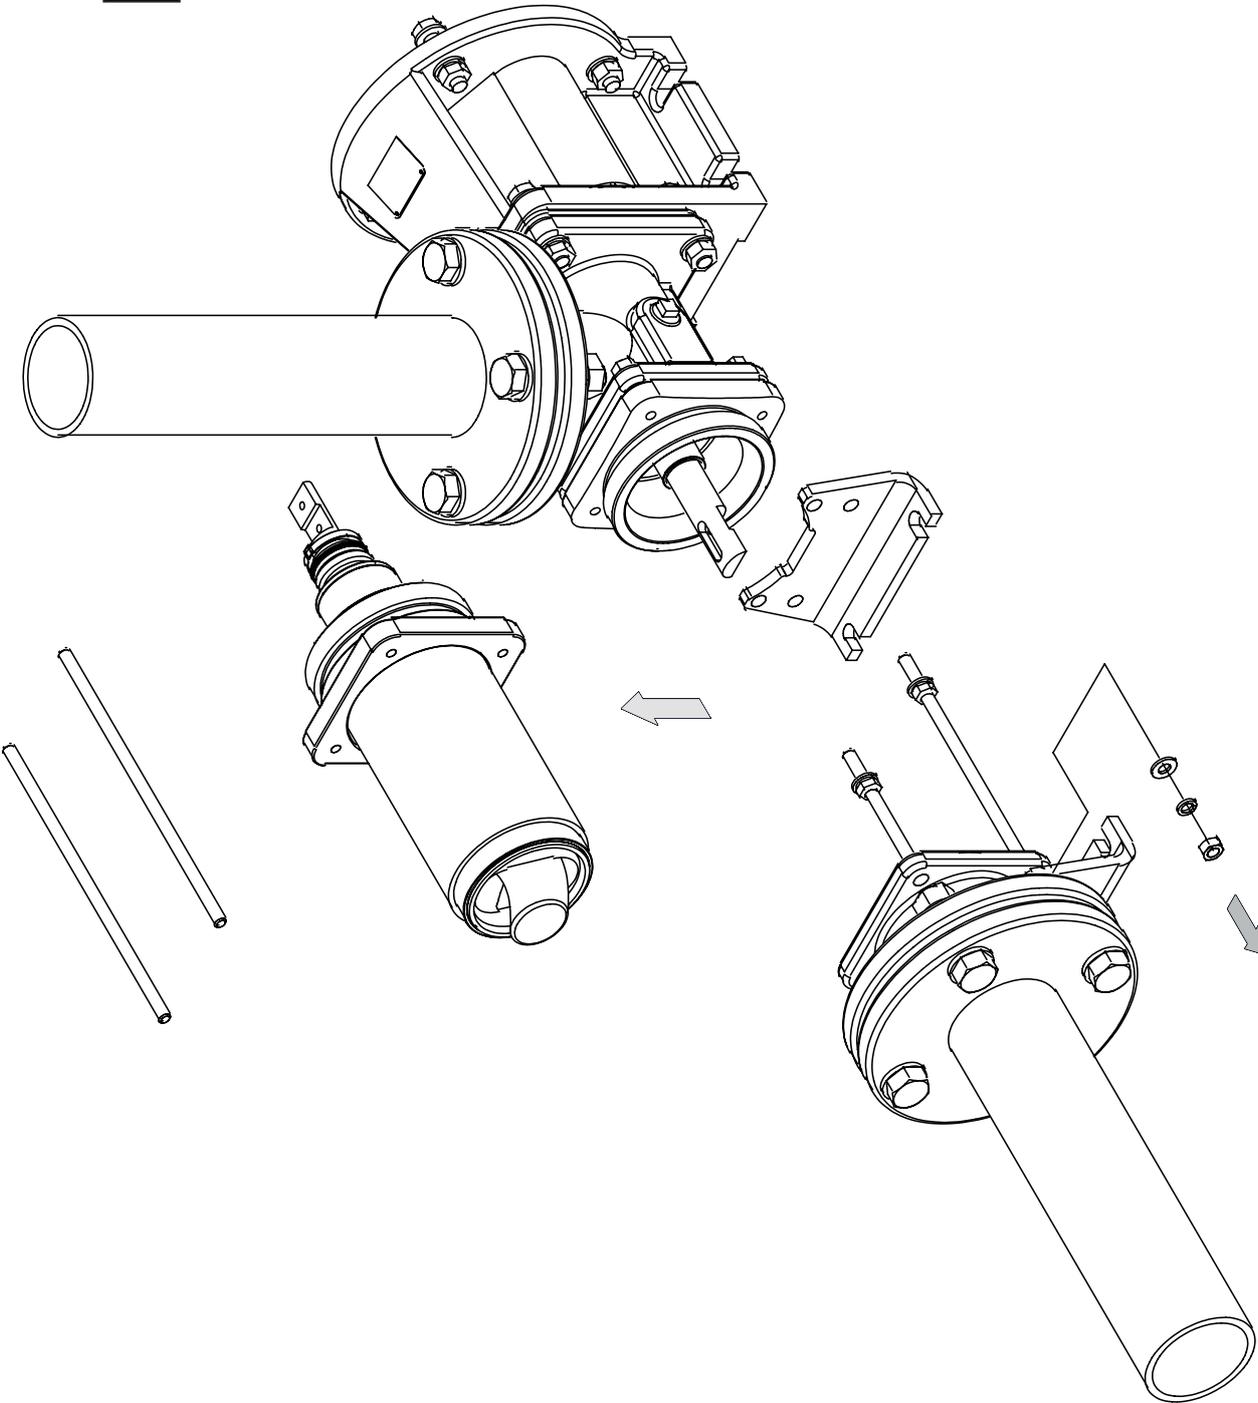


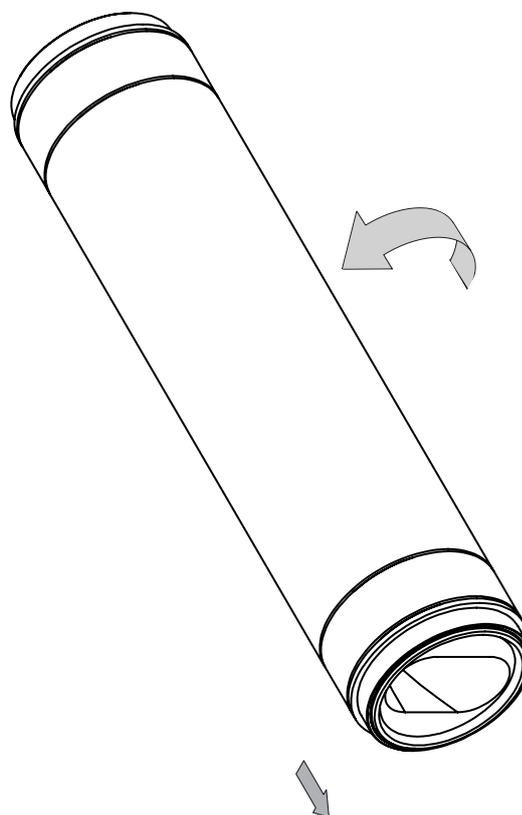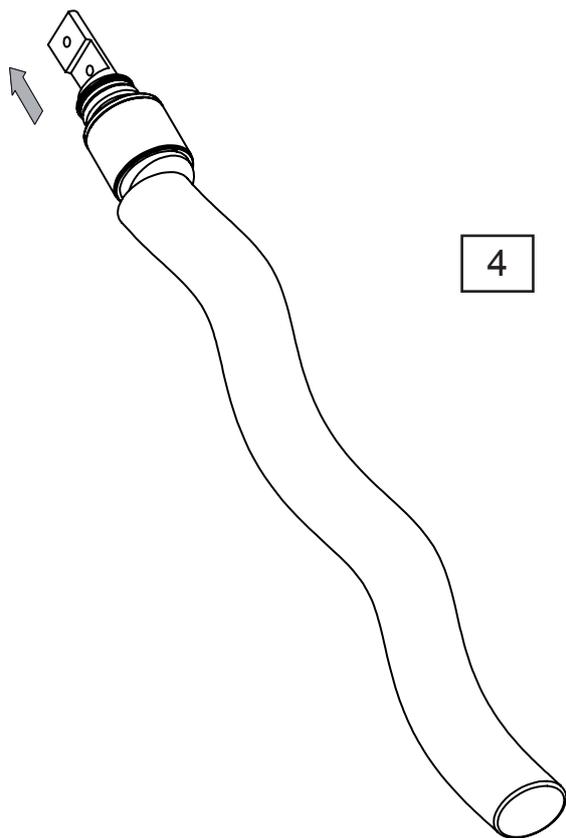

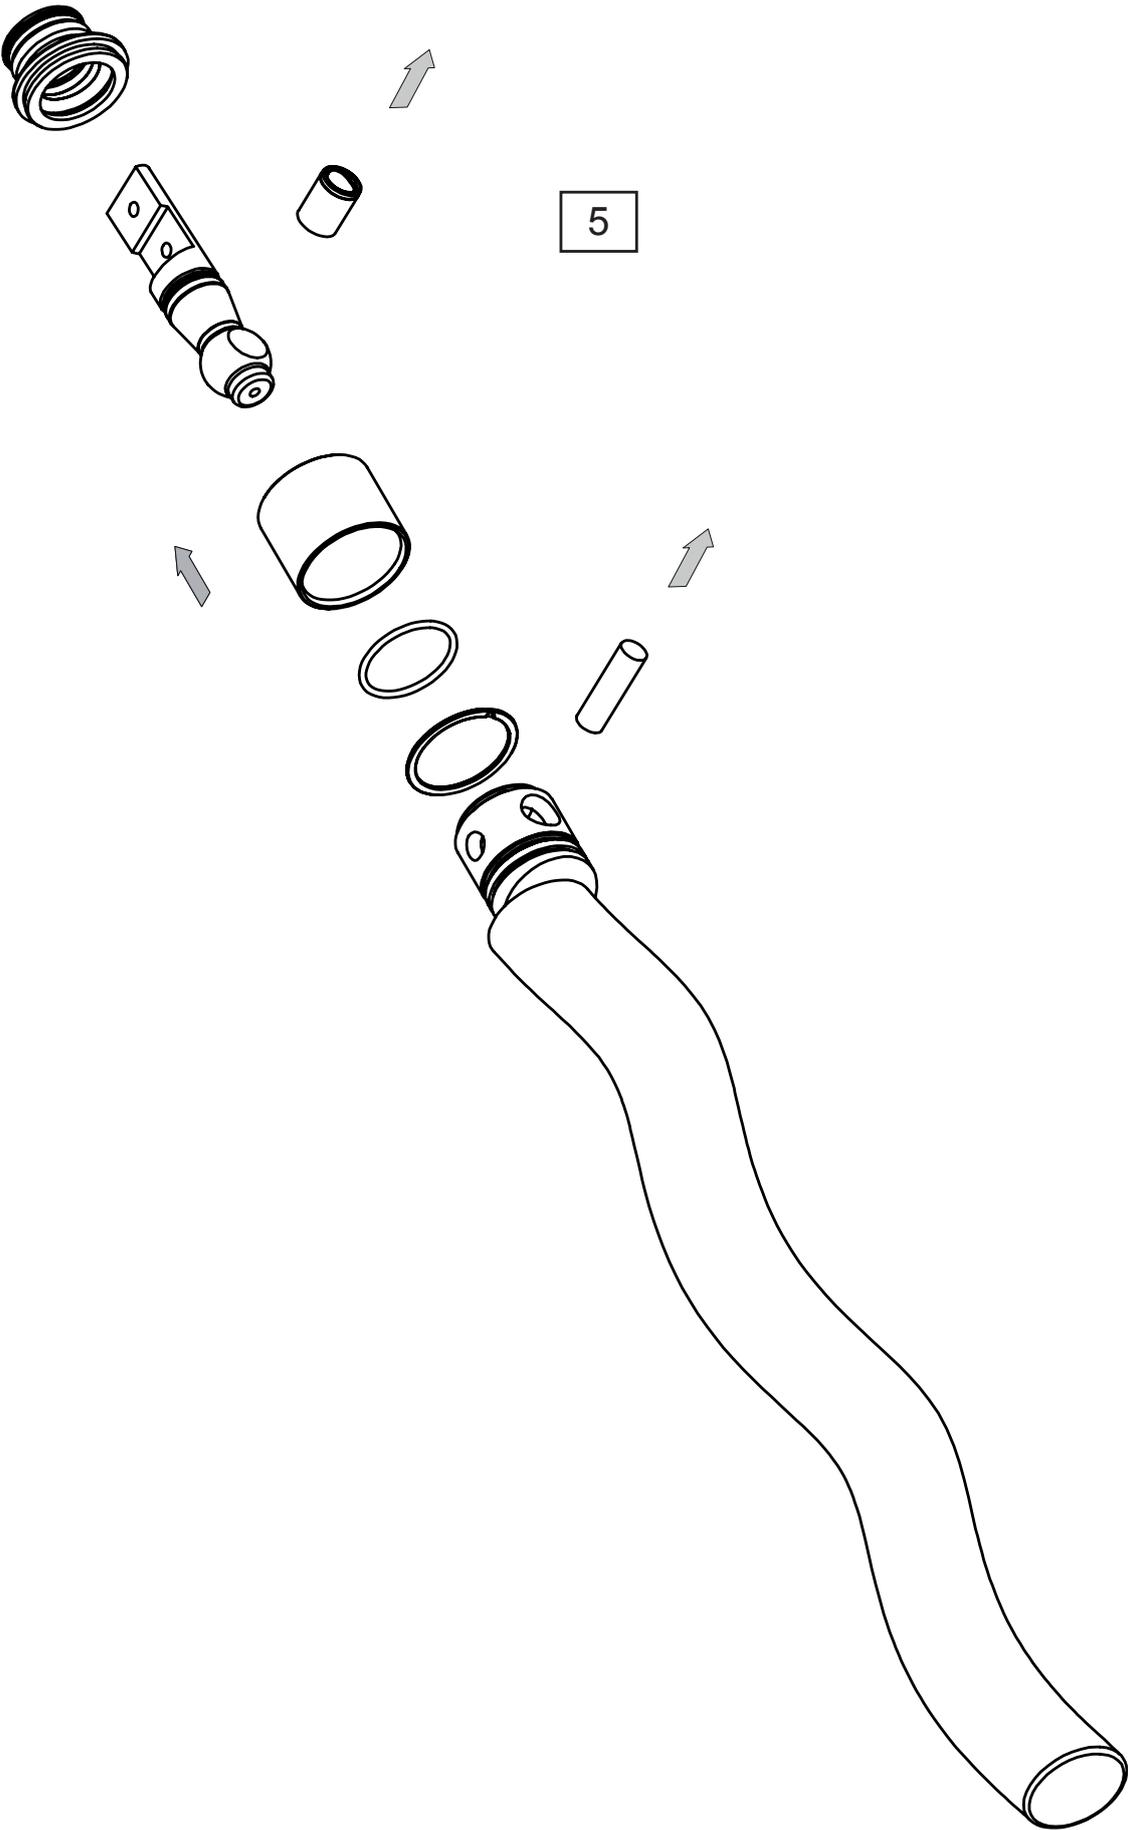


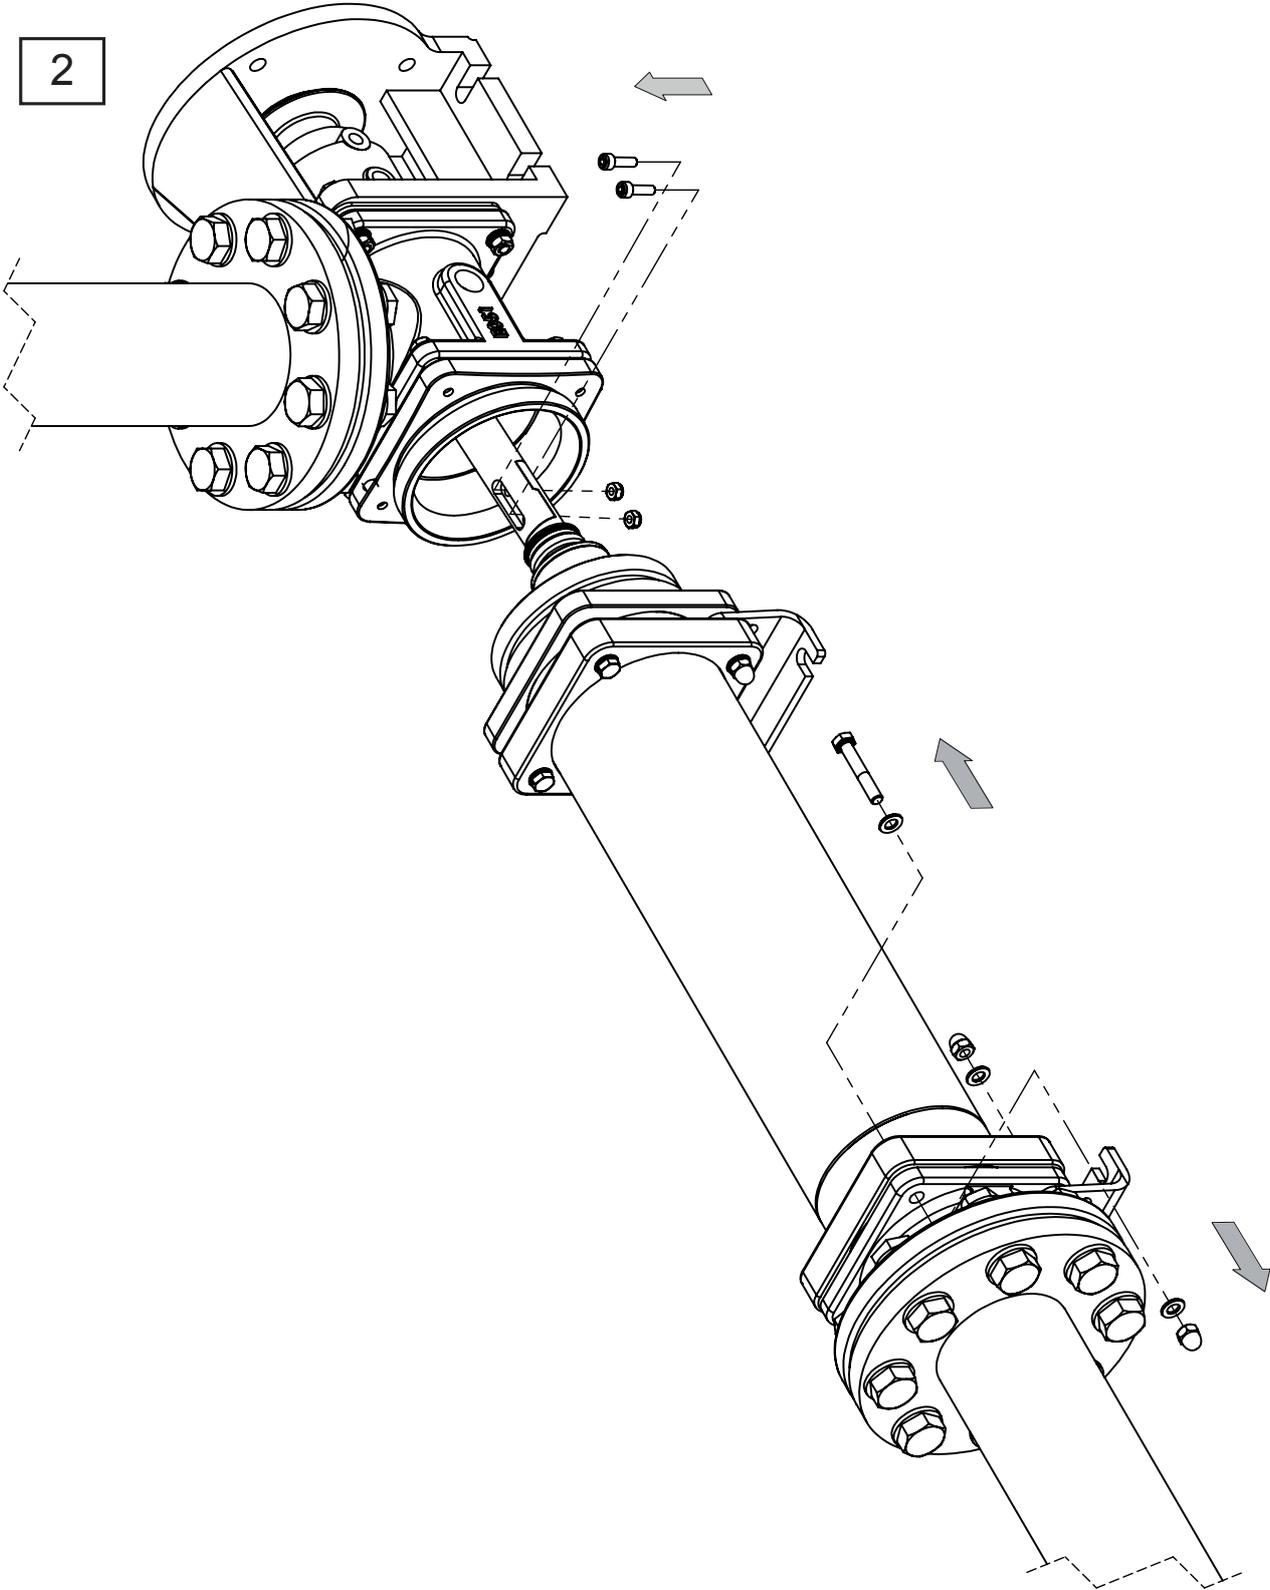



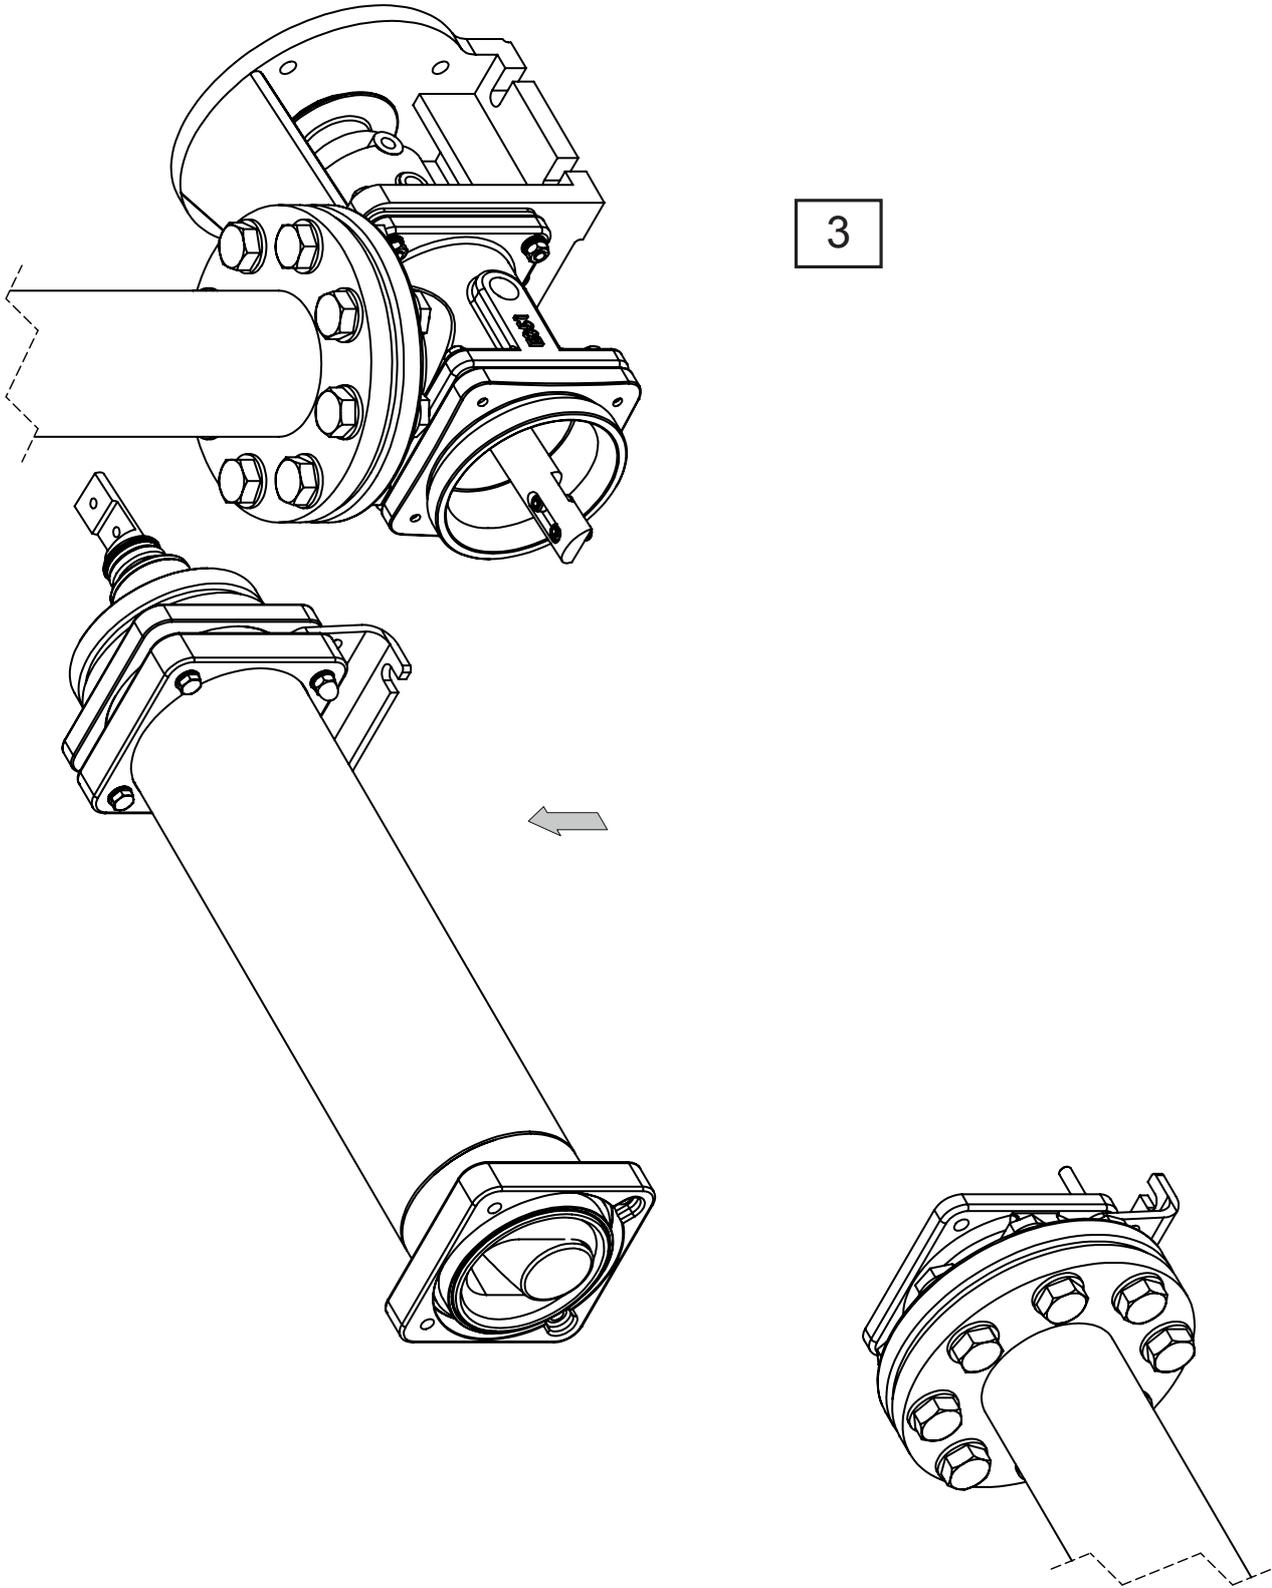


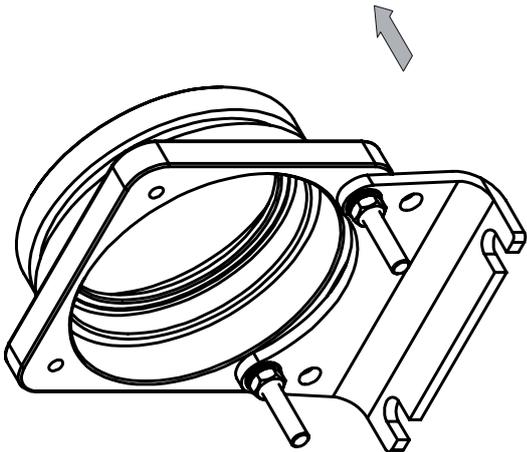



4

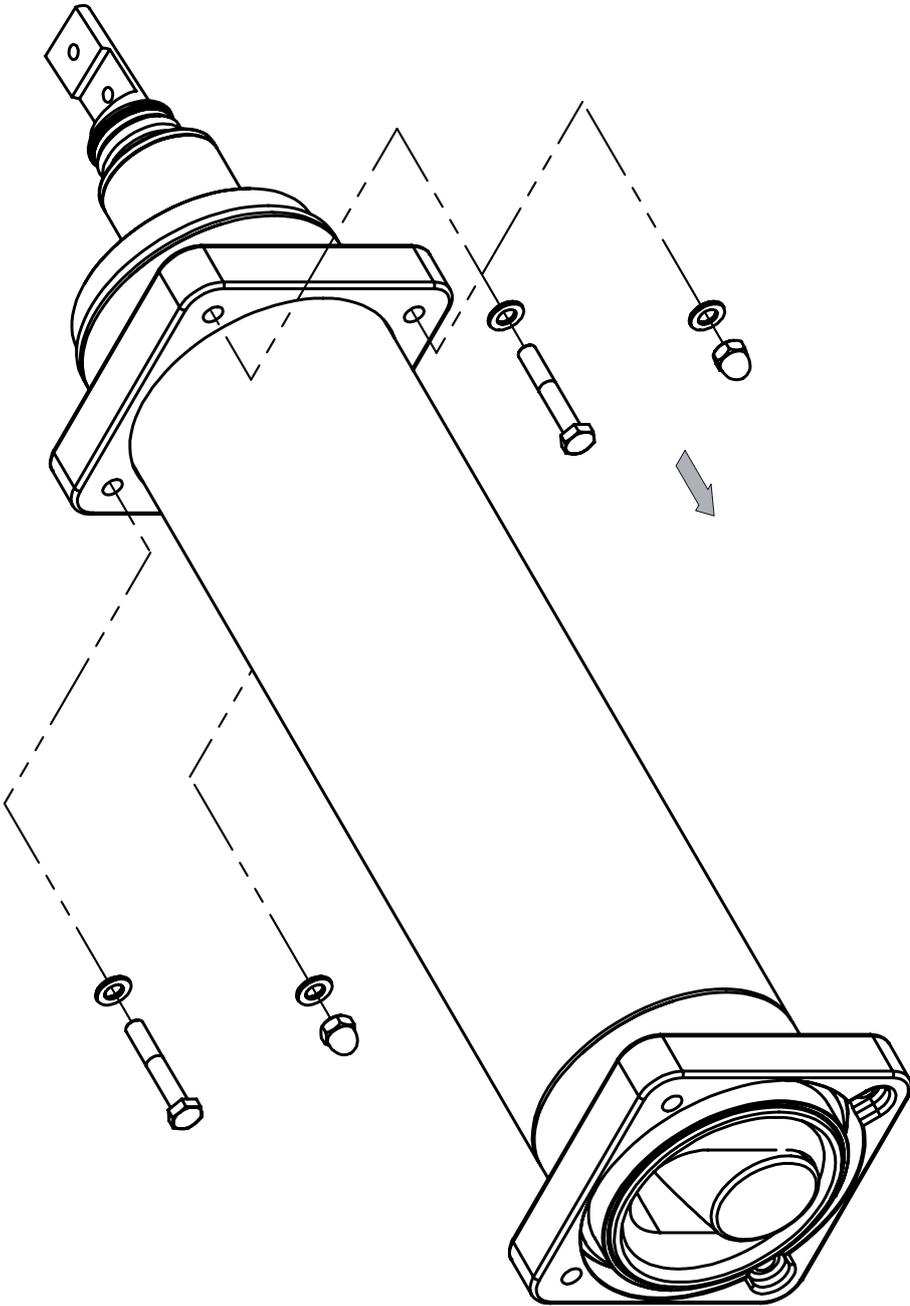


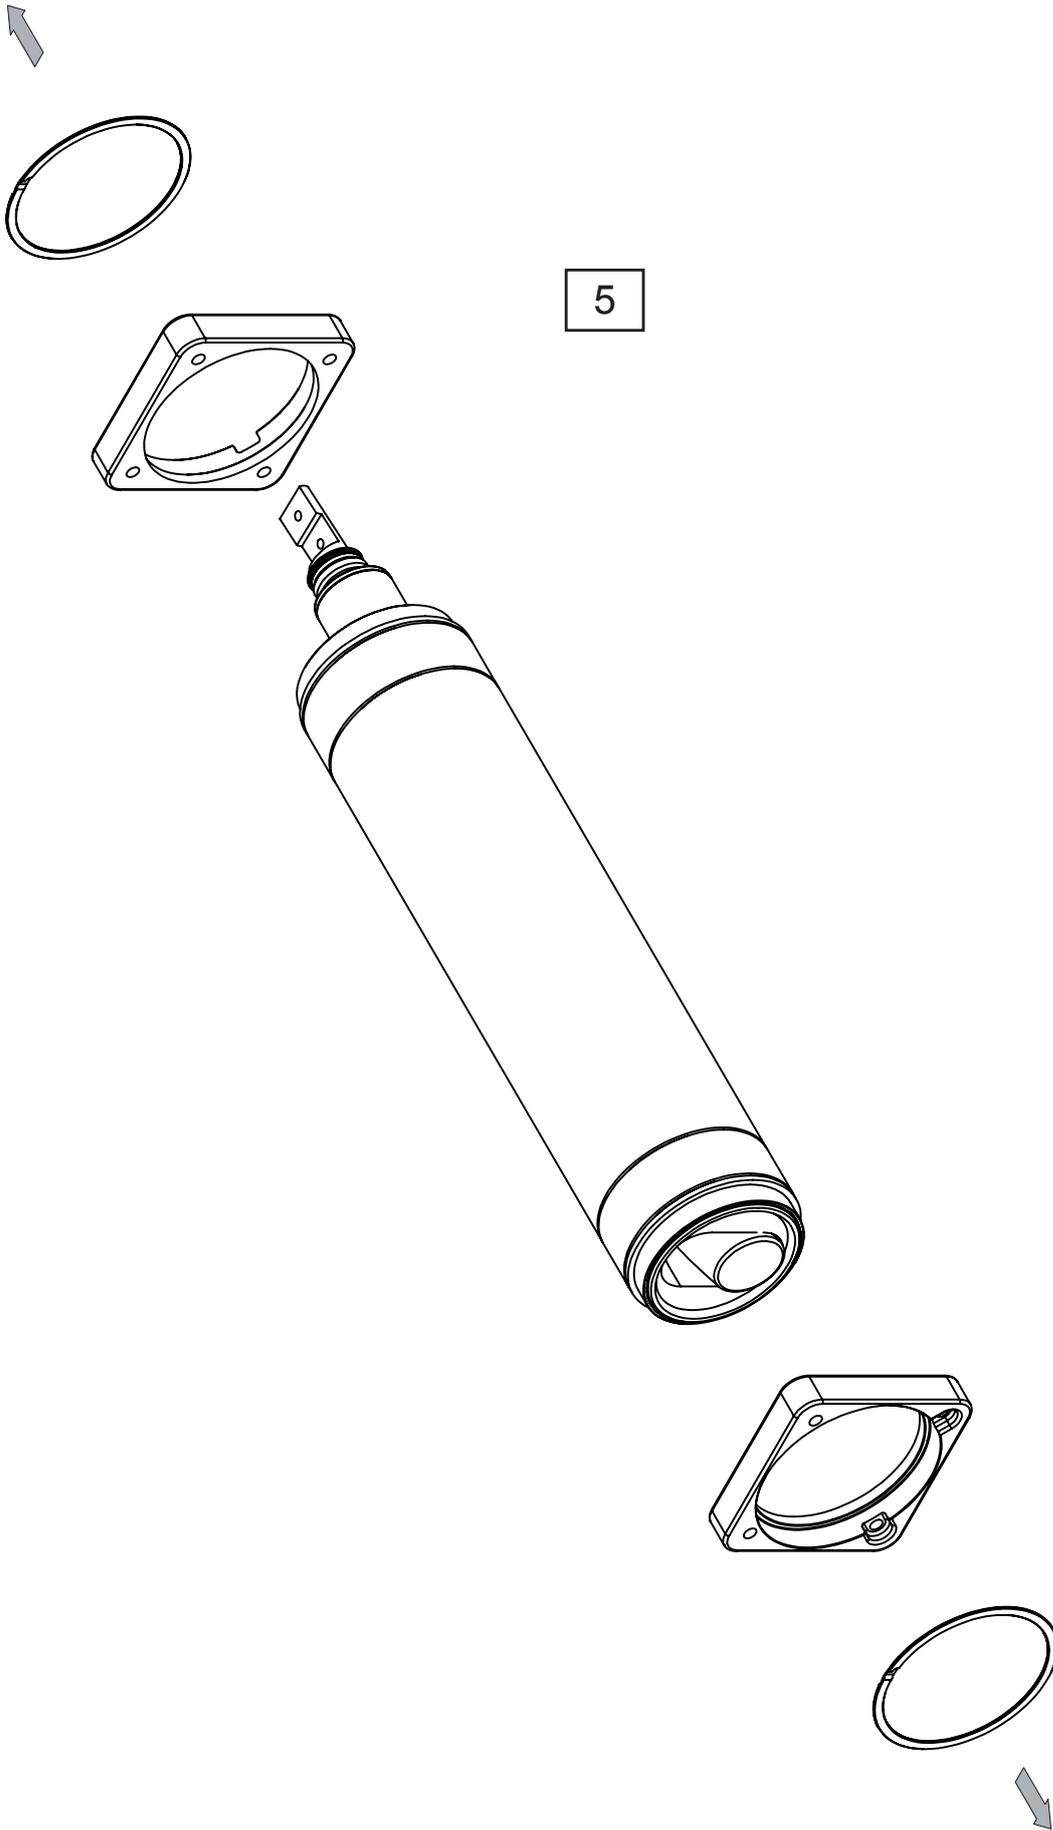


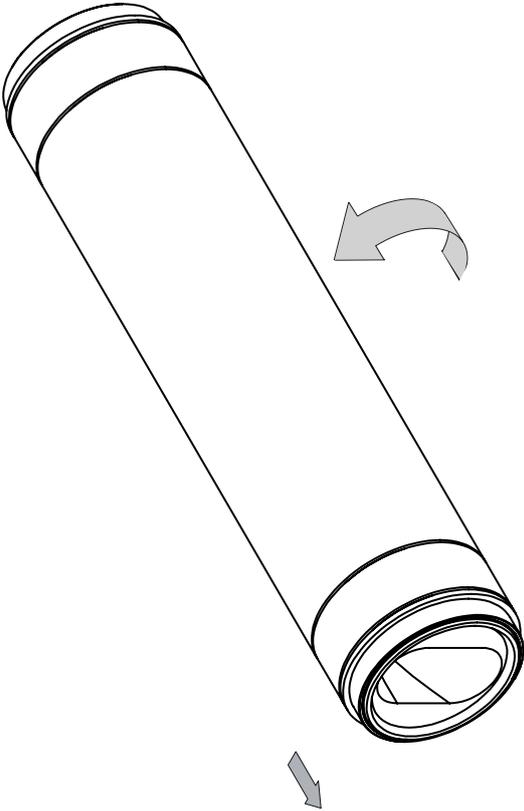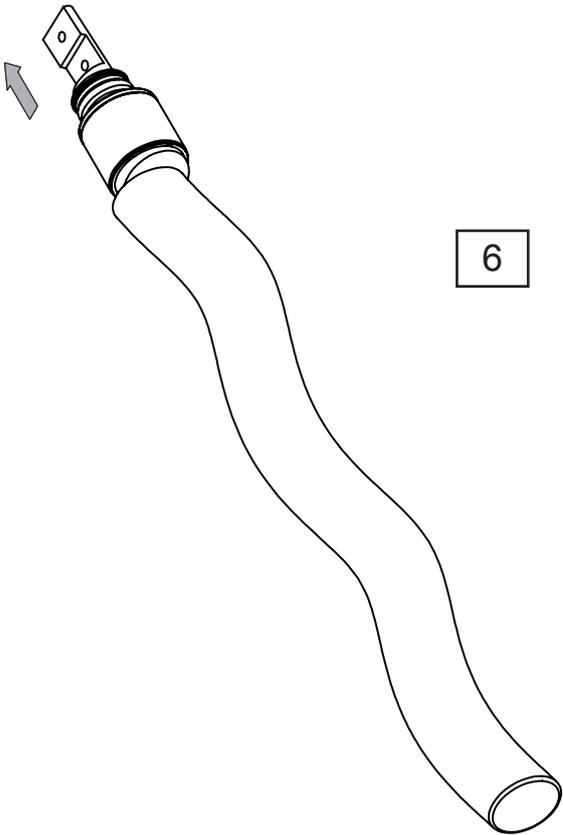

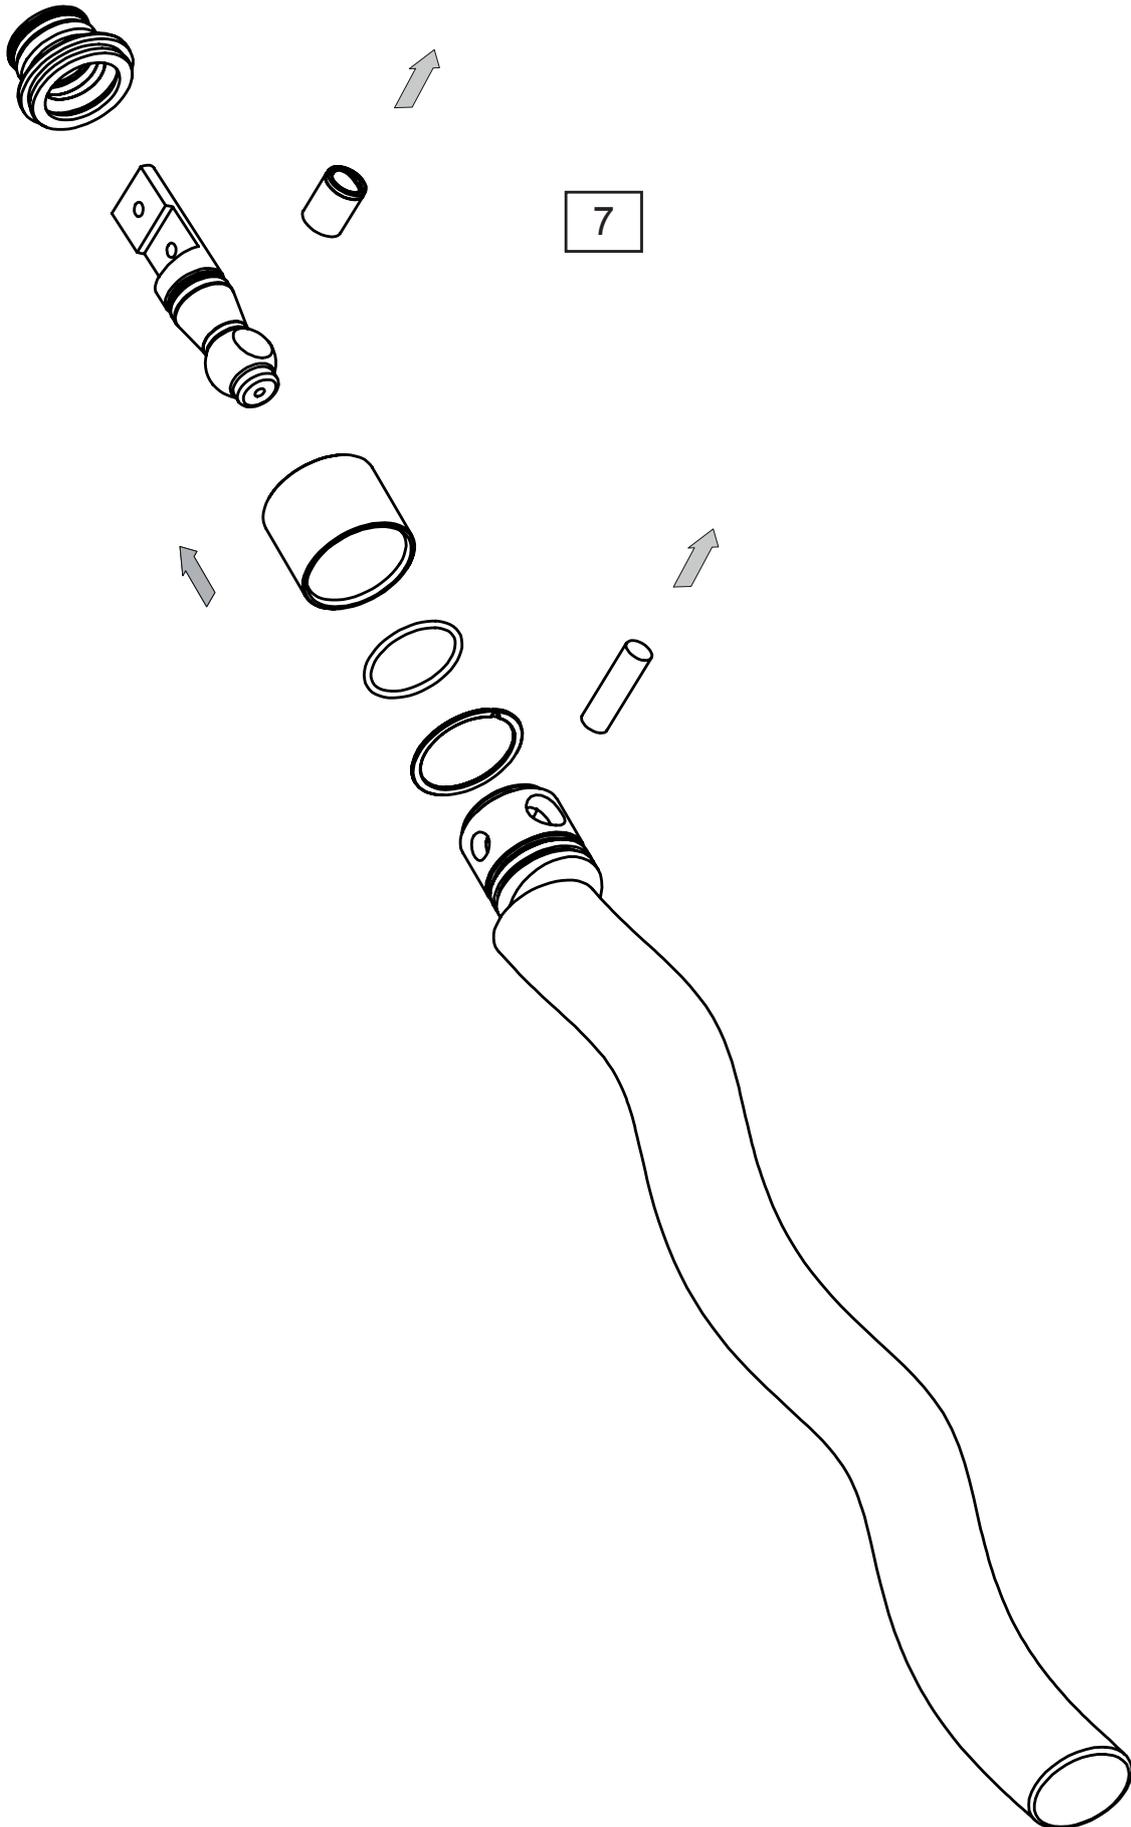

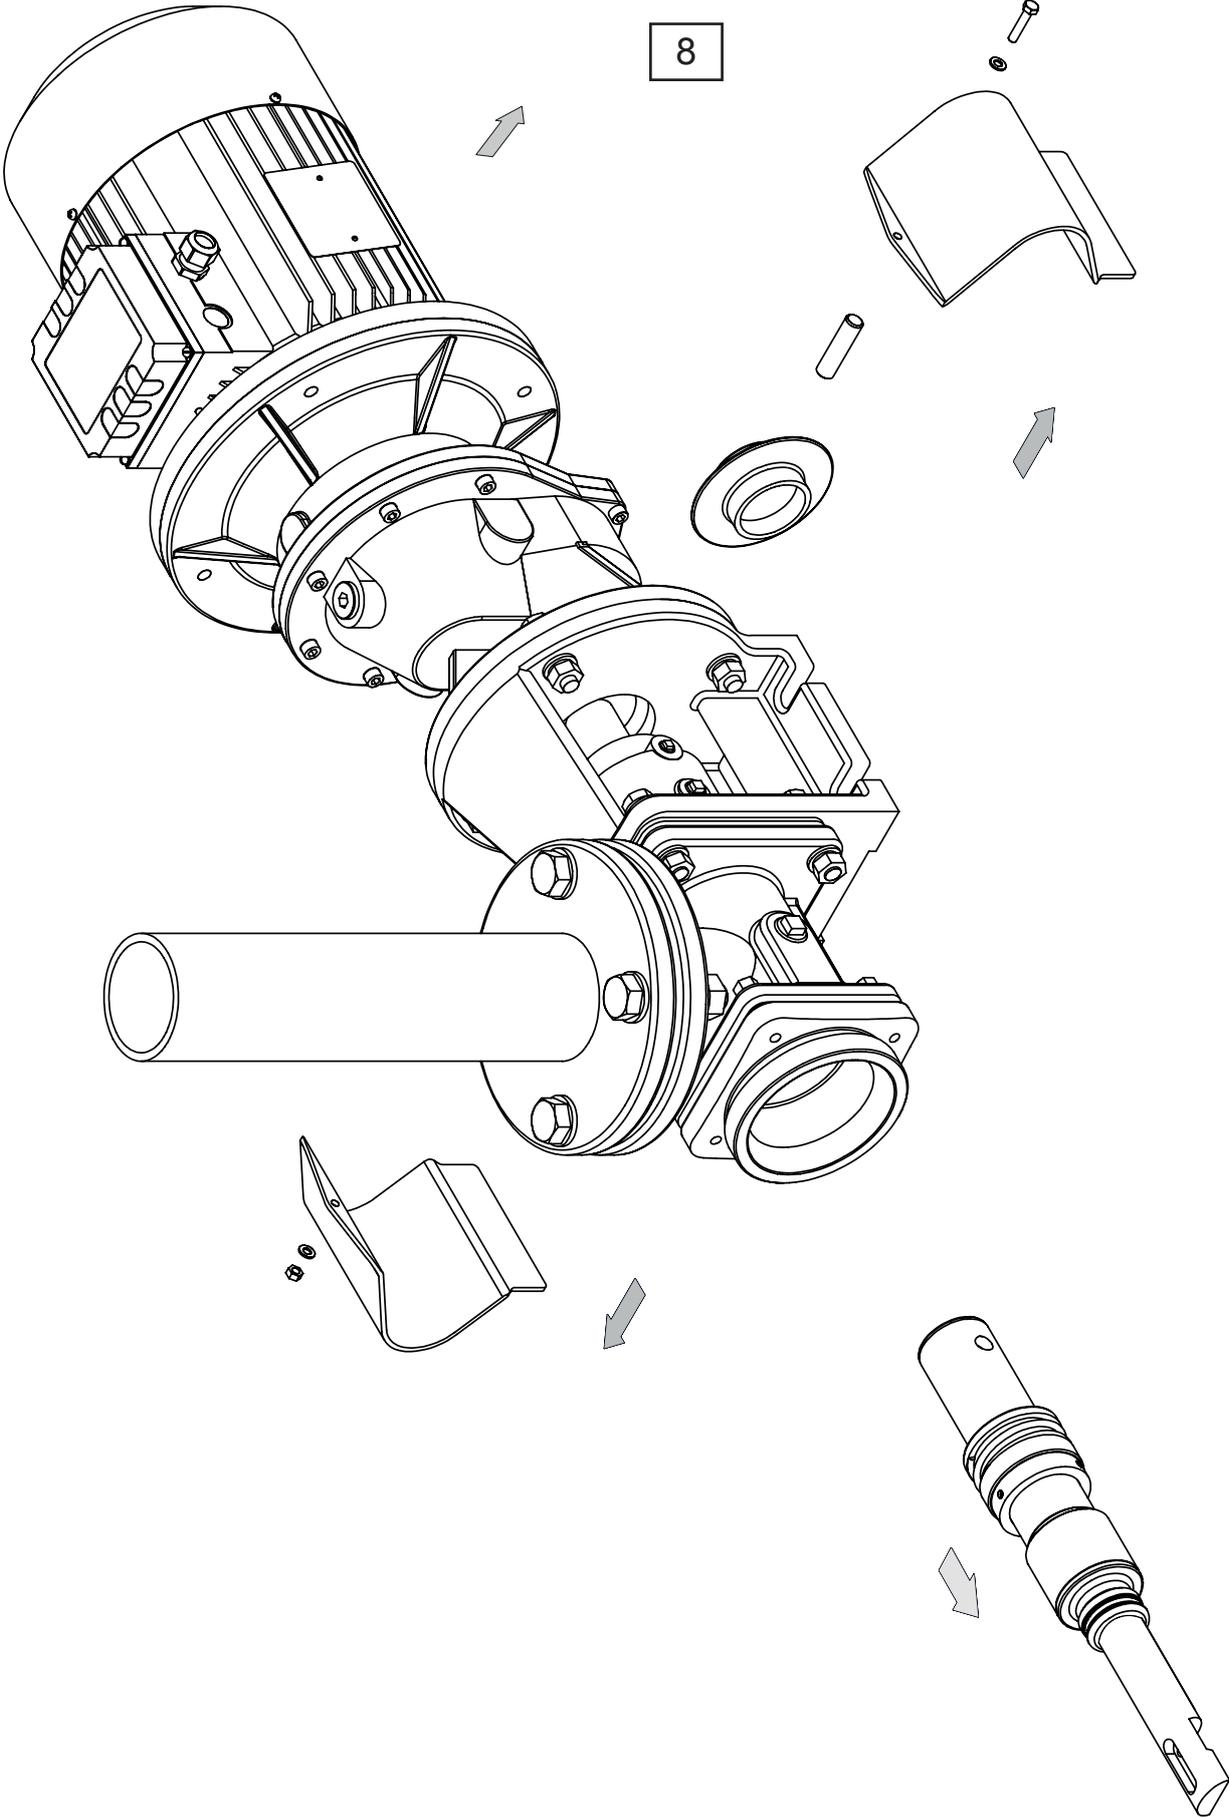


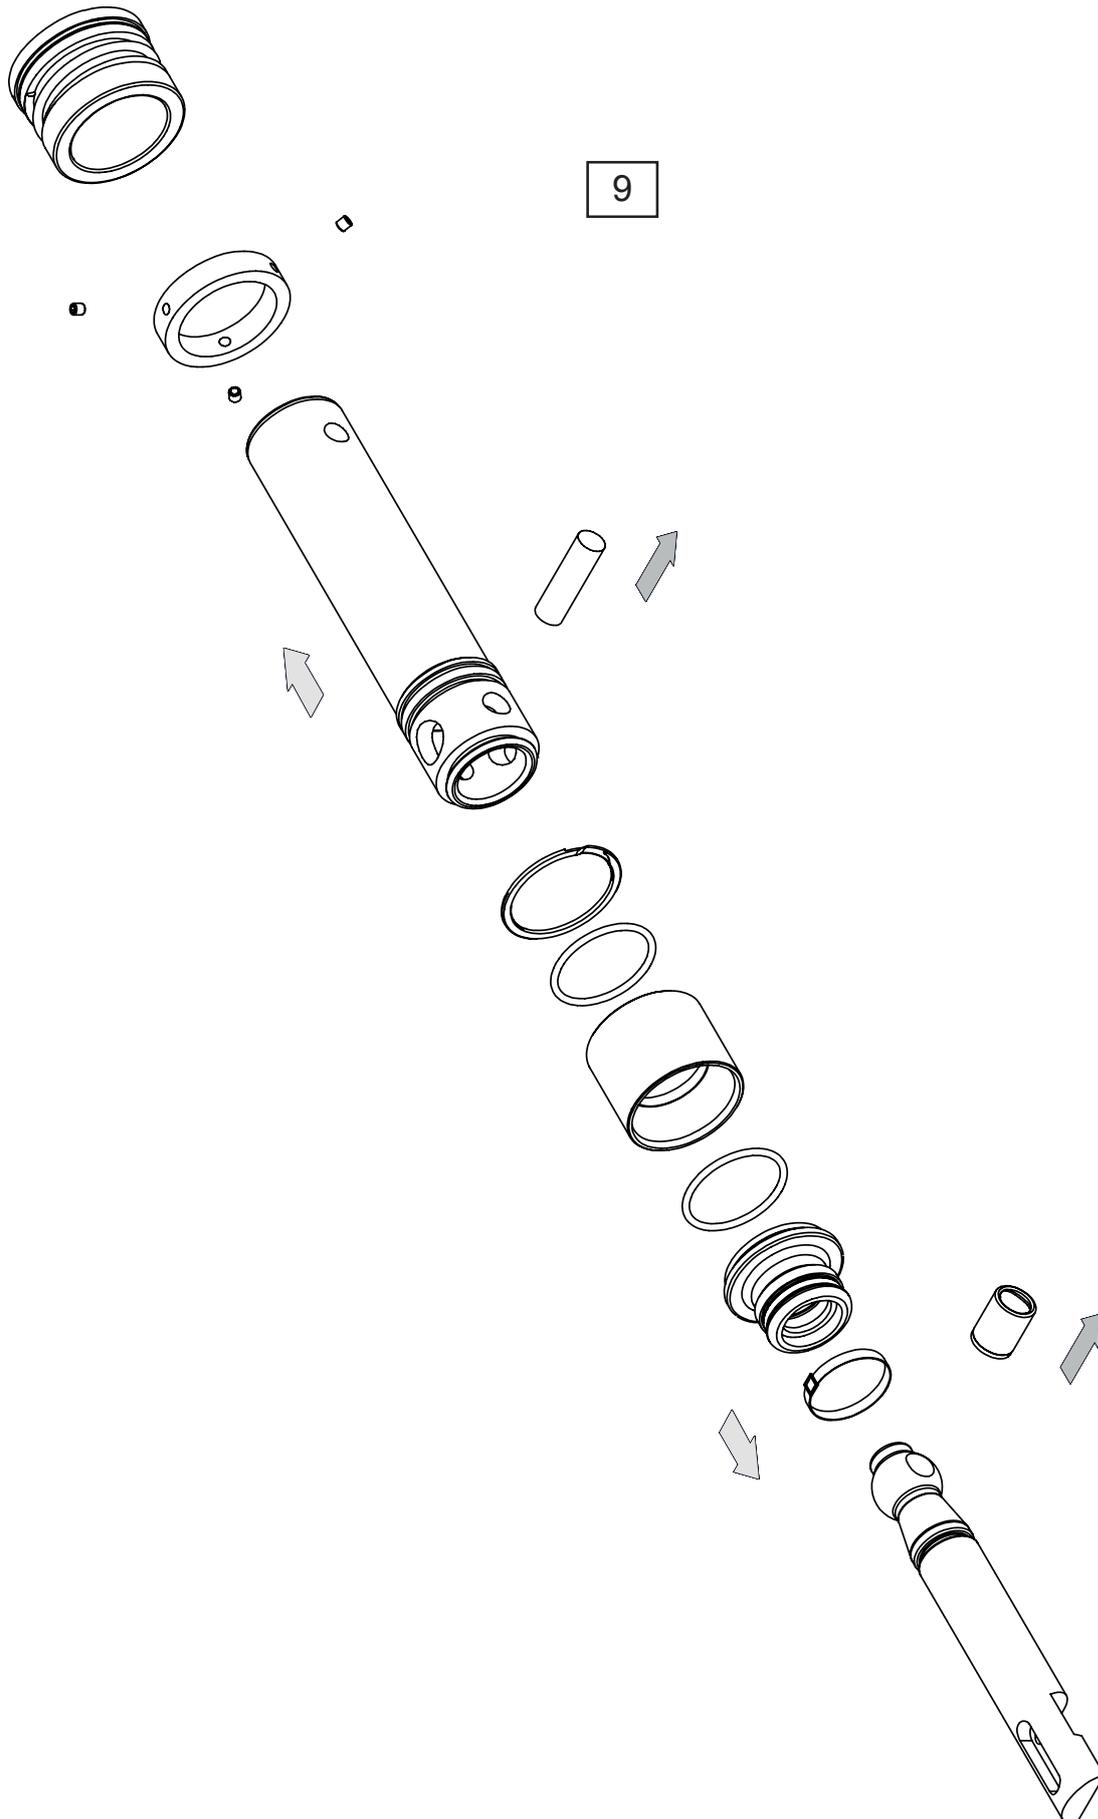

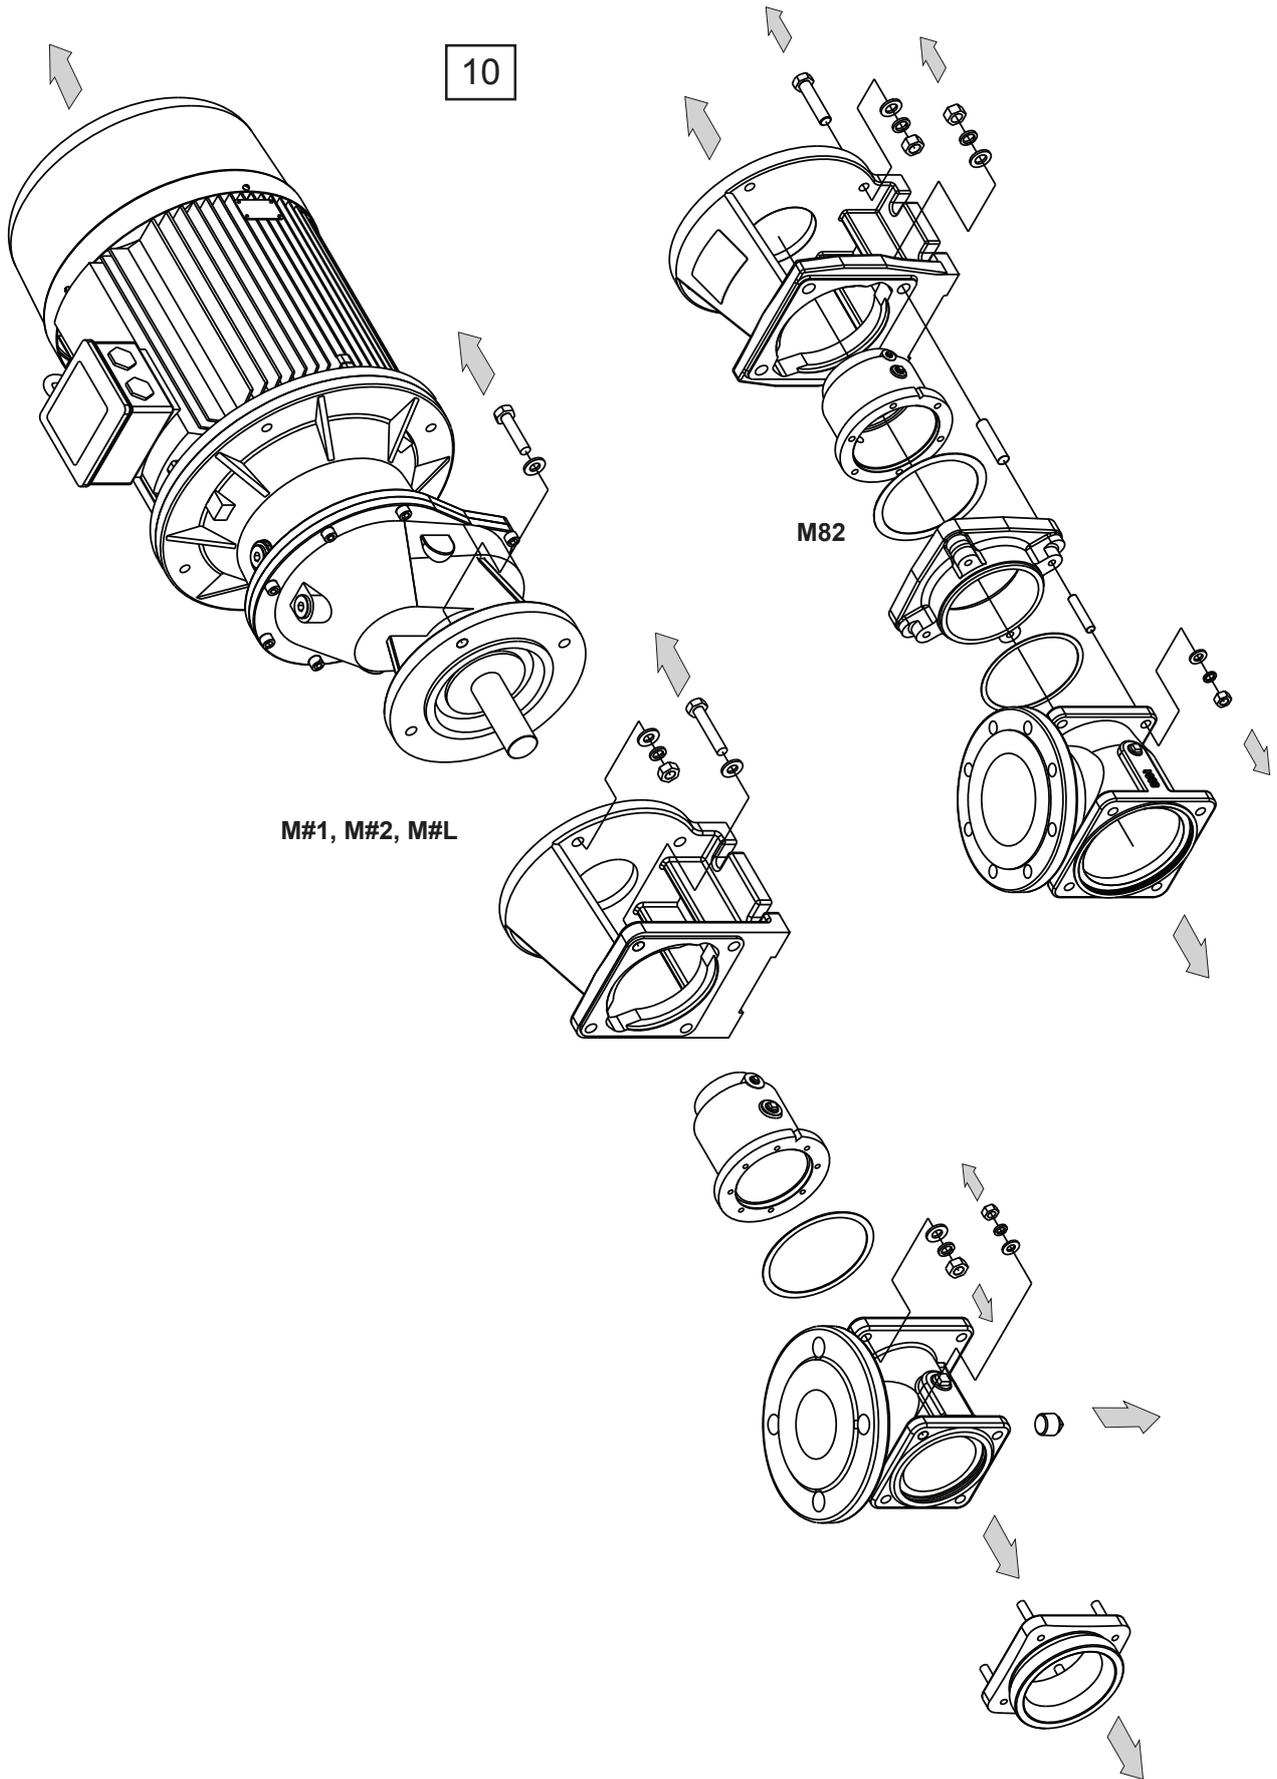


15 Rotor and stator change assembly procedures



15.1 M#1, M#2, M#L

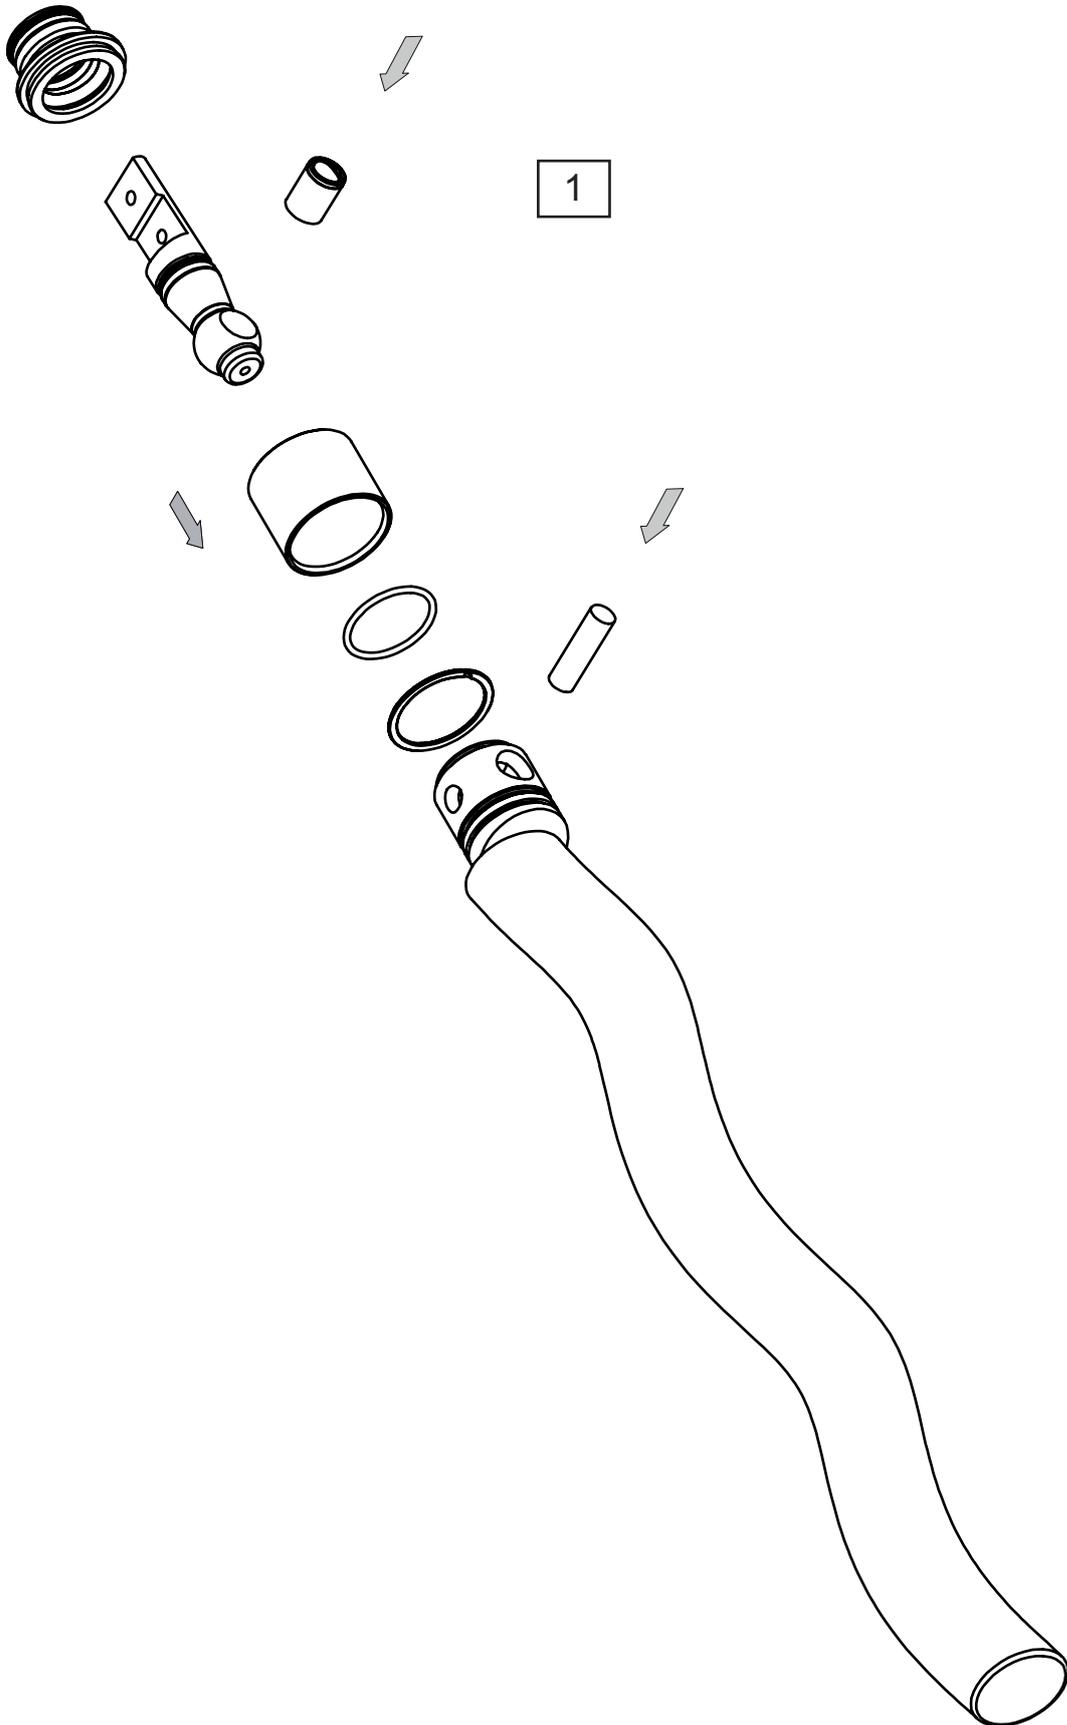



1313-01

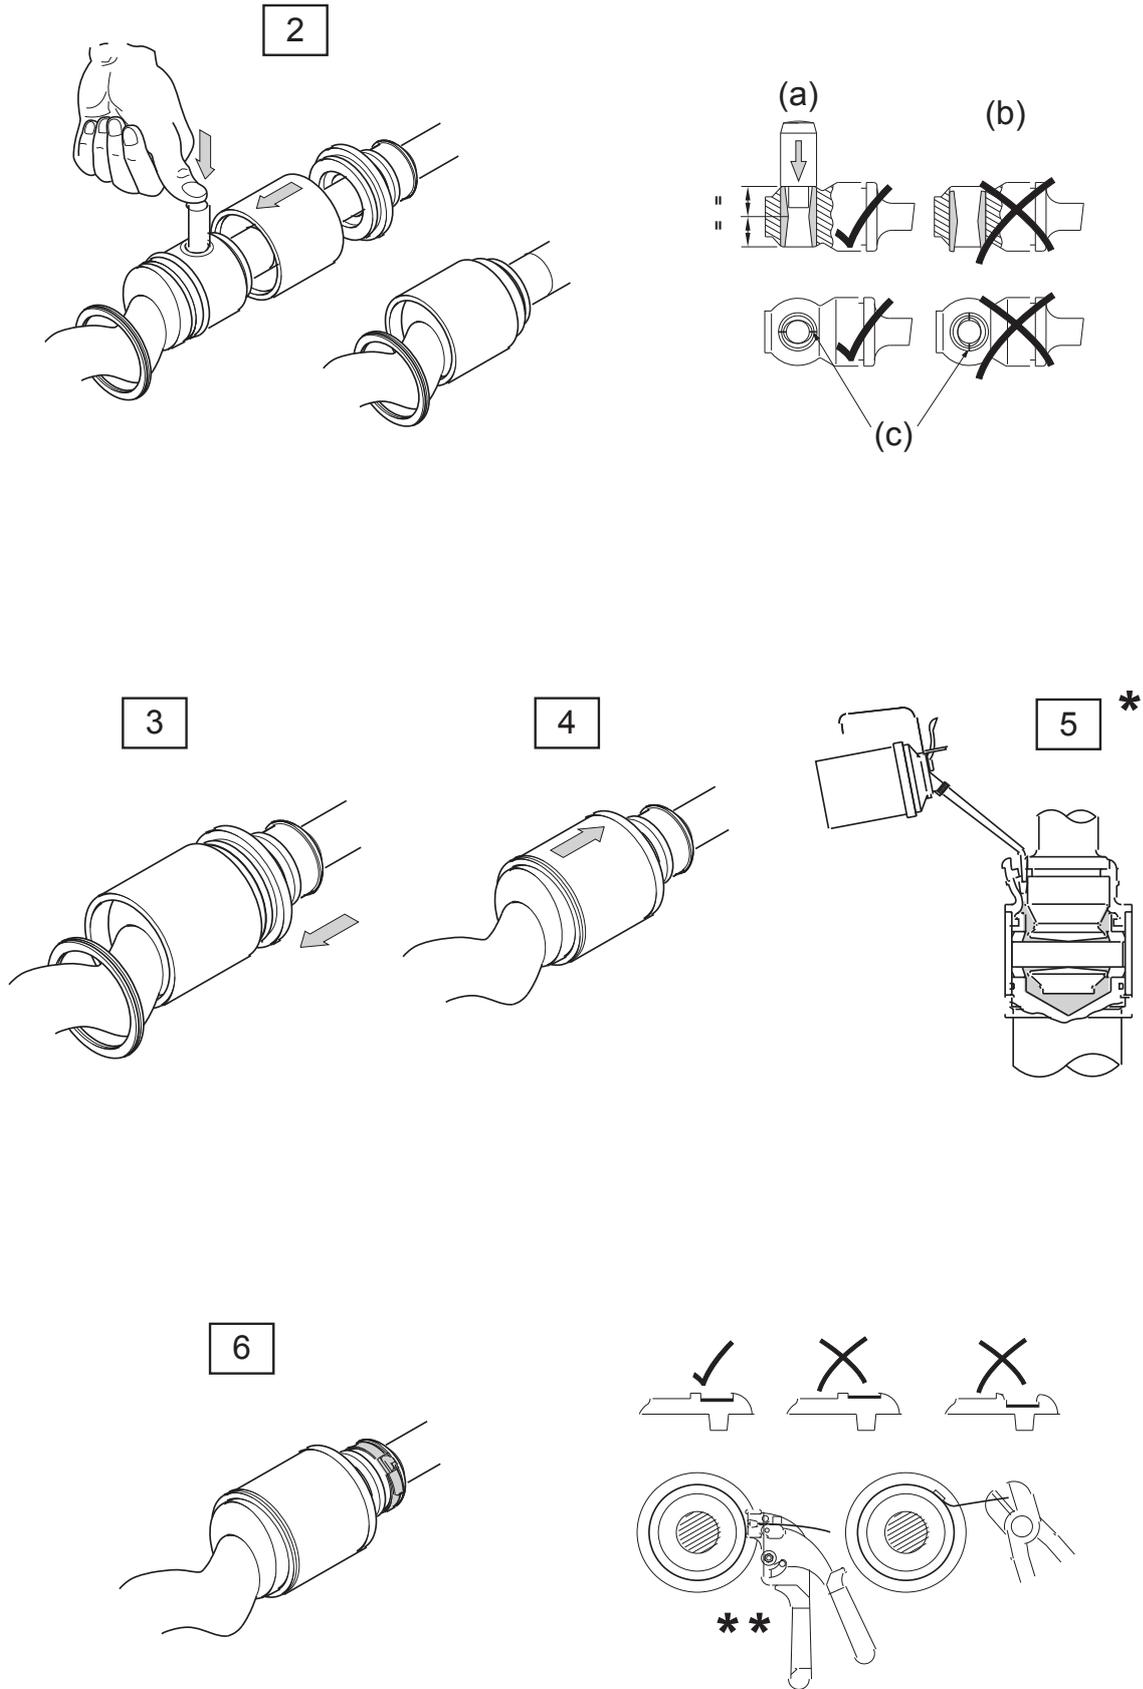


*Must be filled with oil in the vertical position.
 (a) Correct (b) Incorrect (c) Alignment marks

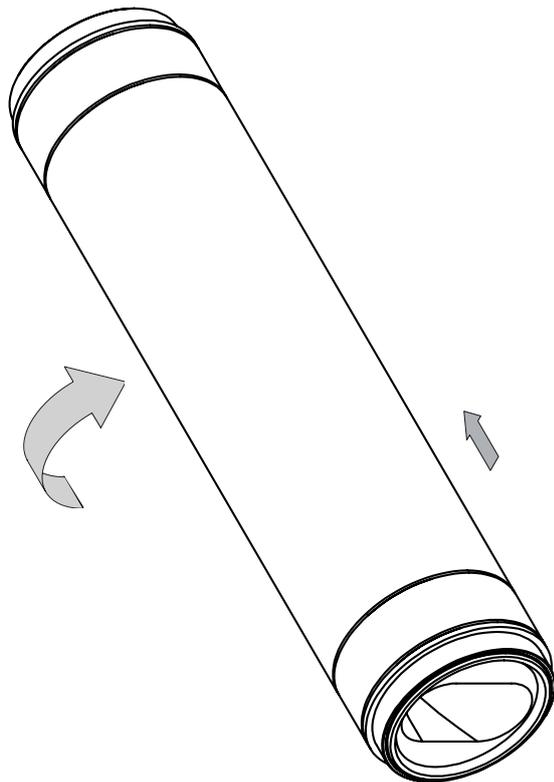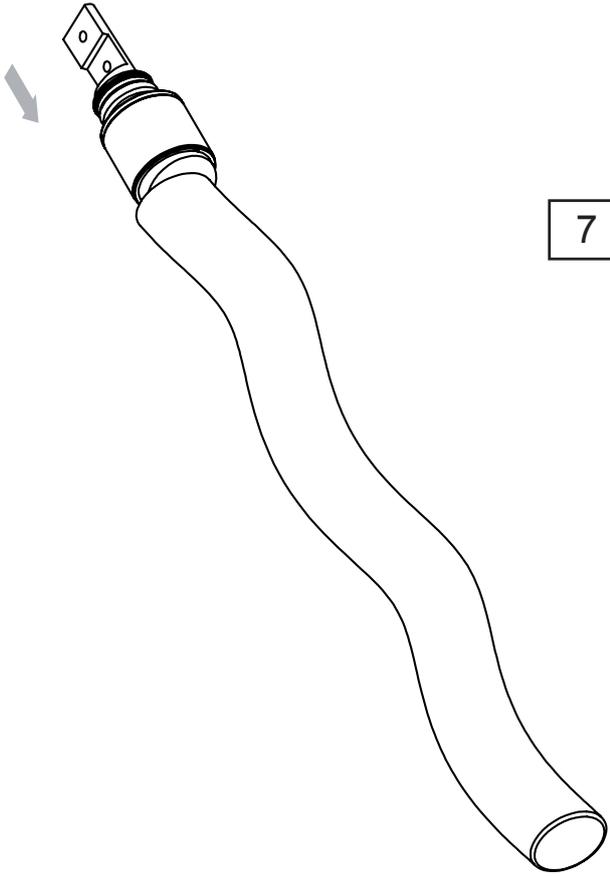


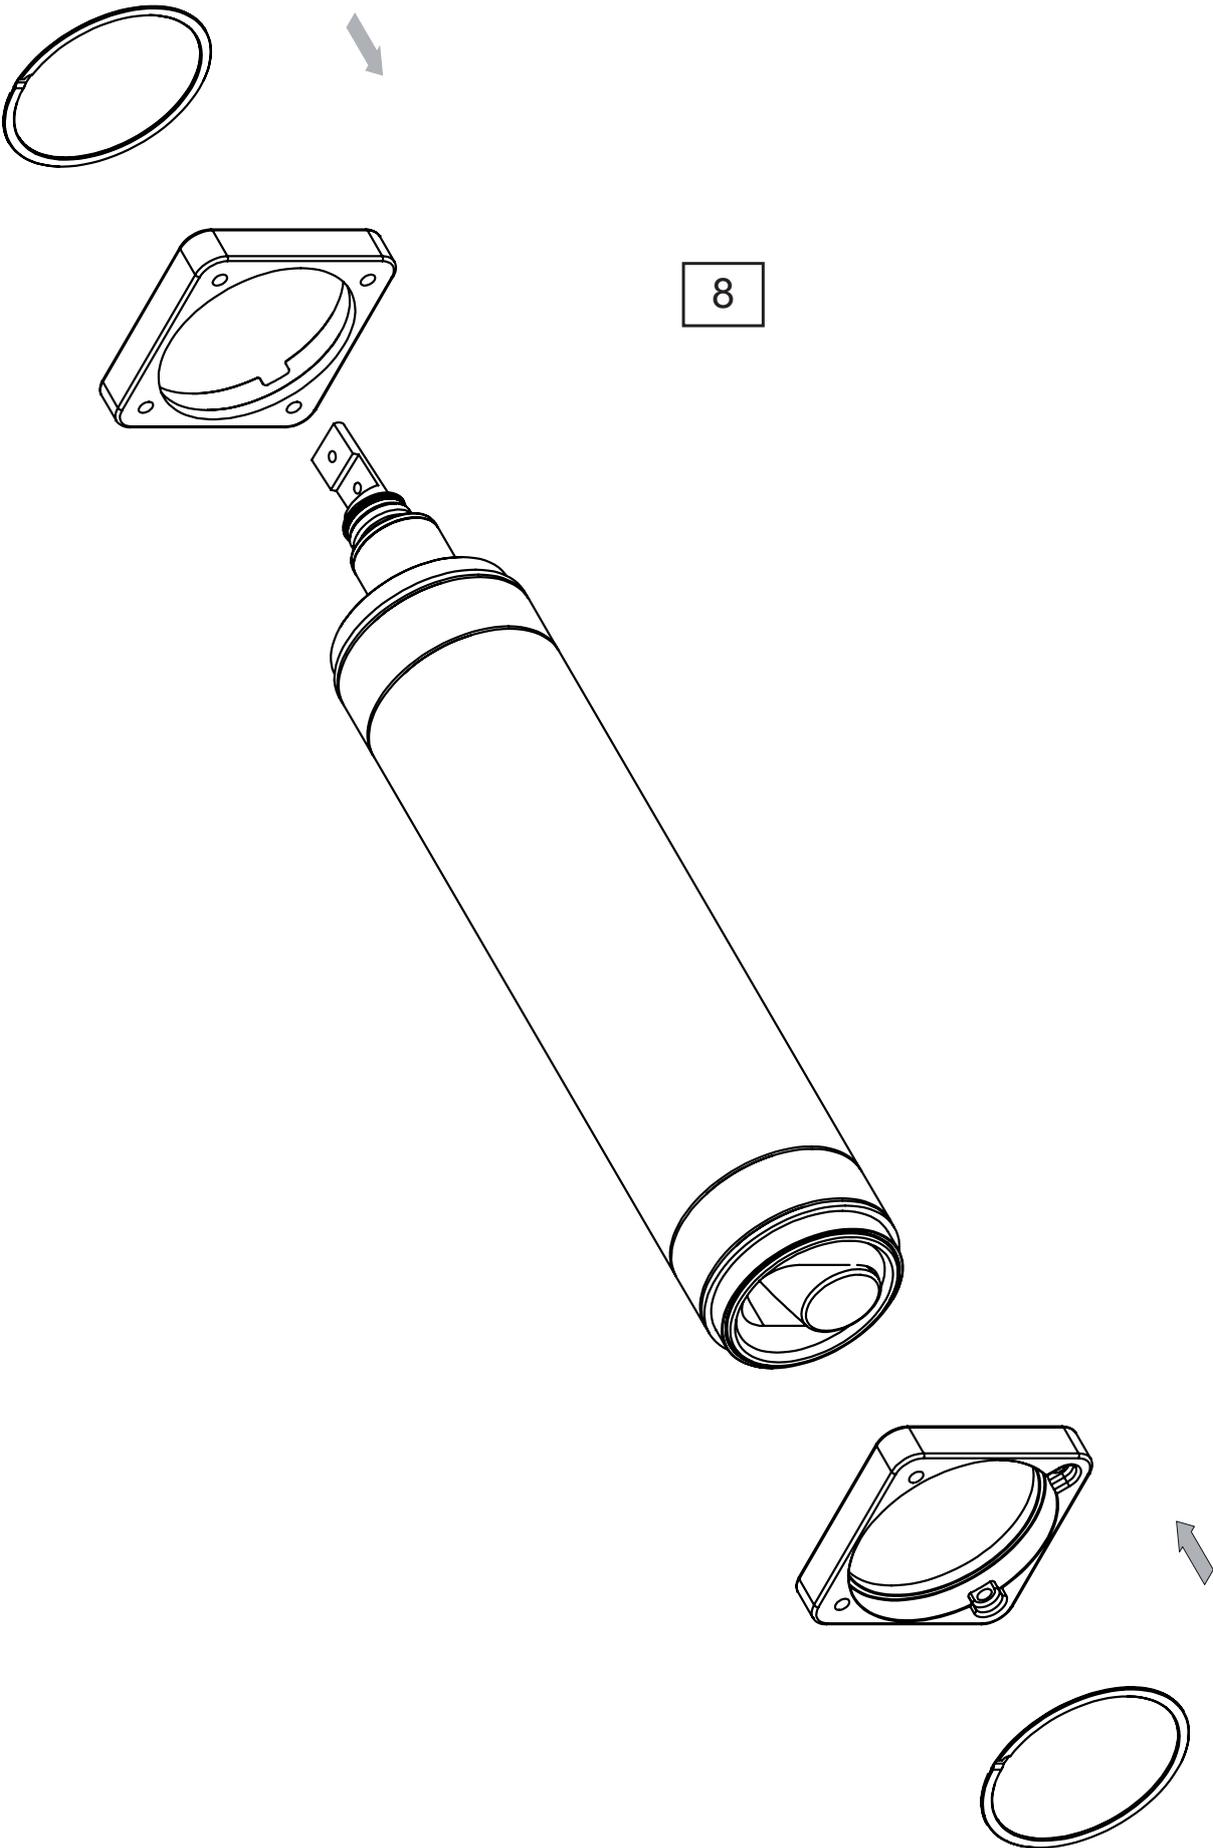


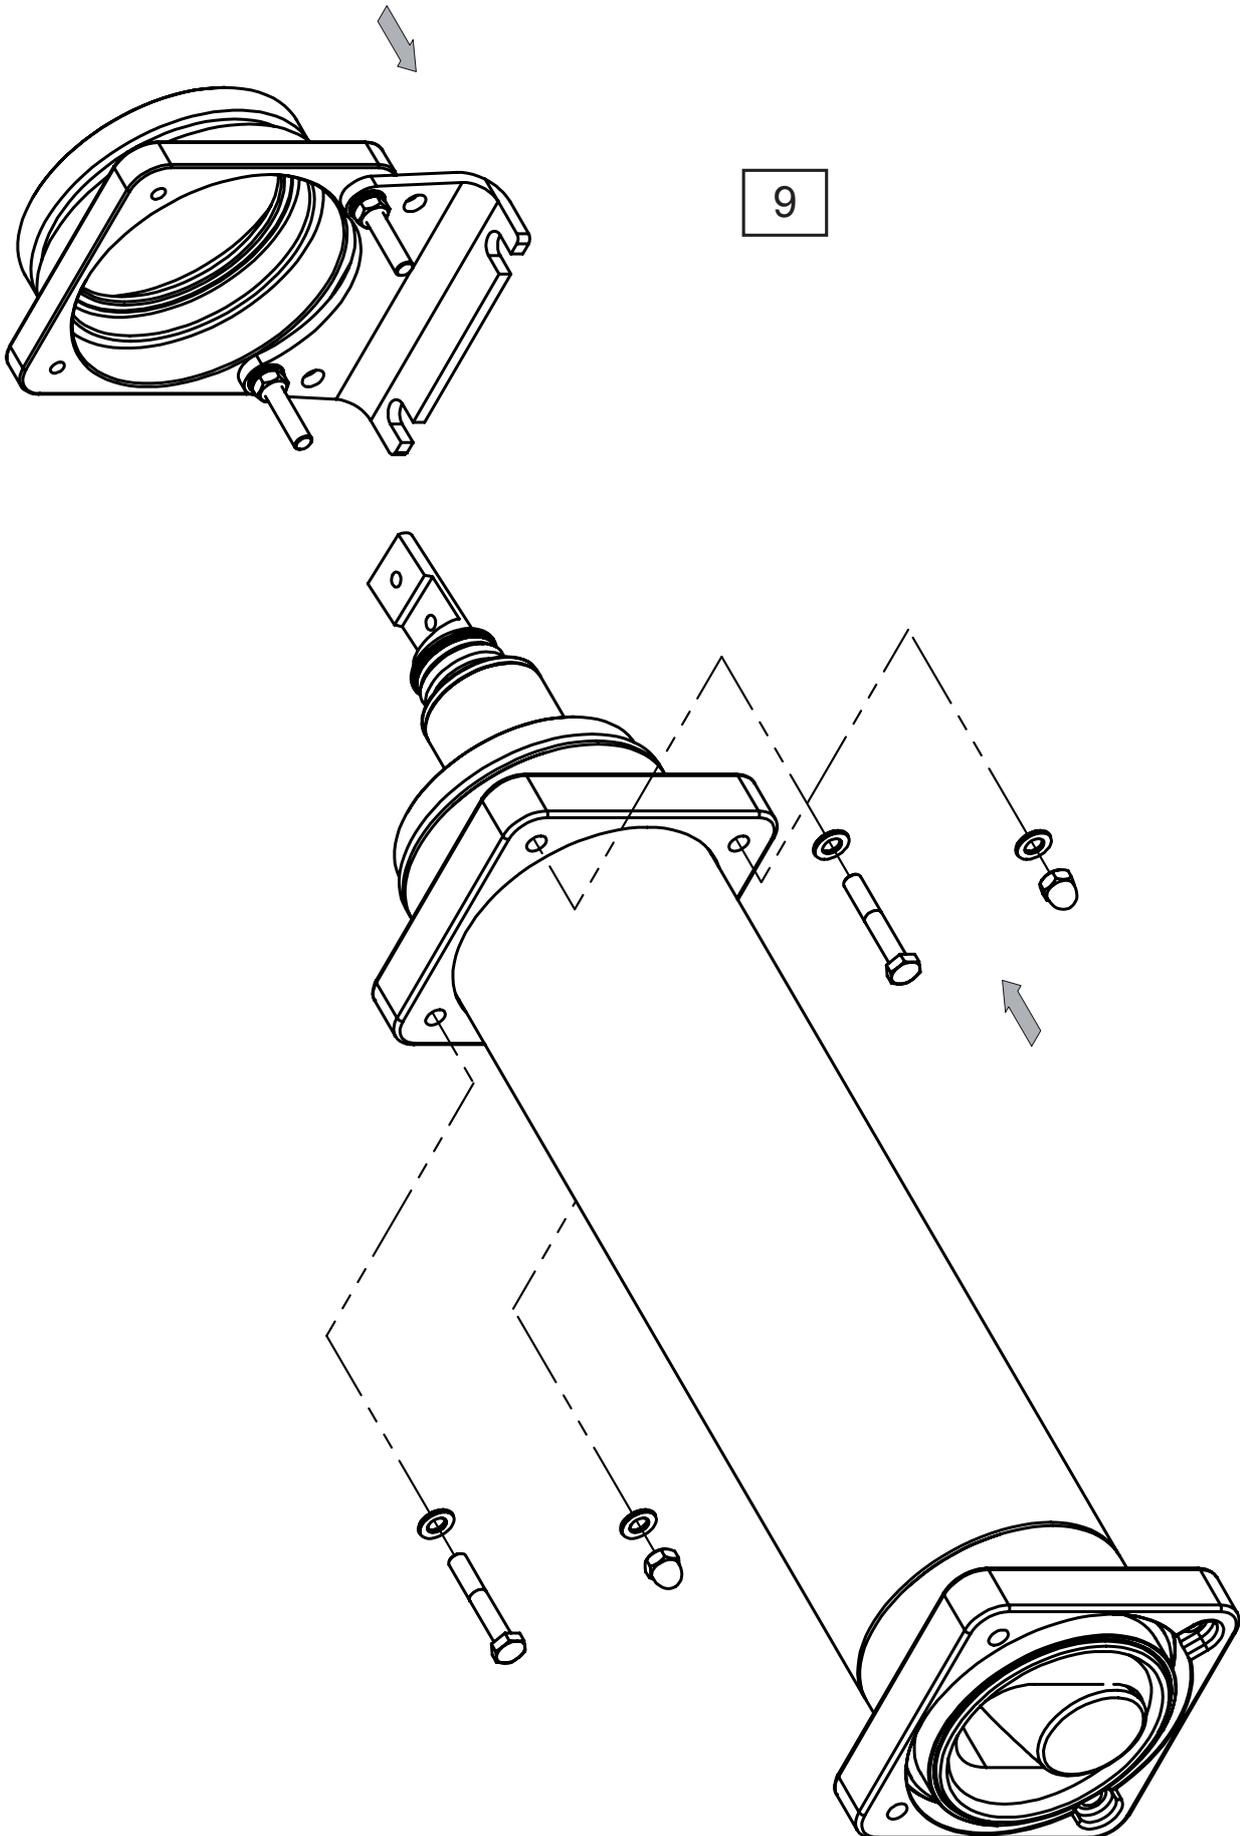


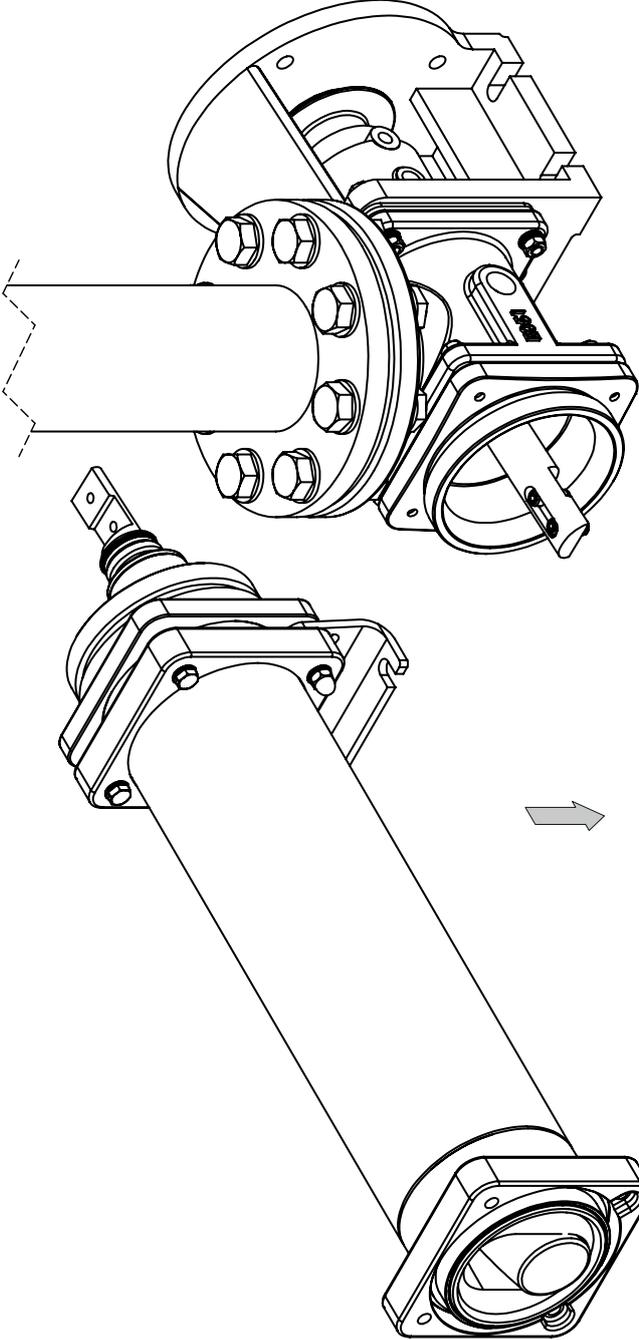

10

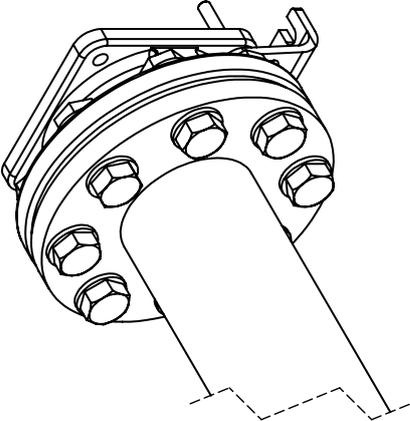


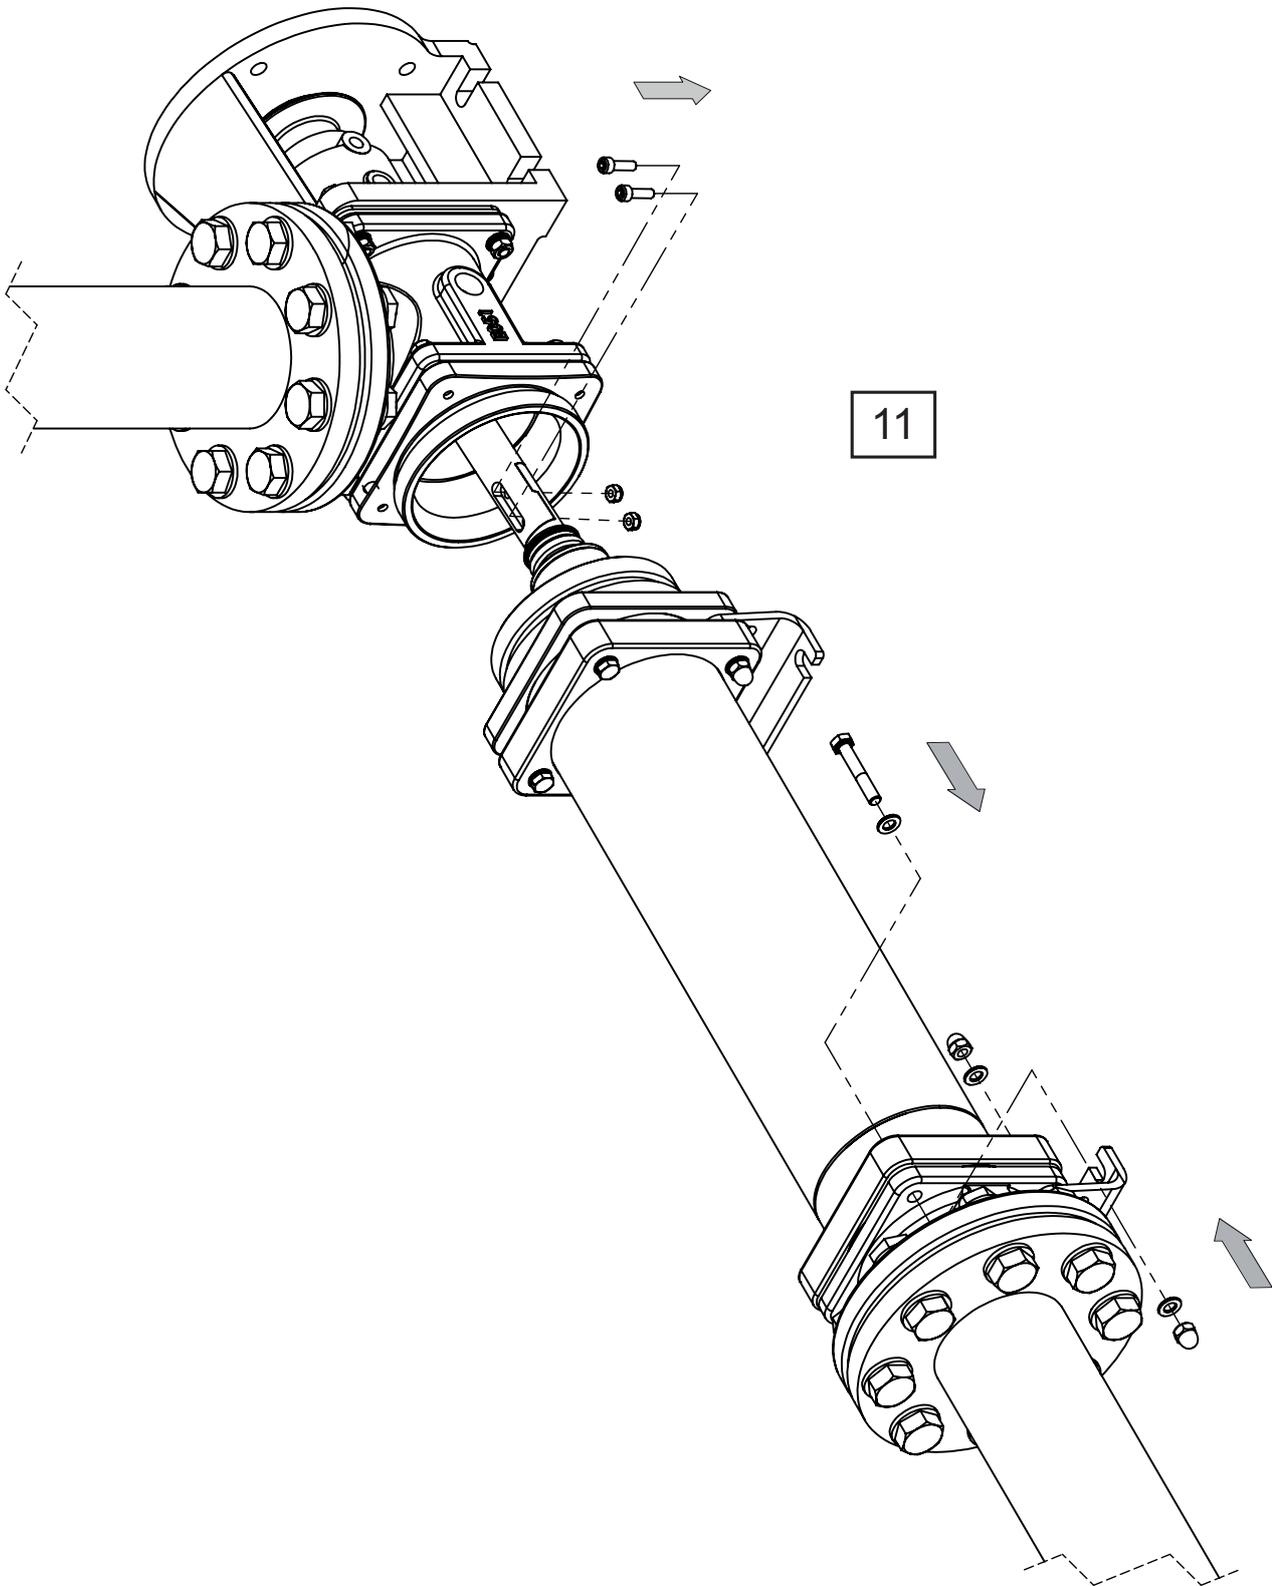

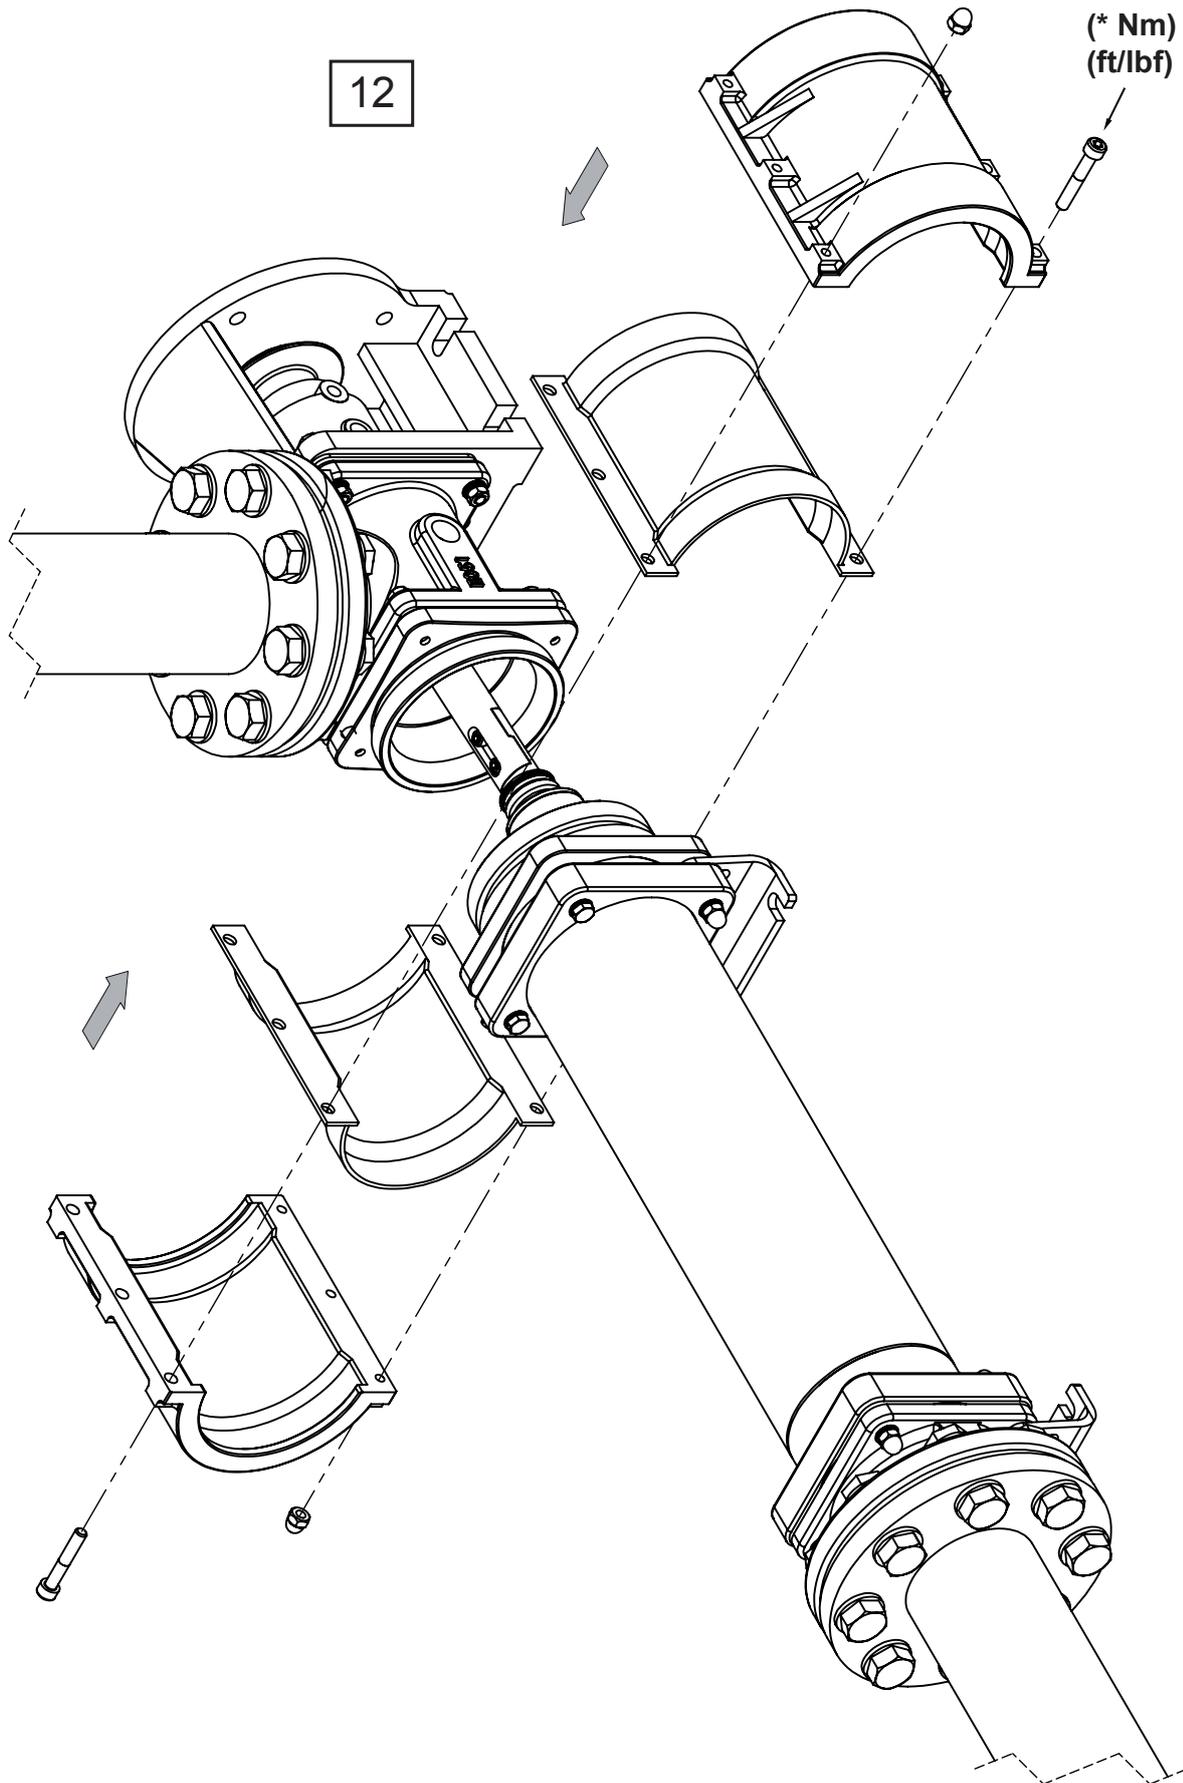


* Refer to torque settings table (Section 12, page 34)



15.2 M#4

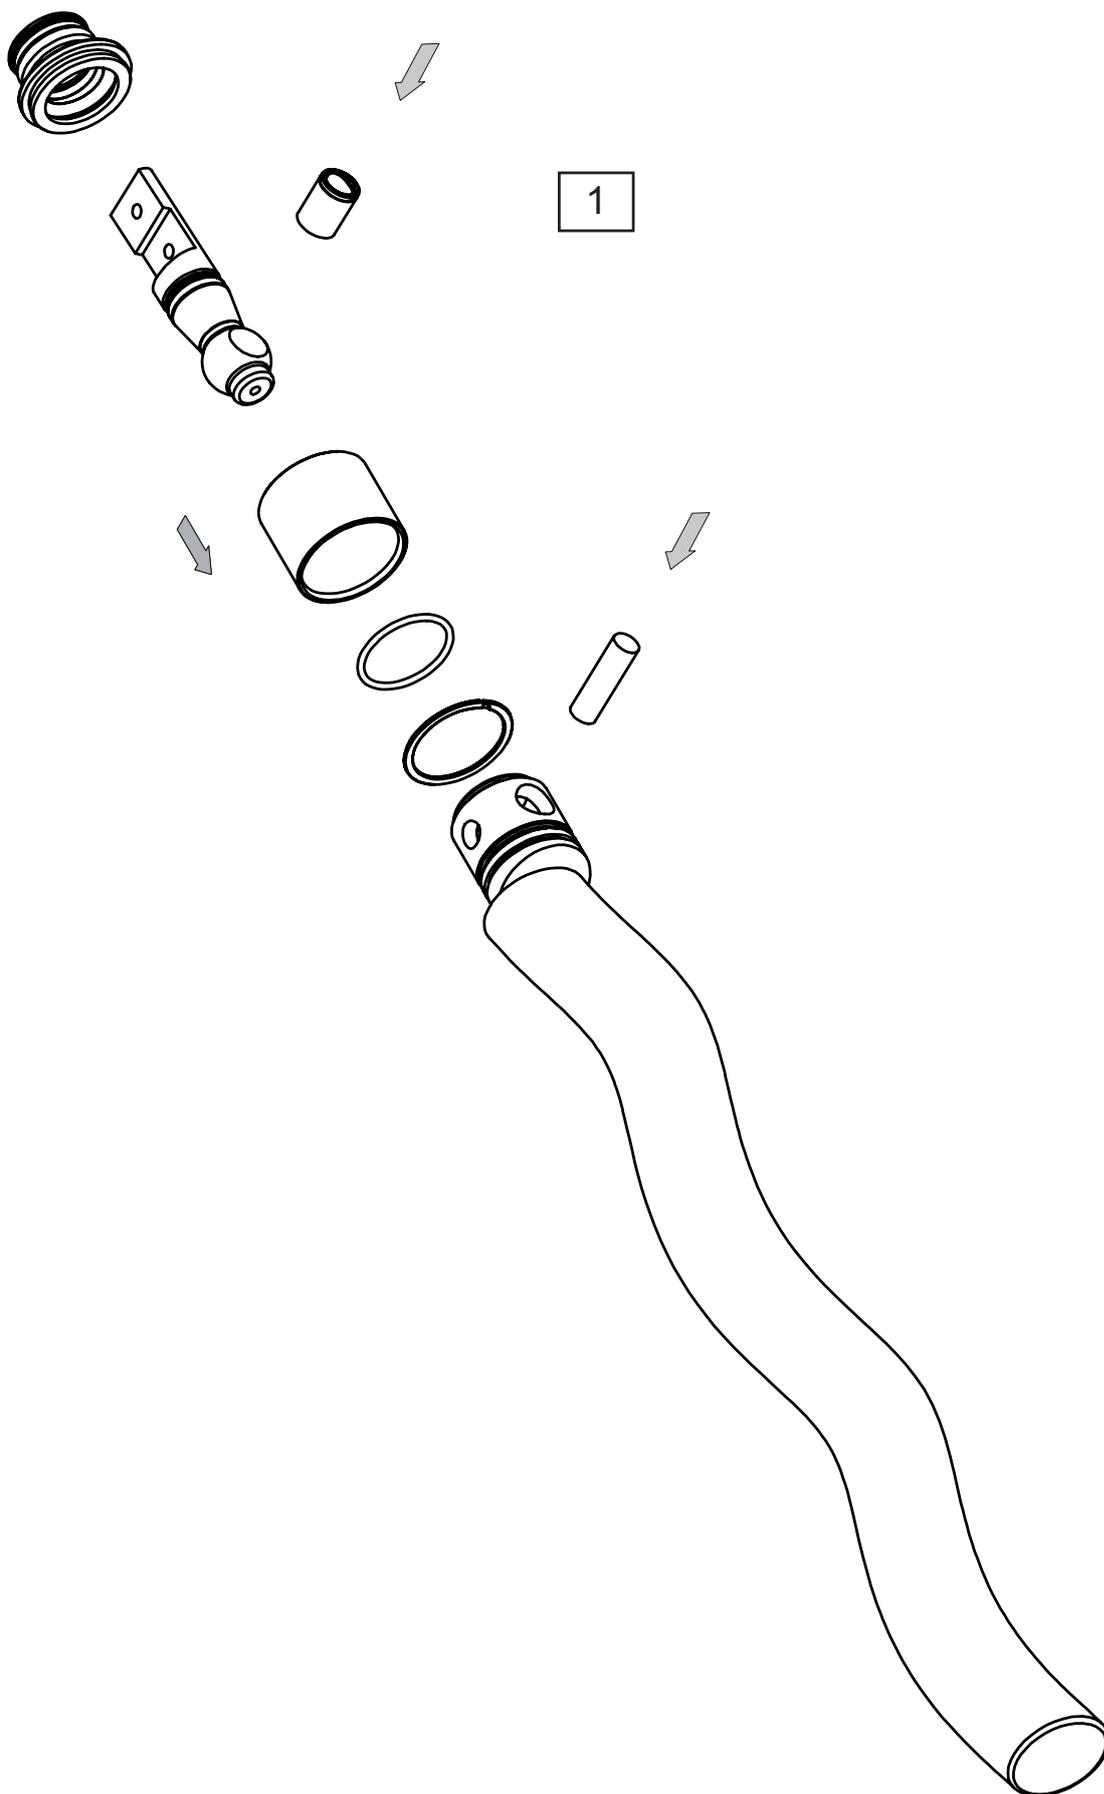



1313-01

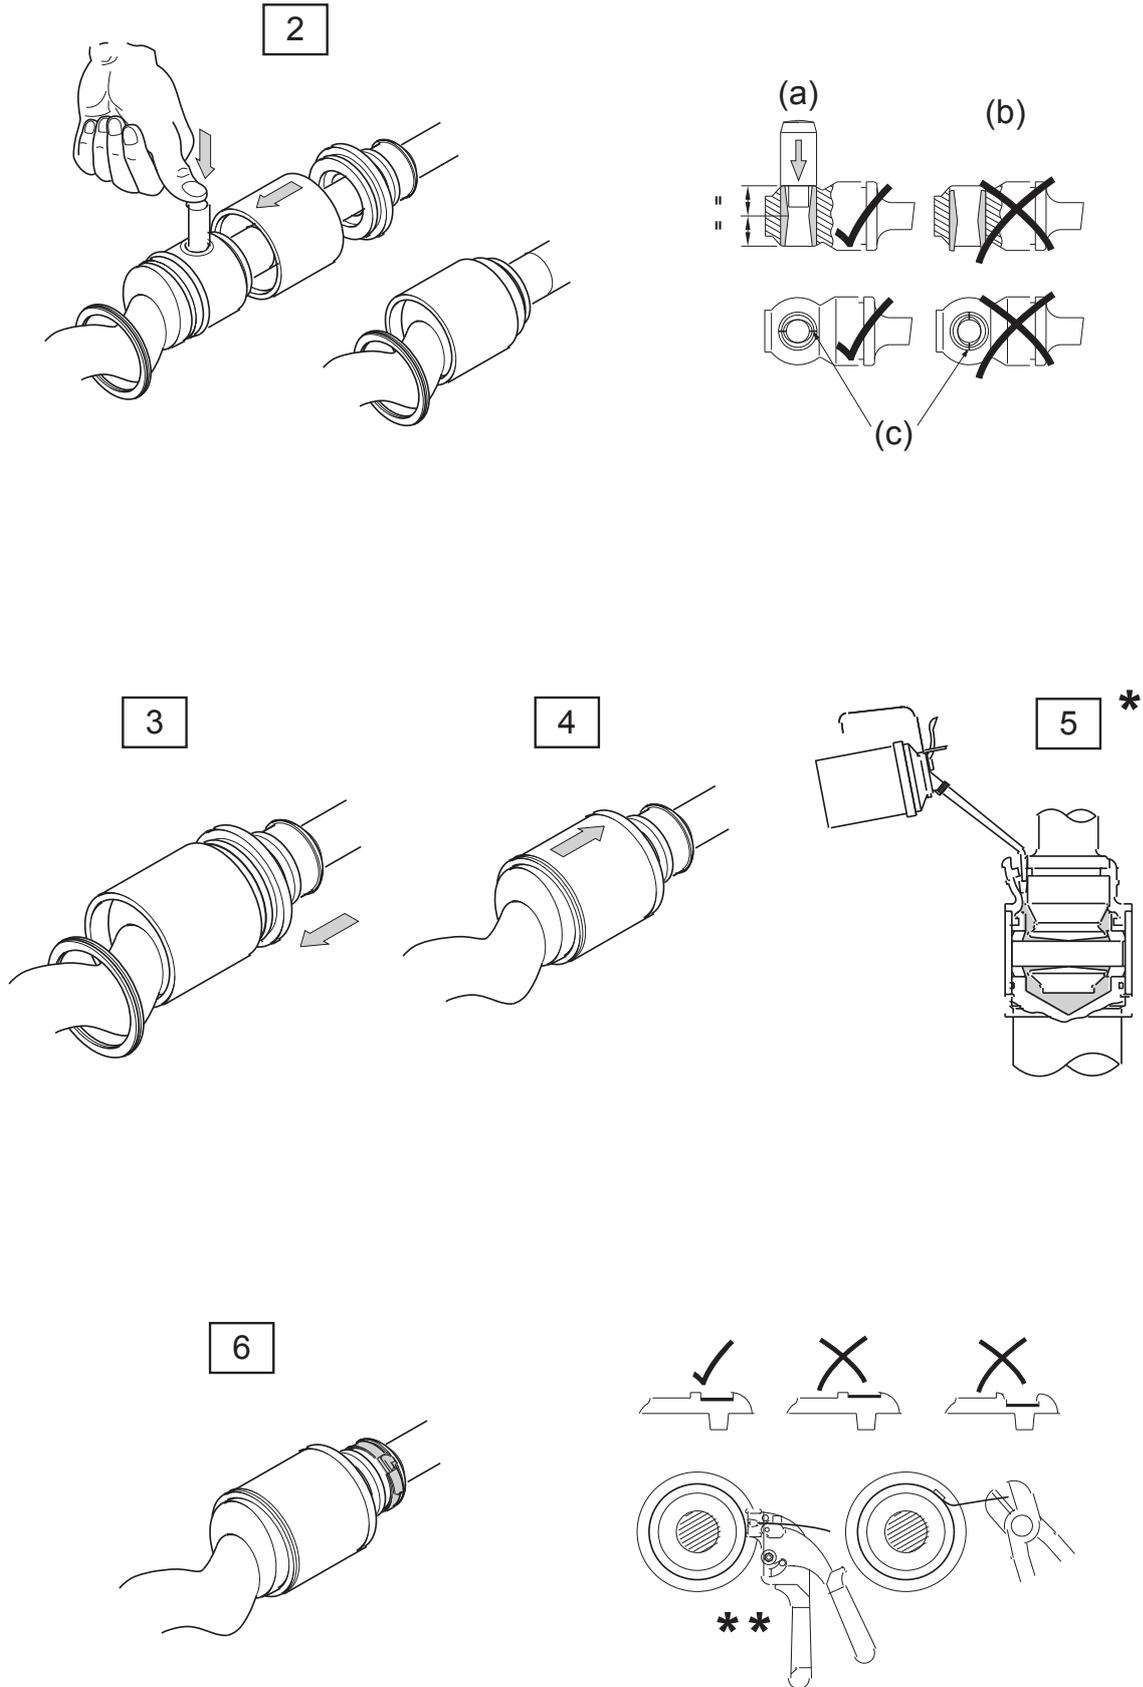


*Must be filled with oil in the vertical position.
 (a) Correct (b) Incorrect (c) Alignment marks

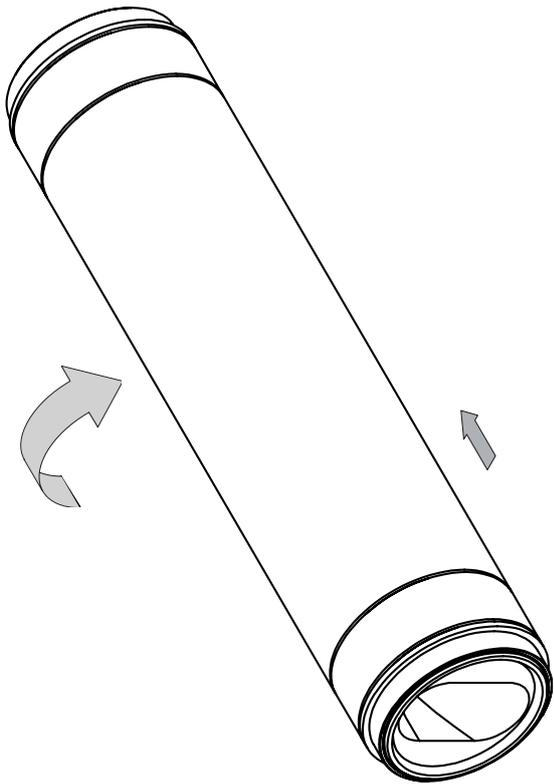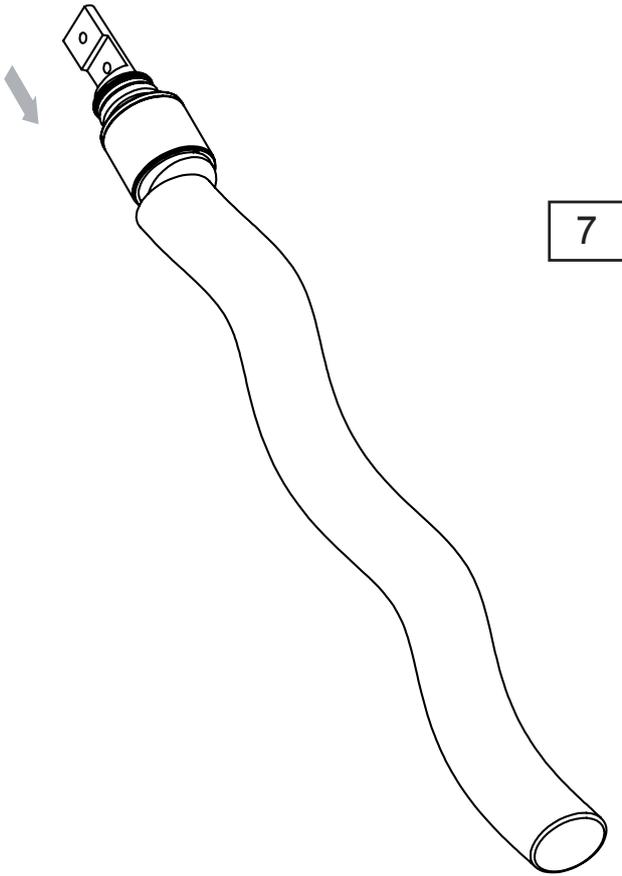

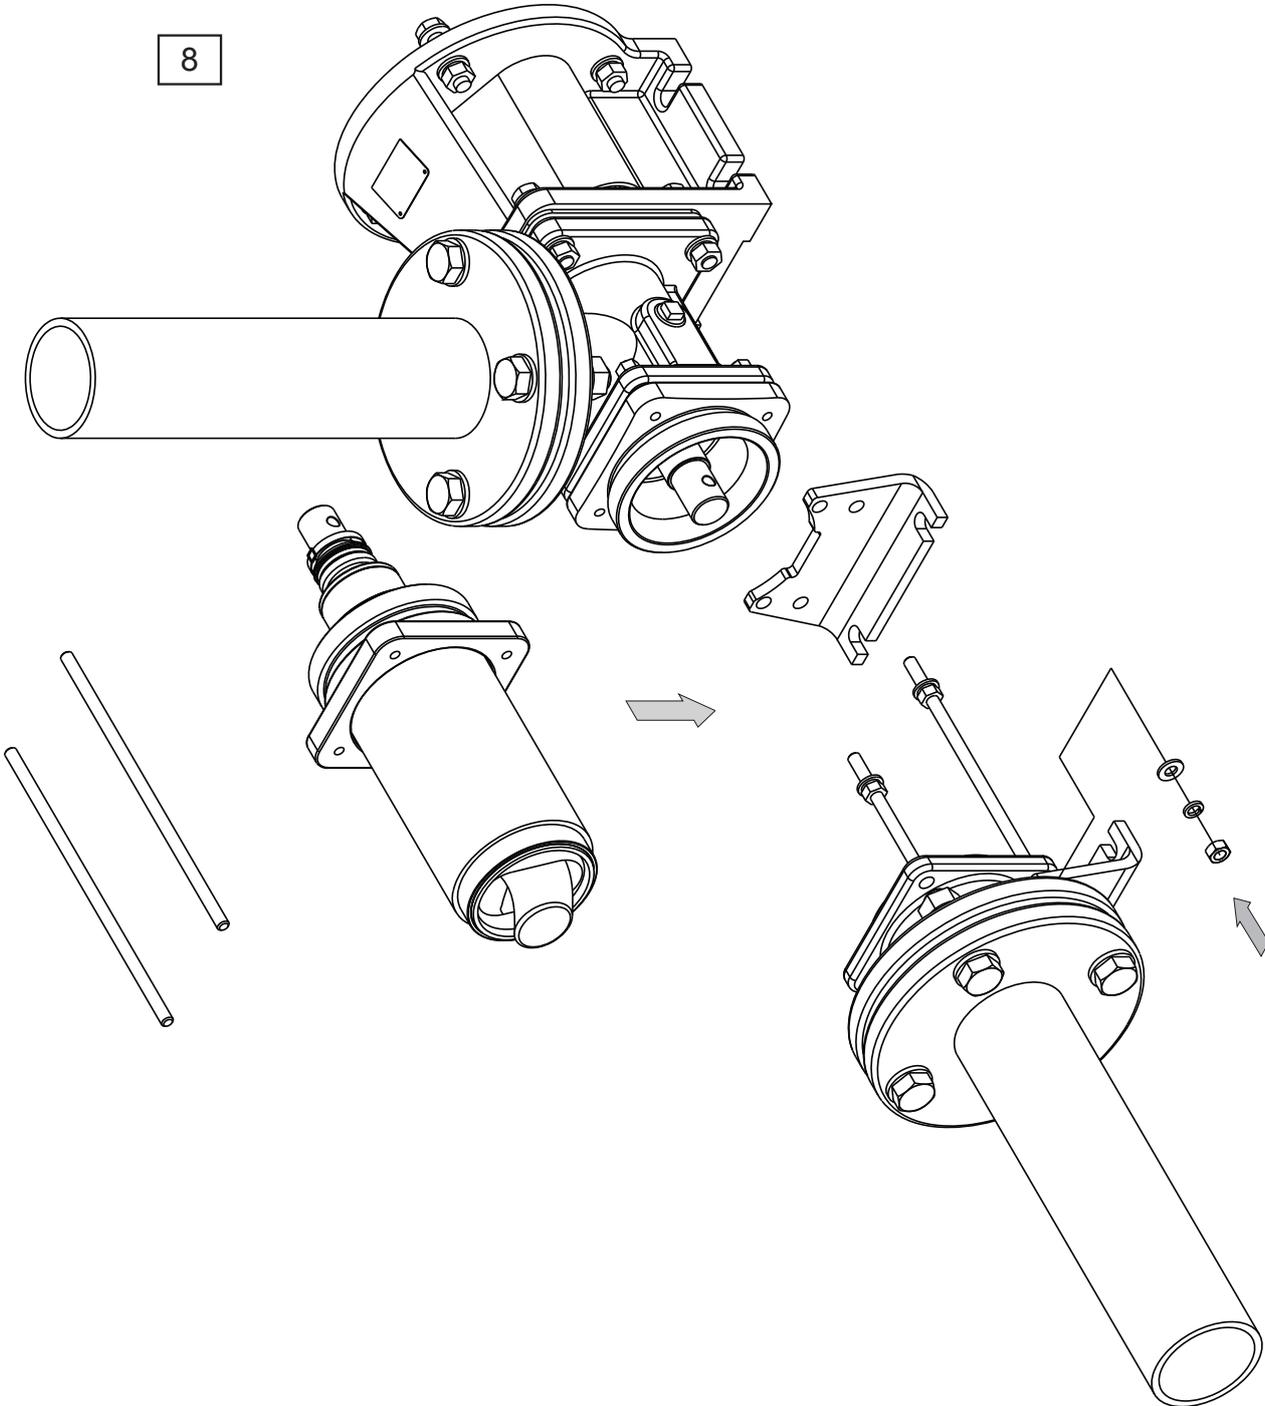

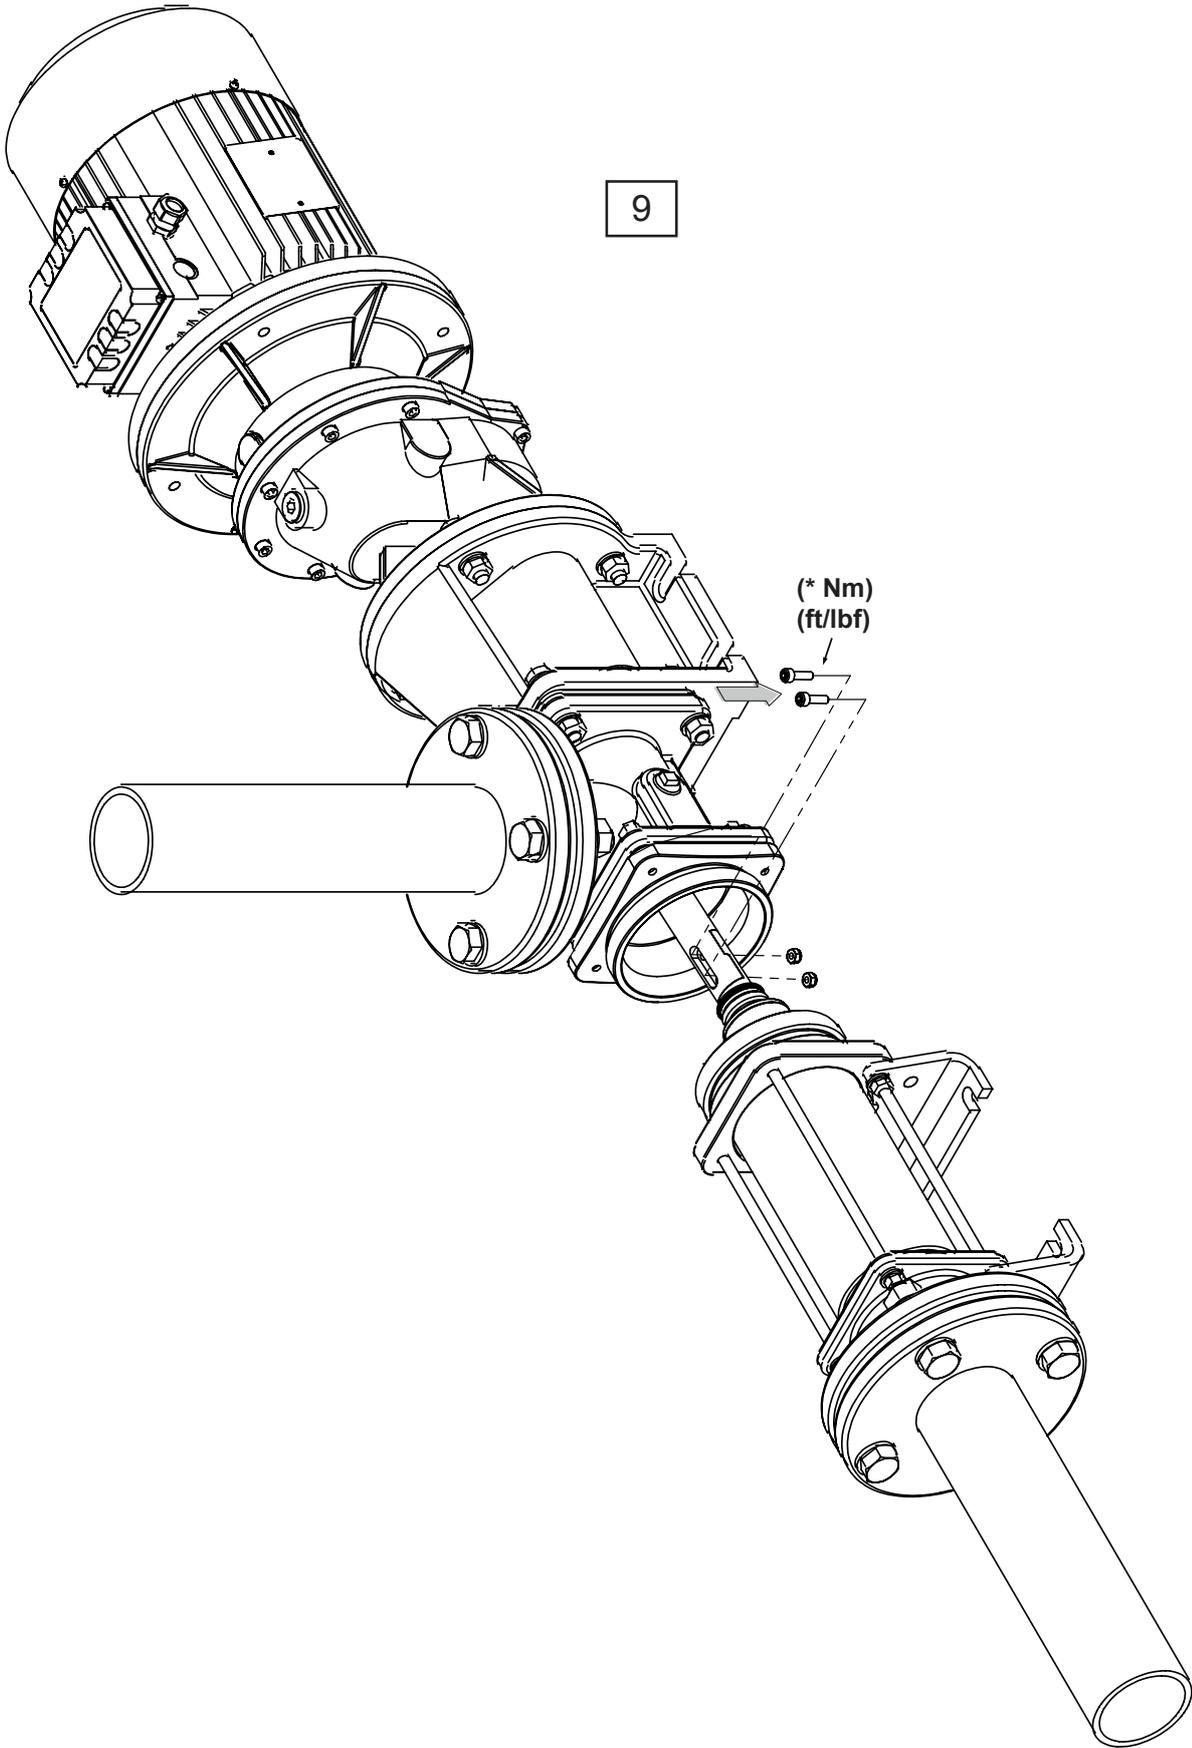


* Refer to torque settings table (Section 12, page 34)

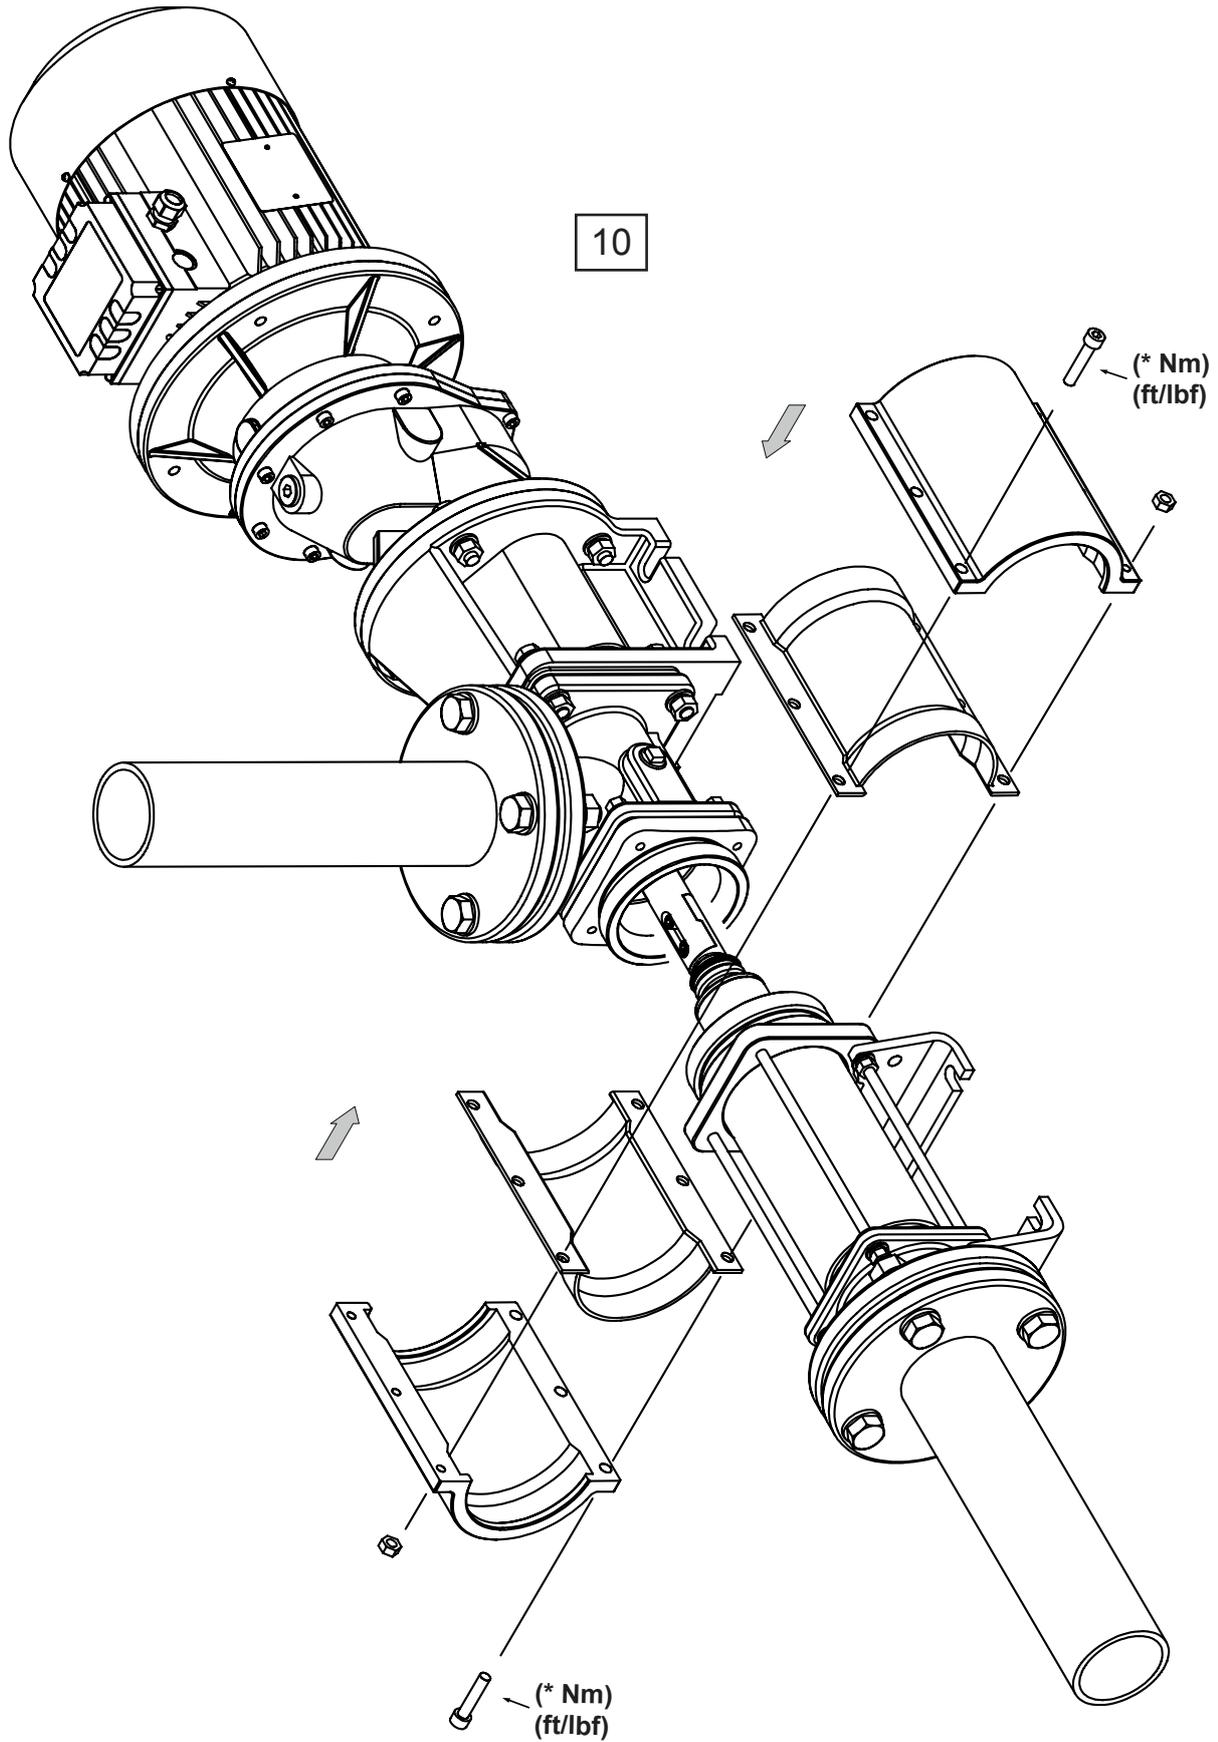

* Refer to torque settings table (Section 12, page 34)


16 Complete assembly procedure








16.1 M#1, M#2, M#L

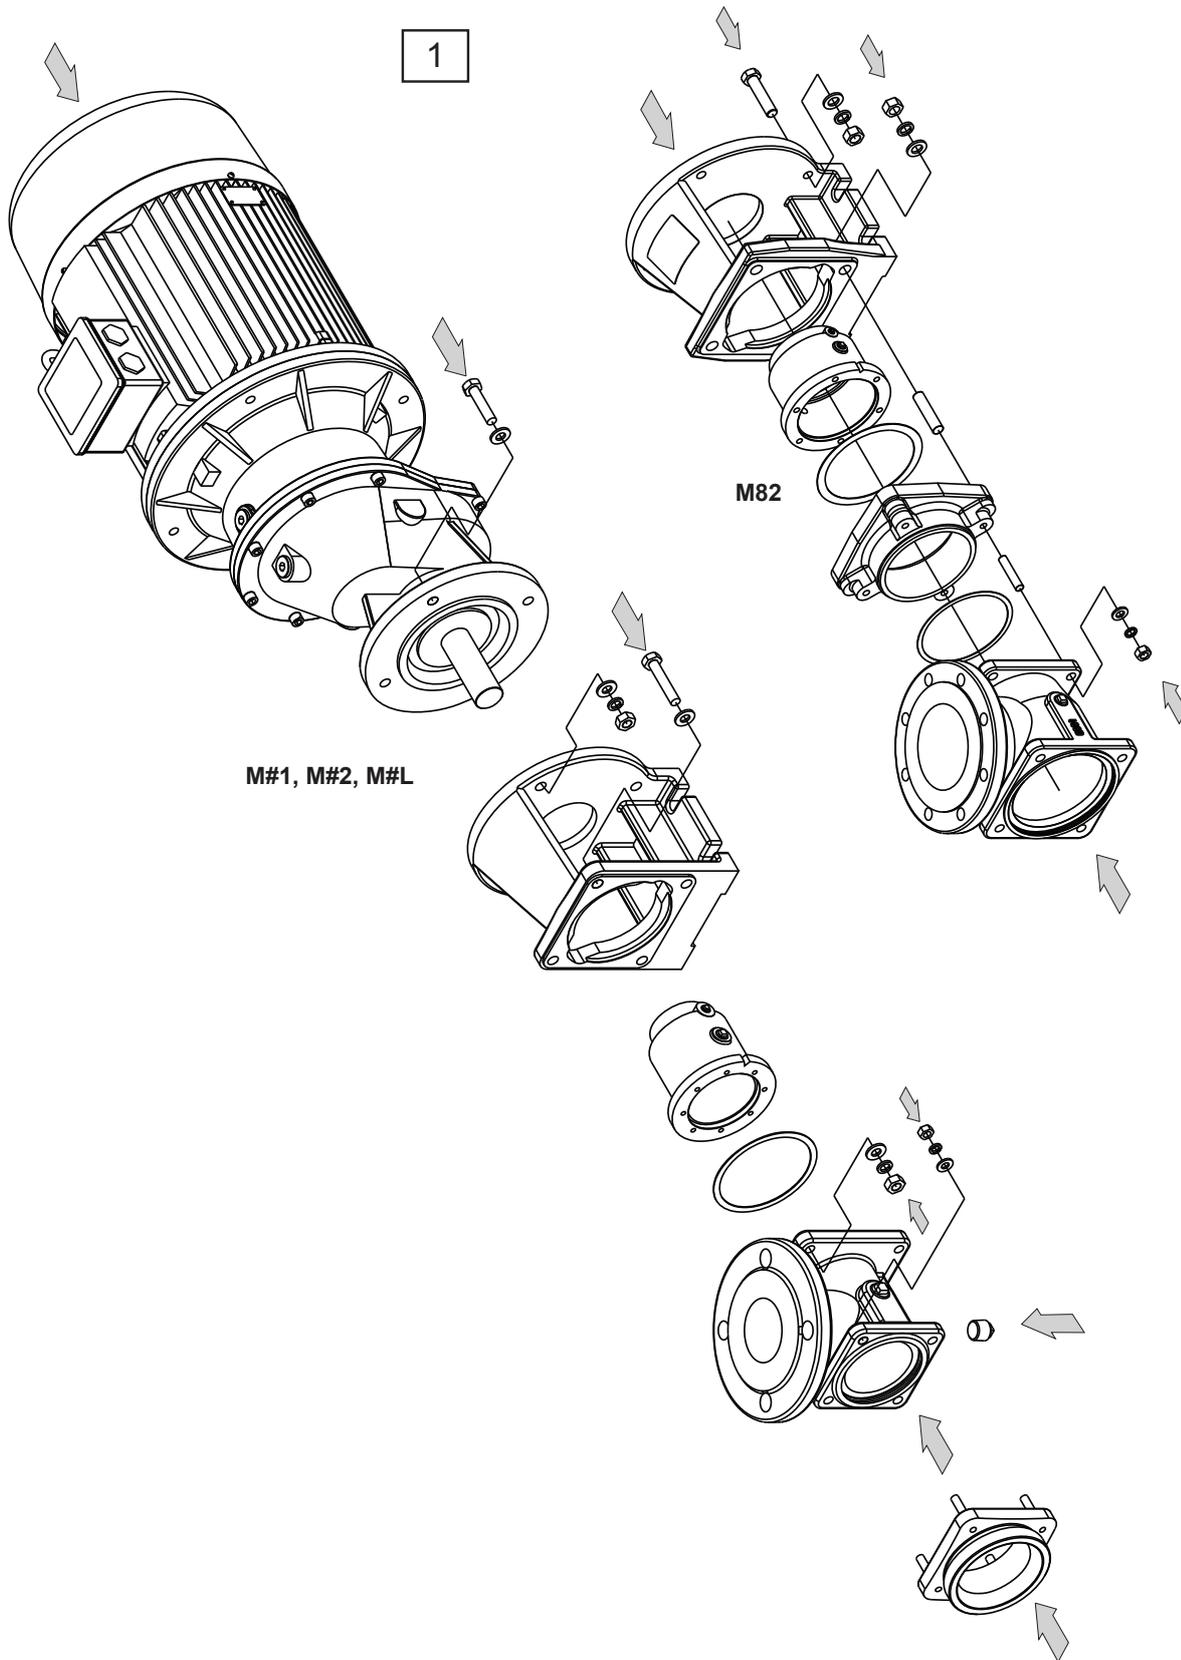


1542-00

* Refer to torque settings table (Section 12, page 34)

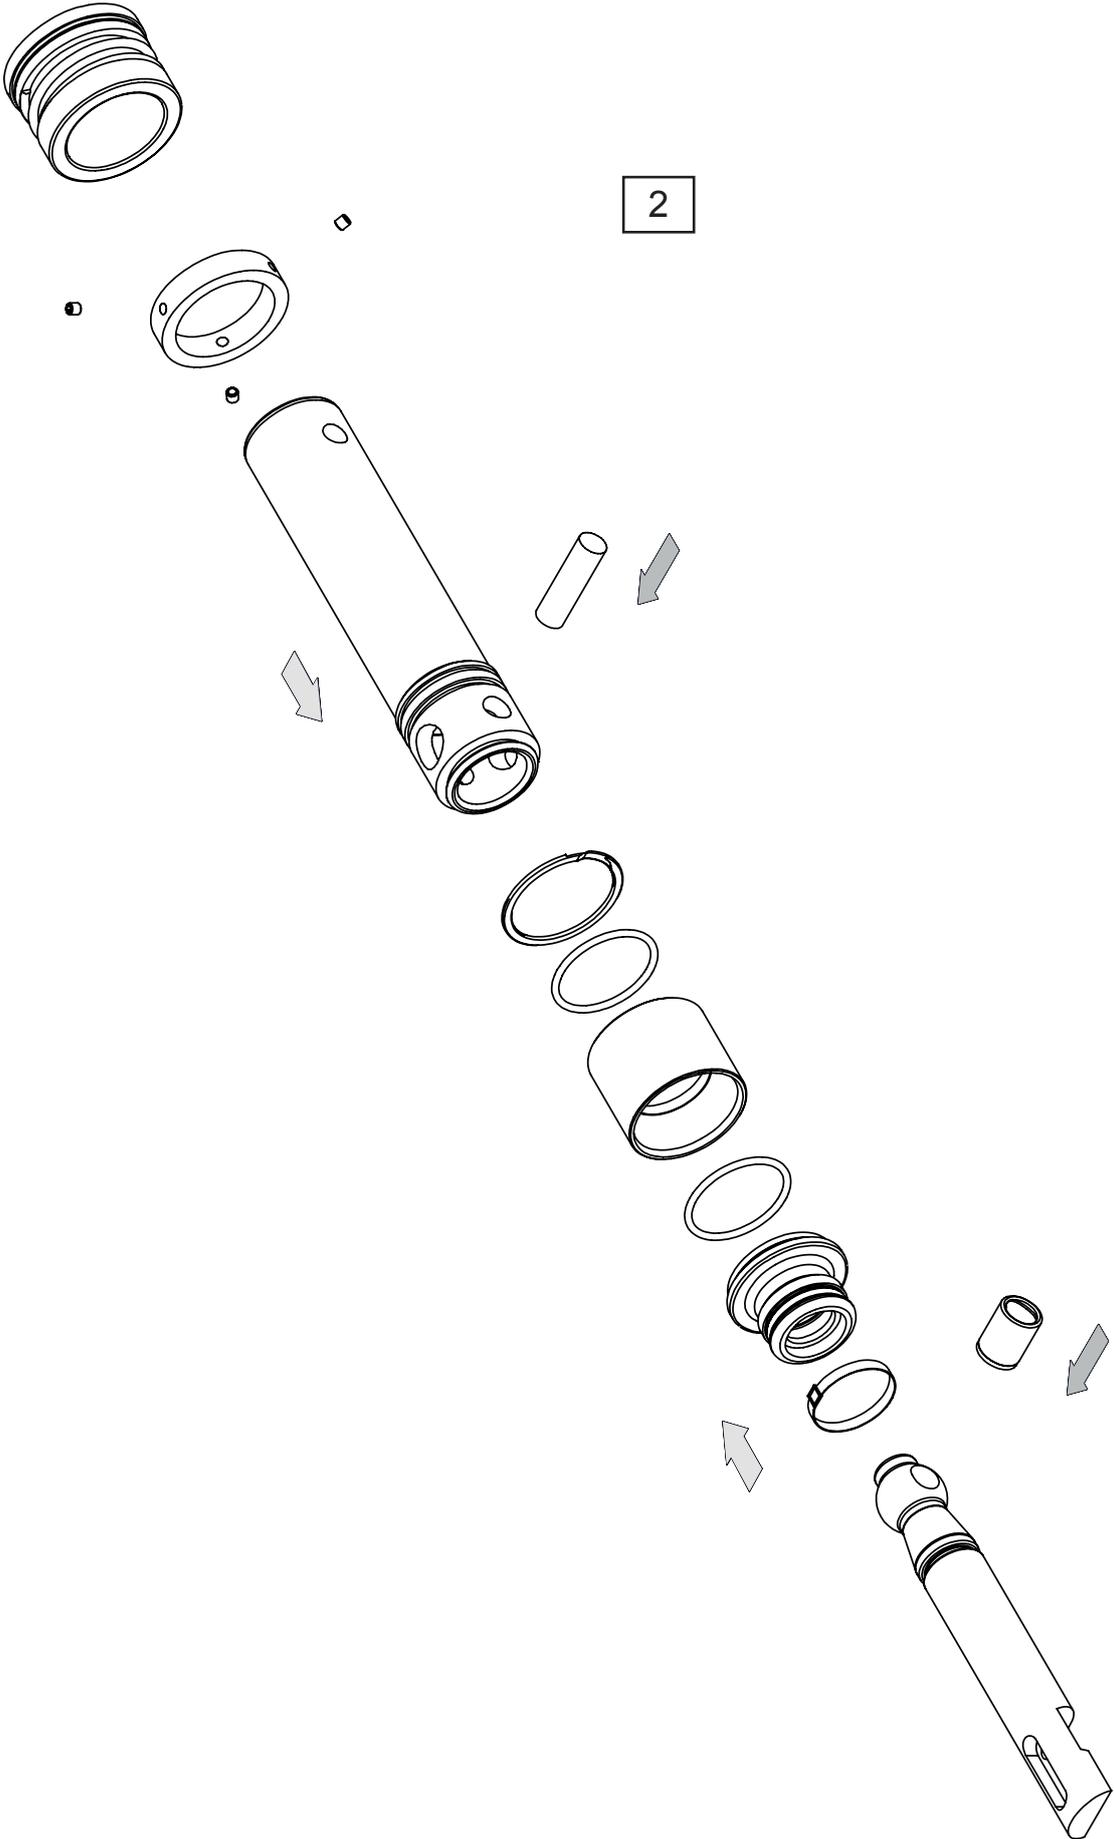

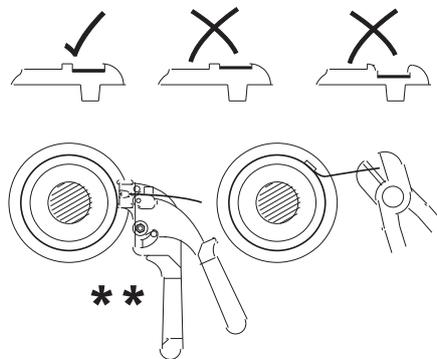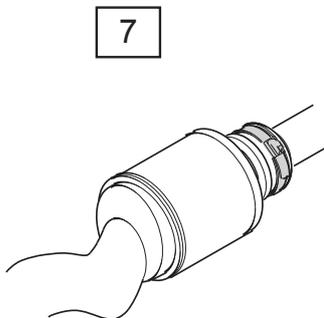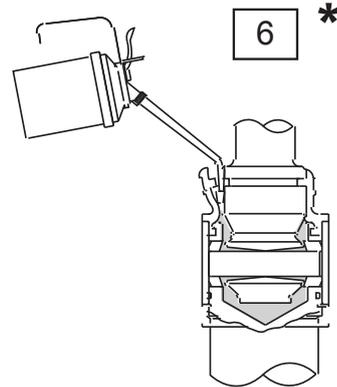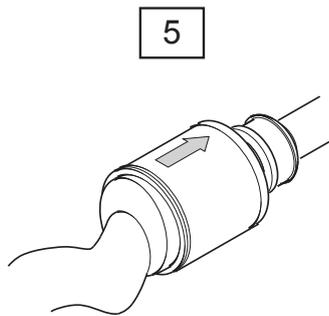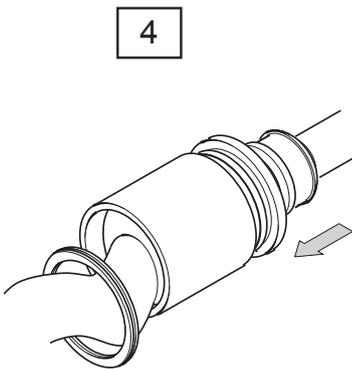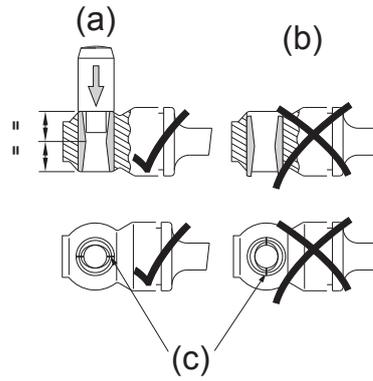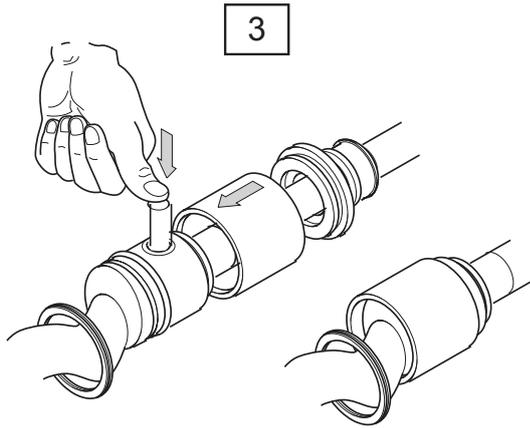

*Must be filled with oil in the vertical position.
 (a) Correct (b) Incorrect (c) Alignment marks

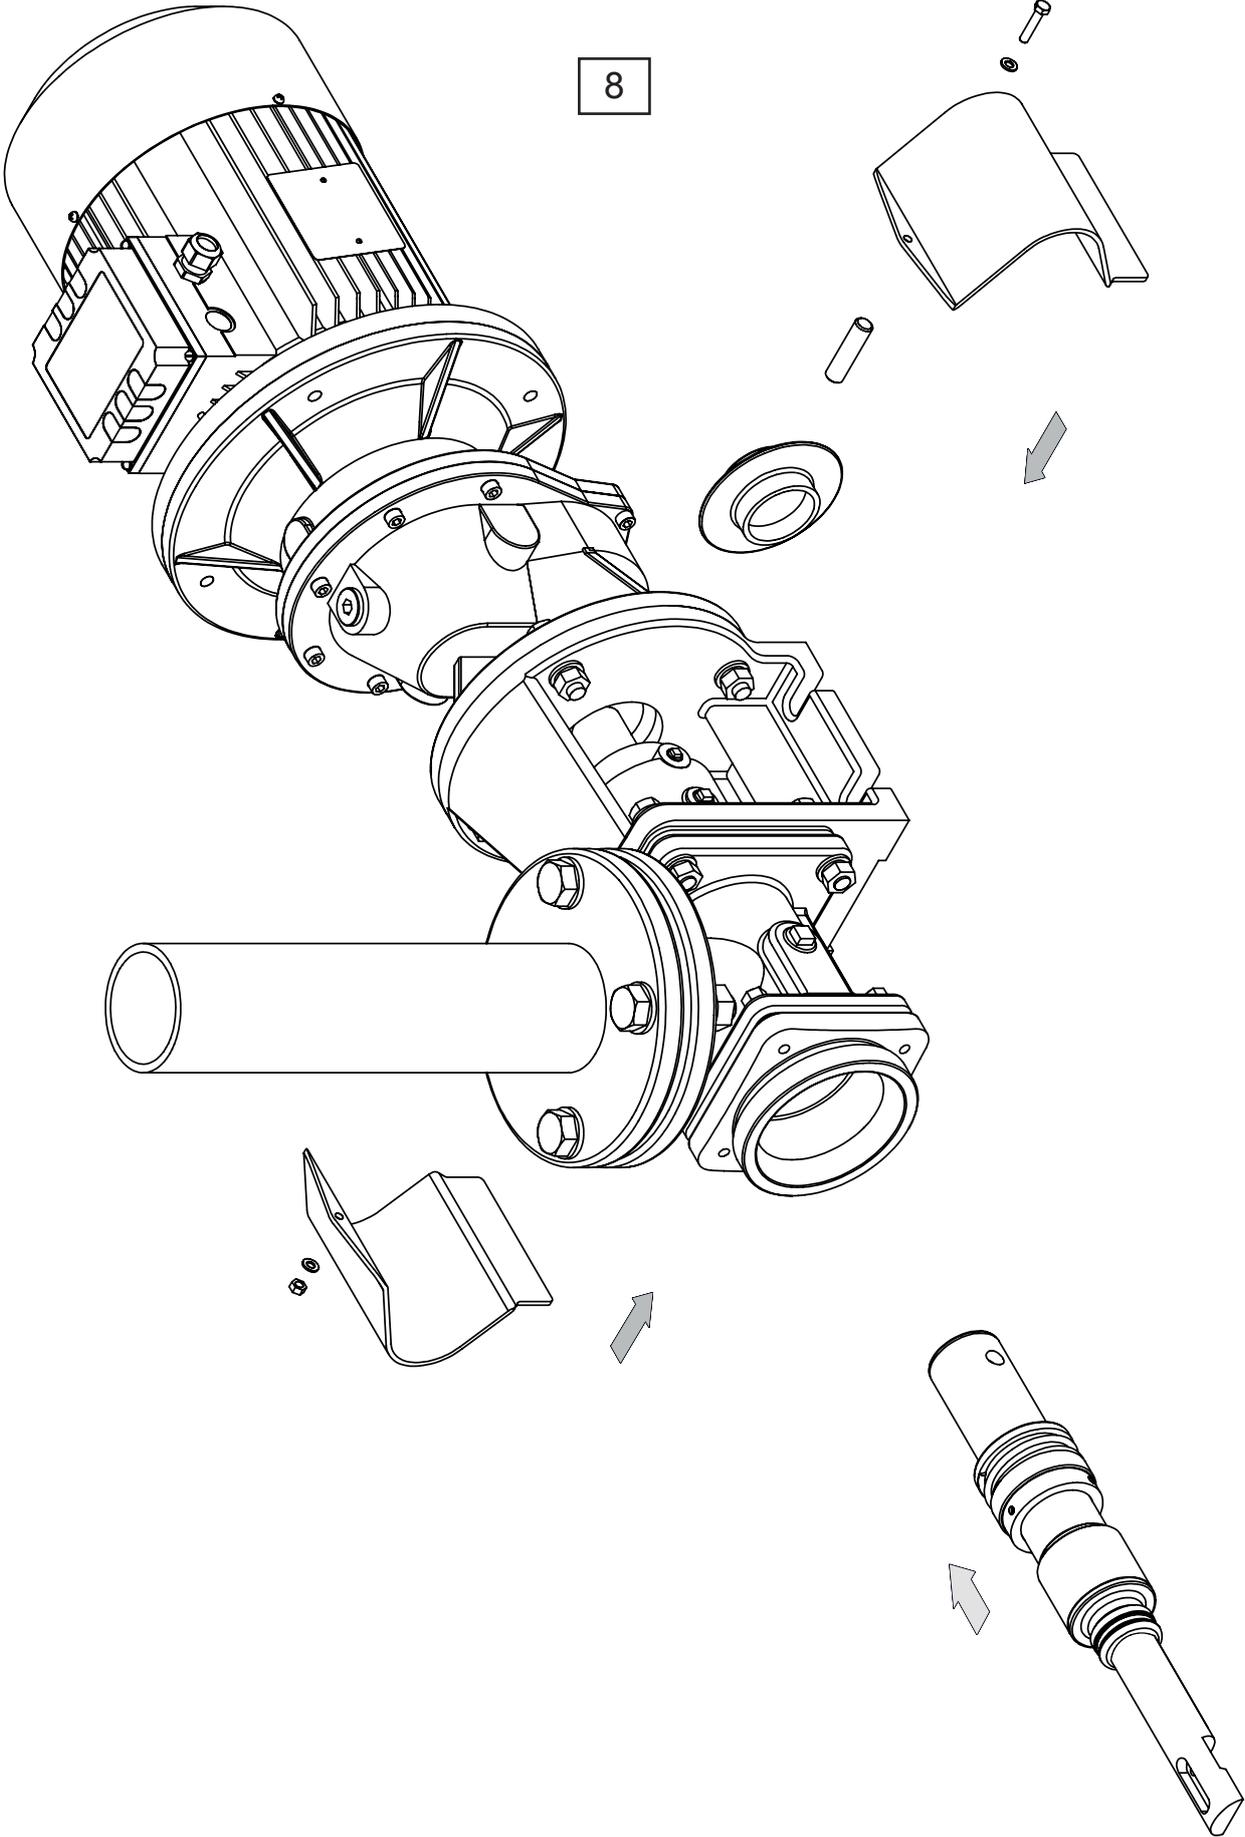

17 Pin joint lubrication

Model	Joint lubrication capacity per joint (ml approx.)	Non-food applications		Food applications
		Recommended	Suitable alternative	
M41 M42 M4L M51 M5L	22	KLUBERSYNTH GH6-460 OIL	MOBIL GEAR OIL SHC 320	KLUBEROIL 4 UHI 460
M44 M52 M61 M6L	45		MOBILITH SHC 007 SEMI-FLUID GREASE	
M54 M62 M71 M72 M7L M81 M8L	55		SHELL RETINAX CSZ	
M64 M82 M91 M92 M9L MA1 MAL	95		MOBIL GEAR OIL SHC 320	
M74 M84 MA2 MB1 MBL	175			

18 Recommended lubrication and service intervals


Components	Lubrication	Service comments
Pump drive joints	See section 17	Inspect and lubricate as necessary every 4000 operating hours.
Pump bearings (where fitted)	BP Energrease LC2 or Equivalent	Inspect and re-grease if necessary every 12 months.
Geared drivers (where fitted)	As recommended by the manufacturer	



Above service and lubrication intervals are for guidance only to ensure maximum component life. Pump will operate for considerably longer periods without attention depending on service conditions.

19 Setting lengths for mechanical seals

1298-00

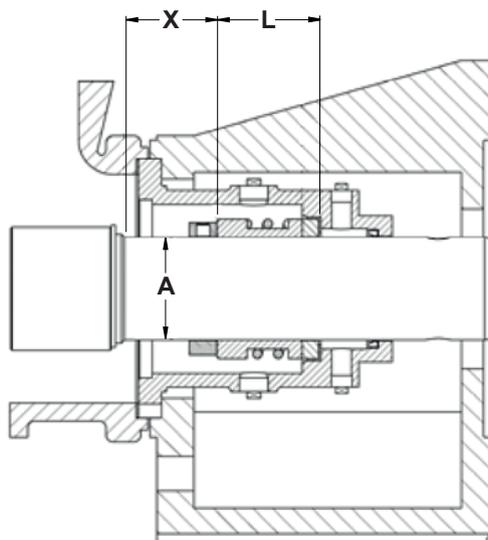

Pump size	Drive type	A Shaft diameter mm	Seal part no.	L Seal working length mm	X Setting distance mm
M41 M42 M4L M51 M5L	Pin joint	45	M045139G	45.0	41
M44 M52 M61 M6L	Pin joint	55	M055139G	47.5	34.5
M54 M62 M71 M72 M7L M81 M8L	Pin joint	65	M065139G	52.5	33.5
M64 M82 M91 M92 M9L MA1 MAL	Pin joint	85	M085139G	60.0	33.0
M74 M84 MA2 MB1 MBL	Pin joint	85	M085139G	60.0	58.0

NOTE

All seal working lengths are to DIN L1K dimensions. This table is not to be used for standard or DIN L1N working length seals. All seals use 'M' type seat except for 85 mm (3.35") which uses 'BS' type or 'M' type. This table is not necessarily compatible with any other seal type - please check with Sulzer.

