

Twist'n'brush™

POLYFOIL® TUBES WITH MBA™ APPLICATOR

A perfect match


The Twist'n'brush™ tube expertly combines Neopac's proven Twist'n'use™ system for single application with the extremely fine micro-bristle applicator from Sulzer Mixpac™. Twist'n'brush™ allows simple, precise and hygienic application for consumers. When the tube is turned, the inner pin is released and the content can be applied in a targeted manner.

Advantages


- Soft micro bristles allow for precise, hygienic and soft product application
- The Twist'n'brush™ is suitable for fluid and semi-solid contents
- Tamper-evident thanks to an inner pin
- No contamination of the content

Applications

- Skin care products, dermatology
- Wound treatments
- Nail and cuticle treatments
- Foot care
- Ears, nose, mouth and labial care
- Dental products
- Hair and scalp treatments
- Animal health
- Diagnosis

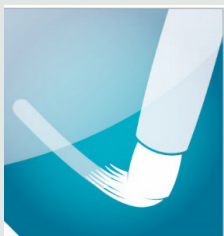

Track precision

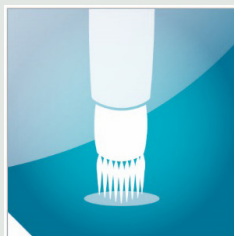

Dot precision




Targeted areas



Part of the Sulzer Group, Sulzer Mixpac AG and Geka GmbH propose innovative application systems with extremely delicate micro-bristles.

Microbristle Applicators (MBA™)

- Combine deposition and application
- Increase precision of application
- Increase dosage precision with simple devices
- Are hygienic and pure, using only pharma grades
- Avoid drawbacks of other application systems (fingers, cotton tips, nail brushes, spatulas...) such as lack of application precision and dosage, fibers detachment, poor hygiene, lack of sterility...

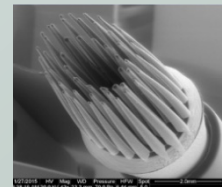

The Tube: Polyfoil® Premium Protection

(Technology and Trademark by Neopac)

- Protection against light
- Diffusion-tight
- Excellent moisture and oxygen barrier
- High impermeability to organic and chemical substances
- Corrosion-resistant
- High aesthetics due to all-around printing and restoring force

Various decoration possibilities

- Multi-sensory effects:
- Offset print, Silkscreen print, Hot stamping

Pharma compliance

Materials in contact with the product are compliant with the requirements for pharmaceutical primary packaging.

Quality Management

Our extensive quality management system guarantees the process reliability for continuous, high-level product quality.


Sulzer Mixpac AG
 Ruetistrasse 7
 9469 Haag, Switzerland
 +41 81 772 20 00
 mixpac@sulzer.com
 www.sulzer.com
 www.geka-world.com

In cooperation with:
 www.neopac.com




Materials & Availability


- Tube body: Polyfoil®
 Diameter: 10/13.5/16 mm
 Content: 1–13 ml
 Cap: PP
 Micro-bristle: Adaptor PP / bristles LDPE
- 42 micro bristles per applicator
 - density of bristles: 2,8 bristles / mm²
 - micro bristle surface area: 14,75 mm²

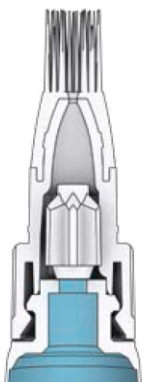

System closed

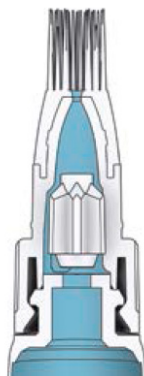

System open

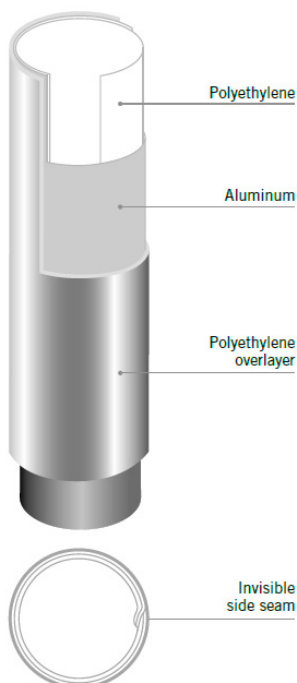

Polyethylene

Aluminum

Polyethylene overlayer

Invisible side seam