


---

## Leakage Control Type ABS CA 461

---

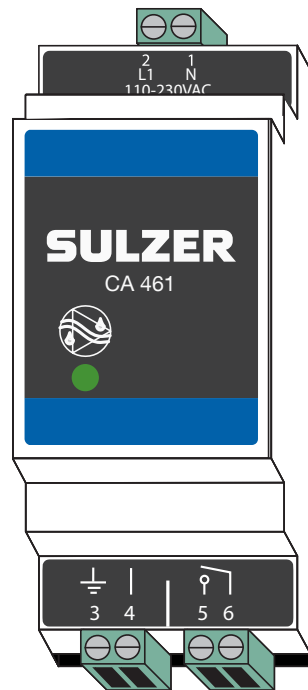

# Leakage control type CA 461

## Installation Guide

Copyright © 2019 Sulzer. All rights reserved.

This manual, as well as the software described in it, is furnished under license and may be used or copied only in accordance with the terms of such license. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Sulzer. Sulzer assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of Sulzer.


Sulzer reserves the right to alter specifications due to technical developments.

## 1 FUNCTION AND USAGE

CA 461 is a standalone leakage detection monitor for DIN rail mount.

### 1.1 Function

In case of water leakage, the resistance between the sensor electrode and housing will decrease. If the resistance becomes lower than 100k ohms ( $\pm 10\%$ ), the output goes active and contact on terminals 5 and 6 is closed. The signal has to be stable for 10 seconds before the output is activated.

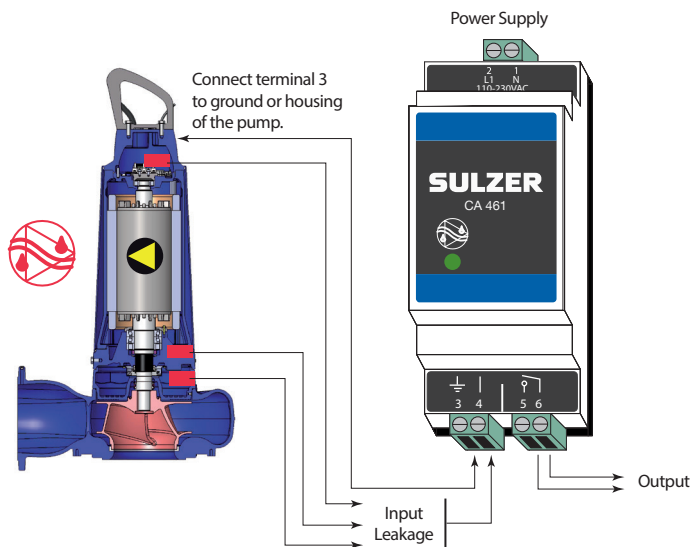

Terminal	Description
1	Power supply (N)
2	Power supply (L1)
3	Ground / Pump chassis
4	Input(s) from pump probe(s)/anode(s)
5	Output contact
6	Output contact (NO)

**Leakage:** Sensors must be in parallel.

It is very important to have in mind that this practice avoids alarms having to be distinguished. Sulzer highly recommends to use one module per signal to allow not only distinguishing but also acting in a different way according to the alarm category/severity.

**If the pump is operated from a motor drive or frequency converter, special precautions are required.**

The high electric noise level can distort electrical readings and in extension jeopardize functionality.

To avoid conducted electrical noise, follow best practices and manufacturer EMC compliance recommendations when installing frequency converters. Use shielded cables and 50 cm separation between power and signal cables. Ensure that the cables are also separated from each other in cabinets.


## 2 TECHNICAL DATA

### 2.1 Technical data CA 461

Leakage sensor voltage	12 VDC
Max sensor current	< 15 $\mu$ A
Leakage detection threshold	< 100 kohm
Alarm on delay	~10 seconds
Ambient operating temperature	-20 to +50 °C (-4 to +122 °F)
Ambient storage temperature	-30 to +80 °C (-22 to +176 °F)
Degree of protection	IP 20, NEMA: Type 1
Housing material	PC,PPO, and POM
Mounting	DIN Rail 35 mm
Humidity	0-95% RH non-condensing
Dimensions	H x W x D: 108 x 35 x 58 mm (4.25 x 1.38 x 2.28 in.)
Power supply	110-230 VAC, 50 Hz/60 Hz
Fuse	Max 10 A
Terminal wire size	Use copper (Cu) wire only. 0.2 - 2.5 mm <sup>2</sup> flexible core, stripped length 8 mm.
Power consumption	< 2 W
Max load output	250 VAC 3 Ampere
Altitude	Max 2000 MASL or 6562 ft. AMSL

**Attention** If the unit is used in a manner not described in this document the protection provided by the equipment may be impaired.


### 2.2 Dimensions

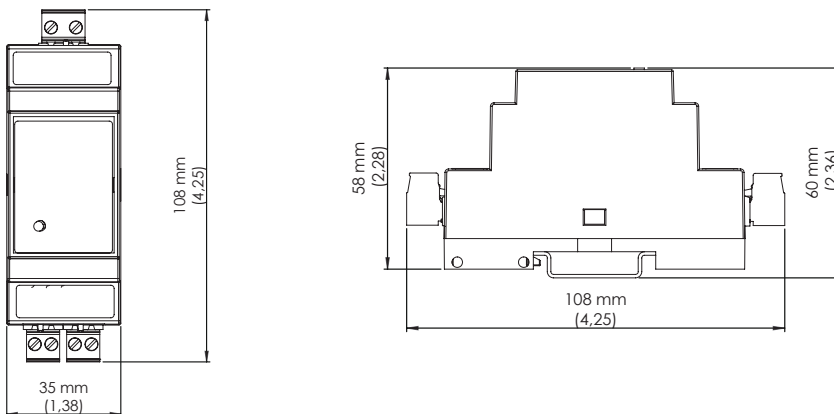

### 2.3 Cleaning

#### How to clean the unit

Power off the unit and only outside/front shall be cleaned by using a dry, soft cloth. A good choice would be the microfiber type of cloth. Gently wipe the CA 461 unit front in order not to scratch the overlay. If the dry cloth did not completely remove the dirt, do not press harder in an attempt to scrub it off. If necessary, moisten the cloth by adding a small amount of water with a thin solution of mild detergent and try again. Never use detergent with polish or solvent which can have an impact on the plastic surface.

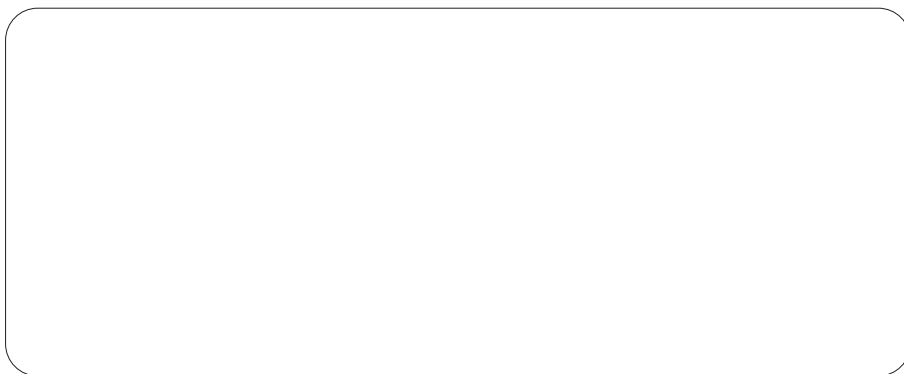

**SULZER**

Sulzer Pump Solutions (Kunshan) Co., Ltd, No.8 West Chenfeng Road, Kunshan, Jiangsu Province, 215300, China  
Tel. +86 512 36606388. [www.sulzer.com](http://www.sulzer.com)